

SupremeRAID™ User Guide for Linux

Jan. 2026



Copyright © 2021–2026 Graid Technology Inc. All Rights Reserved.

SupremeRAID™ is a registered trademark of Graid Technology Inc. All other trademarks and registered trademarks are the property of their respective owners.

Graid Technology reserves the right to make changes without further notice to any products or content herein to improve reliability, function, or design. Graid Technology makes no warranty as to the accuracy or completeness of the content or information provided herein, which are provided on an “as is” basis.

No license to Graid Technology's or any third party's intellectual property rights are conveyed hereunder.

Publication: January 23, 2026

TABLE OF CONTENTS

INTRODUCTION	9
Software Module Overview	9
SupremeRAID™ Linux Specification	10
RAID Components	11
Physical Drive (PD)	12
Drive Group (DG)	12
Virtual Drive (VD)	12
Controller (CX)	13
Features Overview	14
Ensuring Data Integrity with Consistency Checks	14
Dual-Controller Architecture for Auto-Failover and High- Availability	15
Setting Up the NVMe-oF Initiator Server and Managing Your RAID Components	16
Sharing the SupremeRAID™ Volume as a NVMe-oF Target Server	17
SPDK BDEV Interface Support of SupremeRAID™	18
Double Failure Protection with Distributed Journaling	19
SupremeRAID™ Graphical Management Console	19
Support for the Dataset Management (DSM) deallocate command on virtual drives	20
Enhancing Robustness with Error Retry Mechanism	20
INSTALLATION	21
Prerequisites	21
Installing the Hardware	22
ESD Warning	22
Installation Procedure	22
Installing the Software Driver	25
Using the Pre-installer and Installer	25
Using Installer for Silent Installation	30

Manual Installation	32
Dependency Table for Manual Installation	32
Executing the Installer and Completing the Installation	44
Uninstalling the Software Driver.....	47
Setup Graphical Management Console	48
Install the Graphical Management Console Service	48
Setup the port and IP.....	50
USING THE SUPREMERAIID™ DRIVER.....	51
Activating the SupremeRAID™ Driver and Managing the License(s).....	52
Creating a RAID5 Virtual Drive with Five NVMe SSDs.....	54
Creating a RAID6 Drive Group without Journal Space.....	55
Modifying Journal Mode on a RAID5 Drive Group.....	56
Creating a Physical Drive from the Remote NVMe-oF Targets	57
Replace the Nearly Worn-out or Broken SSD.	58
Exporting the Virtual Drive as an NVMe-oF Target Drive Using RDMA to the Initiator.....	60
Setting Up the Dual-Controller to Enable HA and Auto-Failover	61
Upgrading the Software.....	63
Silent Upgrade to Driver 1.7	63
Silent Upgrade to Driver 2.0	64
Manual Upgrade to Driver 1.7	66
Manual Upgrade to Driver 2.0	68
Replacing a SupremeRAID™ Card.....	73
COMMANDS AND SHORTCUTS.....	76
Syntax	76
Command and Subcommand Quick Reference	77
General.....	77
Resources.....	77
Features	79
Managing Licenses	81

- Applying the License81
- Checking License Information82
- Checking the SupremeRAID™ Driver Version.....84
- Viewing Host Drive Information85
 - Listing NVMe Drives.....85
 - Listing SAS/SATA Drives87
- Managing Physical Drives88
 - Creating a Physical Drive88
 - Listing the Physical Drives90
 - Deleting a Physical Drive.....93
 - Describing a Physical Drive.....94
 - Locating a Physical Drive94
 - Marking a Physical Drive Online or Offline.....95
 - Assigning a Hot Spare Drive95
 - Replacing a Nearly Worn-Out or Broken SSD.....95
- Managing Drive Groups.....97
 - Creating Drive Groups.....97
 - Deleting Drive Groups 101
 - Displaying Drive Group Information..... 101
 - Selecting the Controller for a Drive Group..... 104
 - Assigning a Controller to a Drive Group..... 104
 - Managing Background Task Speed 105
 - Locating the Physical Drives in the Drive Group..... 105
 - Degradation and Recovery..... 105
 - Rescue Mode 105
- Managing Virtual Drives106
 - Creating a Virtual Drive..... 106
 - Listing Virtual Drives 107
 - Deleting Virtual Drives..... 110

Displaying Virtual Drive Information	111
Setting Up a Stripe Cache	111
Managing Controllers	113
Activating a Controller	113
Deactivating a Controller	113
Listing Controllers	114
Display Controller Information	114
Deleting a Controller	115
Replacing a Controller License Key	116
Importing and Controlling MD Bootable NVMe RAID1	117
Importing an MD Bootable NVMe RAID	117
Replacing an MD Bootable NVMe RAID1	118
Dismissing an Imported MD Bootable NVMe RAID1	119
Adjusting or Updating Configuration Settings for the SupremeRAID™ Add-on	120
Editing Configuration Settings	120
Describing Configuration Settings	120
Deleting Configuration Settings	121
Restoring SupremeRAID™ Configuration Settings	122
Managing Events	124
Listing Events	124
Deleting Events	125
Managing NVMe-oF Remote Targets	125
Connecting to a NVMe-oF Remote Target	125
Listing Connected NVMe-oF Remote Targets	126
Disconnecting from NVMe-oF Remote Targets	127
Managing NVMe-oF Export Target	128
Creating the NVMe-oF Export Target Port Service	128
Exporting the Virtual Drive via NVMe-oF Export Targets	129
Listing Created NVMe-oF Export Targets	130

- Deleting the NVMe-oF Export Target Port Service 131
- Unexporting the Virtual Drives form NVMe-oF export Targets 131
- Managing NVMe-oF Export Target (SPDK) 133
 - Guidelines 133
 - Preparing the Environment 133
 - Enabling HugePages..... 133
 - Allocating HugePages..... 134
 - Enabling the Integrated SPDK Service 135
 - Creating PDs, DGs, and VDs 135
 - Enabling SPDK Mode 136
 - Creating SPDK NVMe-oF Export Targets..... 136
 - Exporting Virtual Drives to SPDK NVMe-oF Export Targets 137
 - Listing Created SPDK NVMe-oF Export Targets 137
 - SPDK Log Files..... 138
- Using Consistency Checks to Ensure Data Integrity 139
 - Starting Consistency Checks Manually 139
 - Stopping Consistency Check 141
 - Scheduling Consistency Checks 141
 - Viewing Consistency Check Information 142
 - Setting the Consistency Check Policy 142
 - Excluding Drive Groups from the Consistency Check Policy 143
- ADDITIONAL FUNCTIONS 144**
 - Configuring Boot-Drive Devices..... 145
 - Procedure for CentOS 146
 - Procedure for Ubuntu..... 149
 - Procedure for SLES 15 SP2, and SP3 155
 - Manually Migrating the RAID Configuration Between Hosts..... 158
 - Restoring a RAID Configuration from a Backup Configuration File 158
 - Restoring a RAID Configuration from SSD Metadata 159

Restarting the SupremeRAID™ Service After Upgrading the System Kernel 161

Obtaining SMART Information from Devices 162

Monitoring System Input/Output Statistics for Devices Using iostat..... 165

 sysstat Versions v12.3.3 and Later..... 165

 sysstat Versions Prior to v12.3.3 167

Setting Up the Auto-mount File Systems on Linux Using the SupremeRAID™ Driver 169

ESXi Virtual Machine Support Using GPU Passthrough 172

 Configuring Hosts for NVIDIA GPU Device Passthrough 172

 Configuring Virtual Machines 173

Using Self-Encrypting Drives (SEDs) 176

 Guidelines for Configuring an SED Drive..... 176

 Importing SED Keys 176

 Creating Physical Drives with SED Support..... 177

 Creating Physical Drives with SED Unlock Script..... 178

 Secure Erasing Physical Drives (PDs)..... 179

 Displaying SED Key Information..... 180

 Deleting SED Keys..... 180

 Rotating SED Keys..... 180

Mail Notification Service..... 181

Drive Copyback – Controlled Data Migration for Drive Replacement..... 183

 Guidelines for Drive Copyback..... 183

 Starting a Copyback 183

 Stopping a Copyback..... 184

 Editing a Copyback Speed..... 184

TROUBLESHOOTING..... 185

 Sequential Read Performance is Not as Expected on a New Drive Group..... 185

 Kernel Log Message "failed to set APST feature (-19)" Appears When Creating Physical Drives 185

 Decoding LED Patterns on the Backplane..... 186

Received "The arch of the controller and SupremeRAID™ software mismatched" Message
When Applying License 186

SupremeRAID™ Service Fail to Start 189

SAFETY INFORMATION 190

 English Version 190

 Chinese Version 191

 Chinese Version (TC) 192

ATTACHMENTS..... 195

 Events for SupremeRAID™ 195

INTRODUCTION

SupremeRAID™ is the most powerful, high-speed data protection solution specially designed for NVMe SSDs. SupremeRAID™ driver installs a virtual NVMe controller onto the operating system and integrates a high-performance, GPU-base PCIe RAID card into the system to manage the RAID operations of the virtual NVMe controller.

This document explains how to install the SupremeRAID™ software package for Linux and how to manage the RAID components using the command-line interface.

Software Module Overview

The SupremeRAID™ Software module has the following major components:

- `graidctl` — The command-line management tool.
- `graid_server` — The management daemon that handles requests from `graidctl` to control the driver.
- `graid.ko` — The driver kernel module.
- `graid_core` — The instance that manages the GPU.
- `graid-mgr` — The management daemon provides the management GUI and API functions.


SupremeRAID™ Linux Specification

SupremeRAID™ Linux Driver Specifications	
Supported models:	SR-1000, SR-1010, SR-1001 SR-CORE-AM, SR-PRO-AM, SR-ULTRA-AD
Supported RAID levels:	RAID 0, 1, 5, 6, 10
Recommended minimum drive number for each RAID level:	RAID 0 : at least one drives RAID 1 : at least two drives RAID 5 : at least three drives RAID 6 : at least four drives RAID 10 : at least two drives
Maximum number of physical drives:	32
Maximum number of drive groups:	8
Maximum number of virtual drives per drive group:	1,023
Maximum size of the drive group:	Defined by the physical drive sizes
Configurable strip size (RAID0, RAID10)	4k, 8k, 16k, 32k, 64k, 128k

RAID Components

SupremeRAID™ has four major RAID logical components:

- Physical Drive (PD)
- Drive Group (DG)
- Virtual Drive (VD)
- Controller (CX)

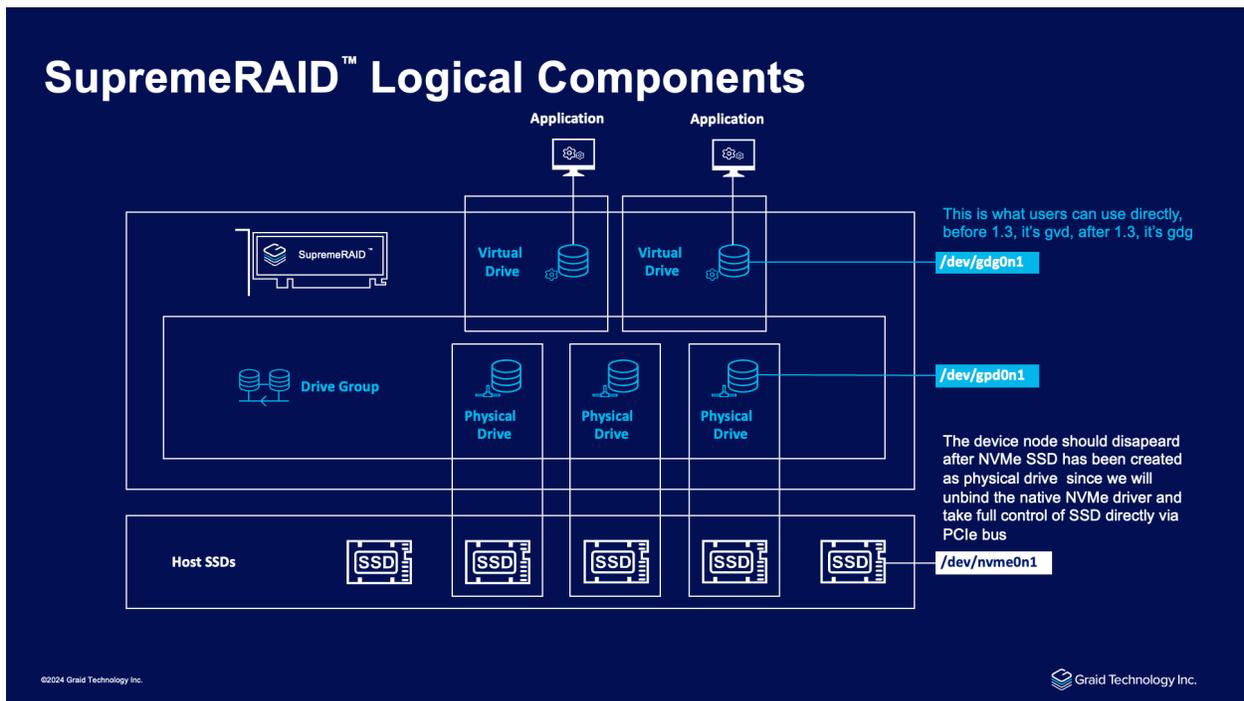

Physical Drive (PD)

Since NVMe drives are not directly attached to the SupremeRAID™ controller, you must tell the controller which SSDs can be managed. After an SSD is created as a physical drive, the SupremeRAID™ driver unbinds the SSD from the operating system, meaning the device node (`/dev/nvmeX`) disappears and is no longer accessible. At the same time, the SupremeRAID™ driver creates a corresponding device node (`/dev/gpdX`). You can check the SSD information, such as SSD model or SMART logs, using this device node. To control and access the SSD using `/dev/nvmeXn1`, you must first delete the corresponding physical drive.

SupremeRAID™ supports 32 physical drives, regardless of whether the physical drives are created from a native NVMe SSD, a drive connected through NVMe-oF, or a SAS/SATA disk.

Drive Group (DG)

The main component of RAID logic is a RAID group. When the drive group is created, the SupremeRAID™ driver initializes the physical drives with the corresponding RAID mode to ensure that the data and parity are synchronized.

There are two types of initialization processes.

- **Fast Initialization:** When all the physical drives in the drive group (DG) support the de-allocate dataset management command, the SupremeRAID™ driver performs fast initialization by default, which optimizes the drive group state immediately.
- **Background Initialization:** Performance is slightly affected by the initialization traffic, but you can still create the virtual drive and access the virtual drive during a background initialization.

SupremeRAID™ supports eight drive groups, with a maximum of 32 physical drives in one drive group.

Virtual Drive (VD)

The virtual drive is equivalent to the RAID volume. You can create multiple virtual drives in the same drive group for multiple applications. The corresponding device node (`/dev/gdgXnY`) appears on the operating system when you create a virtual drive, and you can make the file system or running application directly on this device node. Currently, the SupremeRAID™ driver supports a maximum of 1023 virtual drives in each drive group.

Controller (CX)

The controller is the core component of the RAID system. It provides detailed hardware information such as GPU serial number, temperature, and fan speed. RAID management relies on the controller, so the controller's state directly affects the underlying drive group operations.

In the Linux driver, users can have dual controllers in the system and manage them separately. By enabling the high-availability function in a drive group, the backup controller will take over drive group management if the primary controller fails or goes missing. Additionally, you can set up drive groups on a specified controller or within the same NUMA node as the controller to minimize negative influences.

Note: If you upgrade from version 1.2.x to version 1.6.x of the SupremeRAID™ driver, the device path changes from `/dev/gvdXn1` to `/dev/gdgXnY`.

Features Overview

The SupremeRAID™ presents a range of features that facilitate convenient data storage methods and incorporate diverse protection mechanisms to ensure data integrity. The following will outline key features that contribute to achieving our objectives and fostering a foundational understanding of our services.

Ensuring Data Integrity with Consistency Checks

The SupremeRAID™ is designed to provide high reliability and data integrity levels. A key feature that enables this is the consistency check function.

The consistency check function allows administrators to ensure that the data stored on the SupremeRAID™ system is intact and uncorrupted. These checks can be performed on a regular schedule or manually initiated as needed. While running the consistency check, the system compares the data on each disk to identify any discrepancies or errors.

Depending on the settings chosen by the administrator, the consistency check function can either automatically fix any errors that are found or stop the check and alert the administrator to any detected errors. This feature provides administrators with flexibility and control over how the system responds to errors.

For detailed information about the commands for managing the consistency check task, please refer to: [Using Consistency Checks to Ensure Data Integrity](#).


Note: The consistency check function is not supported on SupremeRAID™ systems configured in RAID0 mode because RAID0 does not provide data redundancy and does not require data consistency checks.

Dual-Controller Architecture for Auto-Failover and High-Availability

This feature enables the SupremeRAID™ system to automatically fail over to another SupremeRAID™ card when one SupremeRAID™ card experiences an issue without any interruption in service. This increased reliability and availability ensures that the system remains operational even in the event of a single card failure.

SupremeRAID™ supports dual-controller configurations in two modes: dual-active and active-passive. This enhances our RAID solution with comprehensive protection and security. Additionally, the high availability (HA) functionality remains unaffected by the root complex. Whether within the same root complex or across different root complexes, we have implemented failover mechanisms to ensure high availability.


For detailed information about the commands for setup dual-controller, please refer to: [Setting Up the Dual-Controller to Enable HA and Auto-Failover](#).

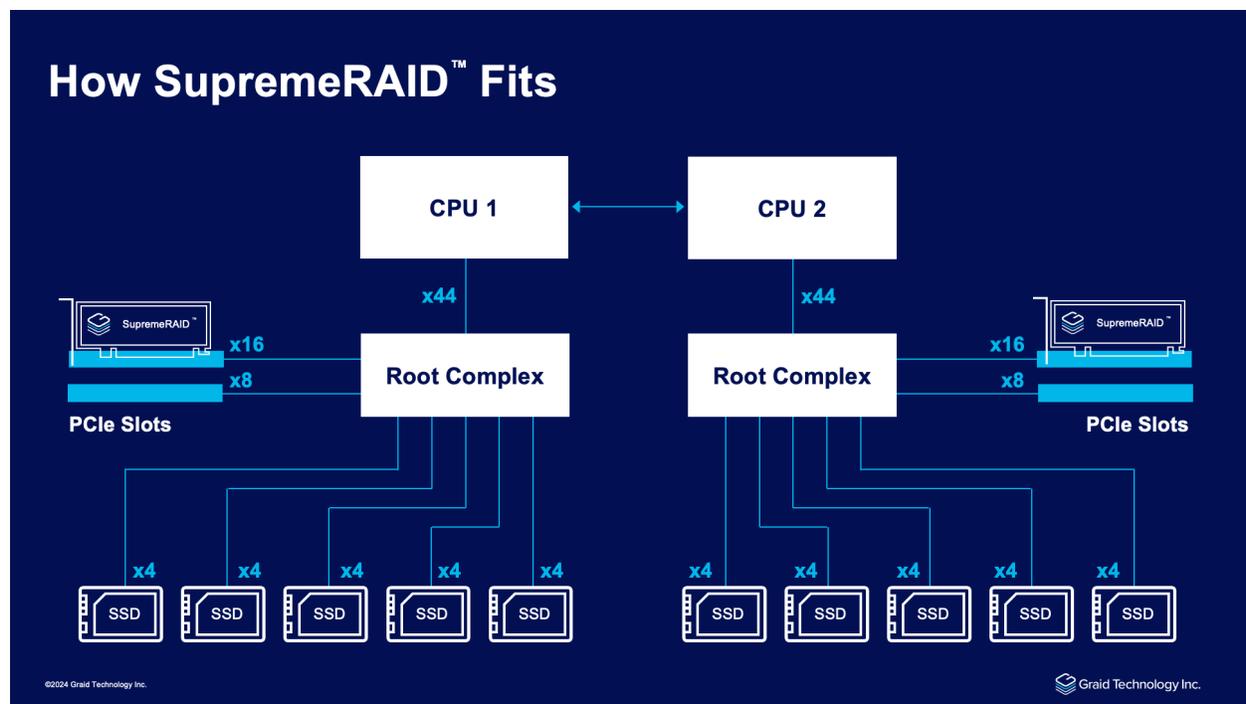

Setting Up the NVMe-oF Initiator Server and Managing Your RAID Components

The SupremeRAID™ allows you to easily manage a remote target server or storage pool that uses NVMe-over-Fabrics (NVMe-oF) technology. Both TCP and RDMA connections are supported, providing flexibility and compatibility with a wide range of systems. With the SupremeRAID™, you can create a virtual volume with RAID capabilities without the need for reconfiguration or re-cabling on the host server. This allows you to take advantage of the benefits of NVMe-oF, including increased capacity and improved data protection.


For detailed information about the commands for managing the NVMe-oF initiator, please refer to: [Managing Remote NVMe-oF Targets](#).

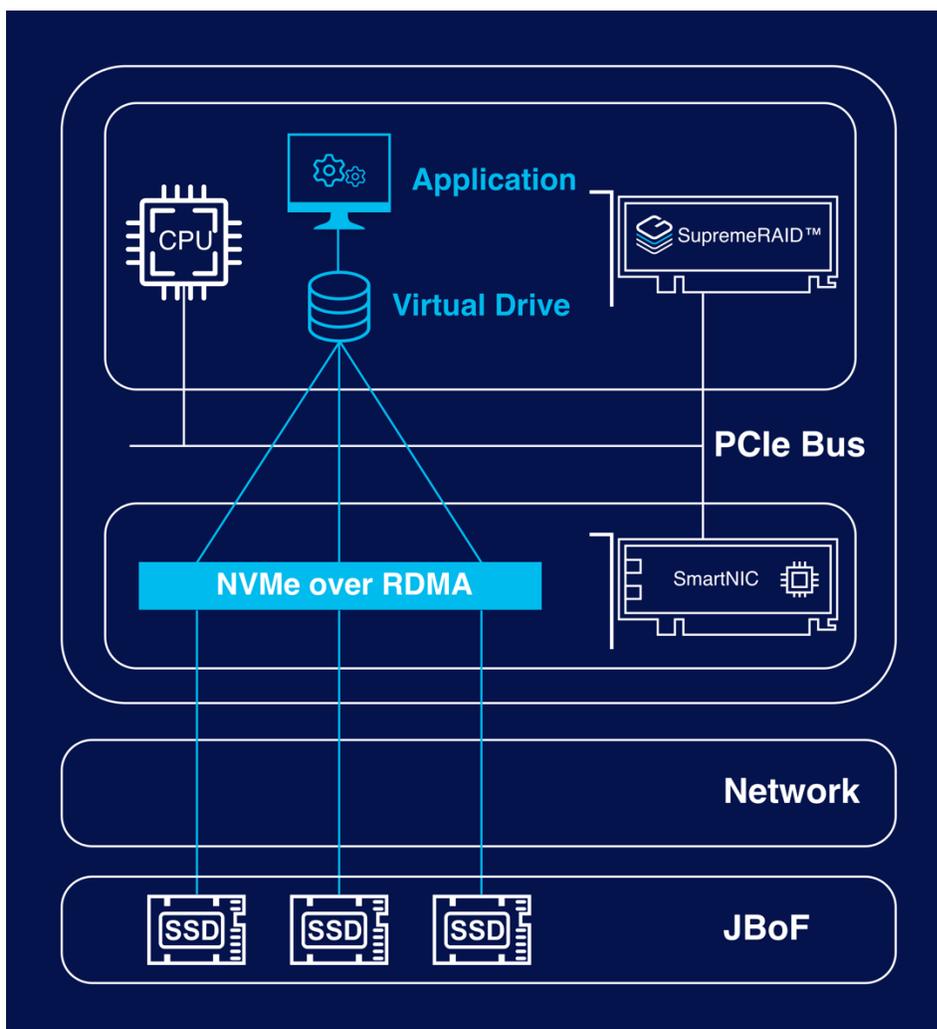

Sharing the SupremeRAID™ Volume as a NVMe-oF Target Server

The SupremeRAID™ allows you to easily compose local NVMe devices into a RAID array and share that array as an NVMe- over-Fabrics (NVMe-oF) target server. By using a SmartNIC to accelerate data transfer, you can achieve low latencies and high performance for your remote NVMe-oF clients.


For detailed information about the commands for managing the NVMe-oF target, please refer to: [Managing NVMe-oF Export Target](#) .

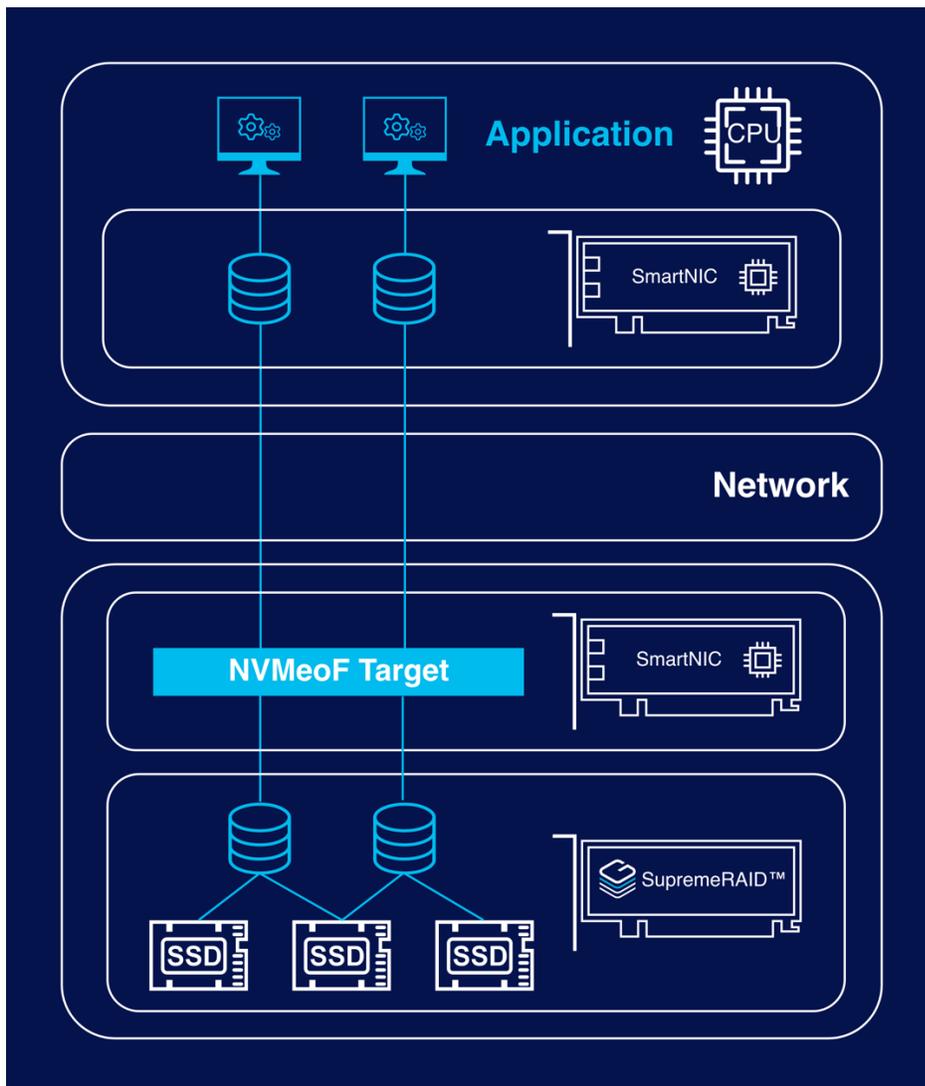

SPDK BDEV Interface Support of SupremeRAID™

The SupremeRAID™ software incorporates SPDK (Storage Performance Development Kit) feature, enabling direct access to operate the NVMe queue from user space through the SupremeRAID™ BDEV (Block Device) interface. This interface is compatible with the SPDK block device layer, often simply called *bdev*. This integration offers significant benefits that enhance the overall performance and efficiency of the system.

The SPDK feature facilitates direct user application access to NVMe queues from user space. This minimizes data access and processing latency, resulting in enhanced system responsiveness through reduced overhead and fewer context switches. Moreover, this direct access eliminates the necessity for data transfers between user space and kernel space, thereby decreasing CPU utilization caused by kernel module activity.

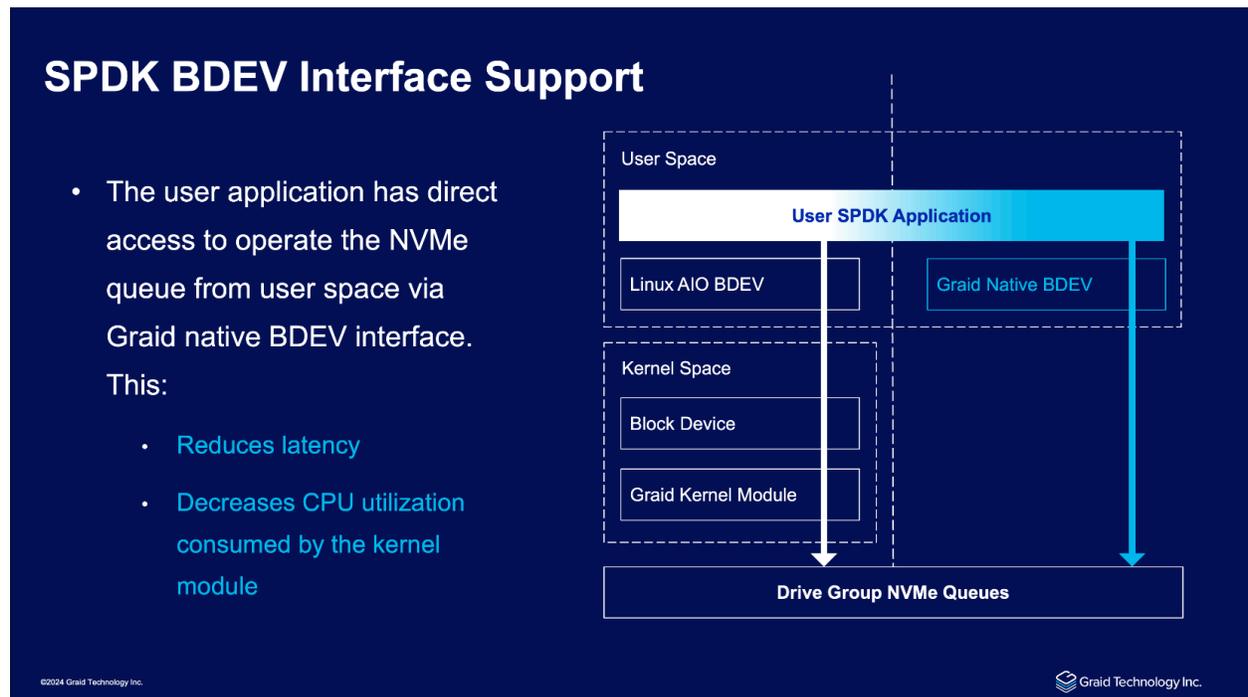

Double Failure Protection with Distributed Journaling

SupremeRAID™ incorporates a distributed journaling mechanism specifically designed to safeguard data during abnormal shutdowns in double-failure scenarios. This system ensures data integrity by logging data in a dedicated journaling space before writing it to the storage area, any incomplete I/O operations are replayed upon service restart to maintain data consistency.

This journaling feature is automatically enabled in degraded mode to uphold data integrity. Additionally, users still have the flexibility to bypass journaling space reservation when creating a drive group.

For detailed information about the commands for modifying the journal mode for RAID5 and RAID6 drive group, please refer to: [Modifying Journal Mode on a RAID5 Drive Group](#).

SupremeRAID™ Graphical Management Console

To enhance the SupremeRAID™ management tool, we offer an intuitive graphical console. Users can effortlessly navigate through the console using the navigation bar, which includes sections for Dashboard, Hosts, RAID Management, Events, and Statistics to display system workloads. Additionally, administrators have access to Licenses, User Management, and Email Notification sections.

The system offers a comprehensive suite of features designed to enhance user experience and system management. The Dashboard and Statistics page provides an overview of system efficiency and health status, allowing users to monitor RAID utility performance and resource utilization. For hands-on management, the Host and RAID Management interface facilitates the conversion of storage devices into RAID resources.

Advanced features cater to administrator needs: the License Management function tracks SupremeRAID™ license status, while User Management allows for the creation and modification of user accounts with varying permission levels. To ensure timely alerts, administrators can configure SMTP settings in the Email Notification page and enable mail functions for specific users, thereby maintaining a robust notification system for critical events.

For detailed information about the commands for the enabling UI Management console, please refer to: [Setup Graphical Management Console](#).

Support for the Dataset Management (DSM) deallocate command on virtual drives

With the release of Linux driver 1.6.1, the SupremeRAID™ driver introduces support for the NVMe DSM deallocate (trim) command on virtual drives, improving the efficiency of unused storage space management on NVMe SSDs. This feature allows filesystems or applications to issue deallocate commands on virtual drives, which are then translated by the driver and sent directly to the SSDs. By enabling the drives to manage deallocated blocks internally, this reduces write amplification, optimizes storage efficiency, and enhances overall performance.

When a discard command is issued to a virtual drive, it triggers a corresponding deallocate command to the underlying NVMe SSDs. The system supports a minimum discard range of 4KB, aligned with the logical block addressing (LBA) size, and can handle a maximum deallocate range of approximately 400 GiB per command. For larger discard operations, the filesystem and block layer handle the process seamlessly.

This feature is automatically enabled on NVMe SSDs that support the deallocate command and guarantee that deallocated blocks return zeros. For SSDs without this guarantee, the system defaults to a "write zeros" command to ensure data consistency. This flexible approach ensures broad compatibility across different SSDs while optimizing their individual capabilities.

To ensure the filesystem can take advantage of this capability and issue discard commands when files are deleted, it must be mounted with the **discard** option.

Enhancing Robustness with Error Retry Mechanism

With the release of Linux driver 1.7.0, the SupremeRAID™ driver introduces the error retry mechanism. The error retry mechanism enhances data resiliency by mitigating transient failures in physical drives before they escalate into critical issues. It detects and retries failed operations, preventing drives from being prematurely marked as degraded, and reduces the likelihood of premature drive failures caused by temporary read/write issues. Without this mechanism, drives may be wrongly identified as failed, leading to unnecessary rebuilds and increased system downtime. With the retry mechanism in place, transient errors are managed more efficiently, enhancing drive lifespan and overall system stability.

INSTALLATION

This section describes how to install the SupremeRAID™ hardware and software package for Linux operating systems.

Prerequisites

Before proceeding with the installation, make sure the system meets the following requirements:

- Minimum system requirements
 - CPU: 2 GHz or faster with at least 8 cores
 - RAM: 16 GB
 - Supported operating system: see [Latest Linux Release Notes](#) on our website.
 - An available PCIe Gen3 or Gen4 x16 slot
- The SupremeRAID™ card must be installed into a PCIe x16 slot.
- The SupremeRAID™ software package, which includes the Pre-Installer and Installer, can be downloaded directly from the Graid Technology website. The Pre-Installer configures all necessary dependencies and environment settings automatically prior to installing the SupremeRAID™ driver. The Installer contains the SupremeRAID™ driver package and will automatically detect your Linux distributions and install the appropriate files.
- Make sure a SupremeRAID™-compatible SSD drive is being used. For a list of compatible drives, see the [Drivers & Documentation](#) section on our website.
- System suspension and hibernation are currently unsupported due to a limitation in the NVIDIA driver.
- [OPTIONAL] The IOMMU function (AMD) or VT-d function (Intel) is recommend disabled in the system BIOS, typically found on the BIOS Advanced page.
- [OPTIONAL] It is highly recommended to disable the UEFI Secure Boot function on the BIOS security page, If UEFI Secure Boot is not applicable in your system, you will need to sign the NVIDIA Kernel Module. For further information and troubleshooting, please refer to the Nvidia website.

Note: To use virtualization services such as ESXi, you must enable the IOMMU (AMD) or VT-d (Intel) function. For more information, see [ESXi Virtual Machine Support Using GPU Passthrough](#).

Installing the Hardware

ESD Warning

Electronic components and circuits are sensitive to Electrostatic Discharge (ESD). When handling any circuit board assemblies including Connect Tech carrier assemblies, it is recommended that ESD safety precautions be observed. ESD safe best practices include, but are not limited to:

- Leaving circuit boards in their antistatic packaging until they are ready to be installed.
- Using a grounded wrist strap when handling circuit boards, at a minimum you should touch a grounded metal object to dissipate any static charge that may be present on you.
- Only handling circuit boards in ESD safe areas, which may include ESD floor and table mats, wrist strap stations and ESD safe lab coats.
- Avoiding handling circuit boards in carpeted areas.
- Try to handle the board by the edges, avoiding contact with components.

Installation Procedure


Perform the following procedure to install SupremeRAID™ into your system.

Step 1 Power down your system.

Step 2 Unplug the power cord from the AC power source.


Step 3 Remove the side panel from your system to gain access to the motherboard.

- Step 4** If your system has a PCIe card, remove it. If a retention bar is holding the card in place, remove the screw securing the card. If there is no existing PCIe card, remove the access covers from the primary x16 PCI express slot.

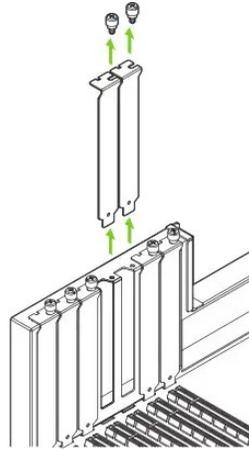

Note: The SupremeRAID™ SR-1010 is dual-slot card and requires you to remove two adjacent slot covers. The SupremeRAID™ SR-1000, SR-CORE-AM, SR-PRO-AM, SR-ULTRA-AD and SR-1001 are single-slot cards and require only a single-slot.

- Step 5** Install the card into the primary x16 PCI Express slot. Press gently on the card until it is seated securely in the slot and reattach the SupremeRAID™ card bracket retention mechanism.

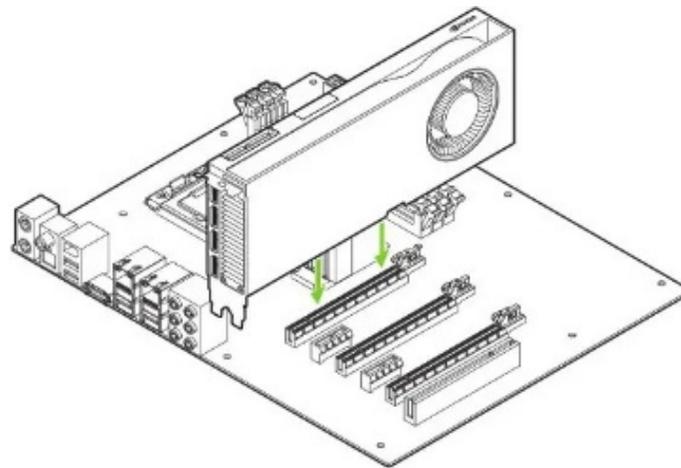

Note: Install the SupremeRAID™ card into the primary x16 PCI Express slot. The SupremeRAID™ SR-1010 is dual-slot card and covers the adjacent slot. The SupremeRAID™ SR-1000, SR-CORE-AM, SR-PRO-AM, SR-ULTRA-AD and SR-1001 are single-slot cards. For more information, see [NVIDIA RTX Ampere Architecture-Based Graphics Card User Guide](#).

Step 6 Secure the card to the system frame using the screw(s) you removed in step 4.

Step 7 Install the side panel you removed in step 3.

Installing the Software Driver

The recommended and quickest way to install the SupremeRAID™ software by using the pre-installer scripts and installer (described below).

However, if you prefer to install the software manually or your environment lacks Internet access, follow the [manual installation procedure](#) to configure the environment settings and install the SupremeRAID™ driver manually. If you have already installed the software and only wish to upgrade it, please refer to the instructions for the upgrade configuration.

Using the Pre-installer and Installer

The SupremeRAID™ pre-installer is an executable file that contains the required dependencies and a setup script that installs the NVIDIA driver. The script makes it easy to prepare the environment and install the SupremeRAID™ driver in every supported Linux distribution. Use the following steps to prepare the environment and install the SupremeRAID™ driver using the pre-installer in supported Linux distributions.

Note: To run the pre-installer, the system must have internet access to download the required dependencies from the official mirror.

Step 1 Go to the Graid Technology website to download the latest version of the pre-installer and make it executable, please download the package in the [Latest Linux Release Notes](#).

```
$ sudo wget [filelink]
$ sudo chmod +x [Filename]
```

Dependencies and Utilities

	Links
NVIDIA Driver	NVIDIA-Linux-
SupremeRAID™ Pre-installer	graid-sr-pre-installer (MD5: 8218aa)

Step 2 Execute the pre-installer and follow the instructions to complete the pre-installation process, as shown in the following figure.

```
$ sudo ./[filename]
```

```
root@graid-demo:/home/graid/driver# ./graid-sr-pre-installer-1.5.0-98-x86_64.run
Reading package lists... Done
Building dependency tree
Reading state information.. Done
gawk is already the newest version (1:5.0.1+dfsg-1ubuntu0.1).
mokutil is already the newest version (0.6.0-2~20.04.2).
pciutils is already the newest version (1:3.6.4-1ubuntu0.20.04.1).
tar is already the newest version (1.30+dfsg-7ubuntu0.20.04.3).
0 upgraded, 0 newly installed, 0 to remove and 0 not upgraded.
Extracting installer files, please wait a few seconds ...
DKMS: install completed.
Setting kernel options
Sourcing file `/etc/default/grub'
Sourcing file `/etc/default/grub.d/init-select.cfg'
Generating grub configuration file ...
Found linux image: /boot/vmlinuz-5.4.0-163-generic
Found initrd image: /boot/initrd.img-5.4.0-163-generic
Adding boot menu entry for UEFI Firmware Settings
done
Setting kernel options done.

Generating new initramfs...
update-initramfs: Generating /boot/initrd.img-5.4.0-163-generic
Generated new initramfs.
Install packages and kernel setting succeeded.

Prepare install NVIDIA driver
Checking Xorg ...
Checking nouveau ...
Nouveau module has been loaded, graid-preinstaller will unload nouveau for NVIDIA driver install.
Unload nouveau module successfully.
Running install NVIDIA Driver. (This step will take a while.)
Wed Feb 21 11:27:41 2024
+-----+
| NVIDIA-SMI 535.154.05          Driver Version: 535.154.05   CUDA Version: 12.2   |
+-----+-----+-----+-----+-----+
| GPU   Name                   Persistence-M | Bus-Id        Disp.A | Volatile Uncorr. ECC |
| Fan  Temp  Perf              Pwr:Usage/Cap |      Memory-Usage | GPU-Util  Compute M. |
|                                           |              MIG M. |
+-----+-----+-----+-----+-----+
|   0   NVIDIA RTX A2000        Off          | 00000000:01:00:0 | Off          |     0   |
| 30%   32C   P2              22W / 70W | 0MiB / 5754MiB |    0%      Default |
|                                           |              N/A   |
+-----+-----+-----+-----+-----+
+-----+
| Processes:
| GPU   GI   CI          PID Type   Process name                      GPU Memory
|     ID   ID              |                   |                      Usage
+-----+-----+-----+-----+-----+
| No running processes found
+-----+
Install NVIDIA Driver succeeded.


This graid-preinstaller will reboot the system for apply previous setting!
Do you want to continue? [Y/n] []
```

Step 3 After running the pre-installation script, type Y and press Enter when prompted to reboot the system.

Step 4 Go to the Graid Technology website, download the latest version of the installer in [Latest Linux Release Notes](#) and make it executable.

```
$ sudo wget [filelink]
$ sudo chmod +x [filename]
```

Driver Package

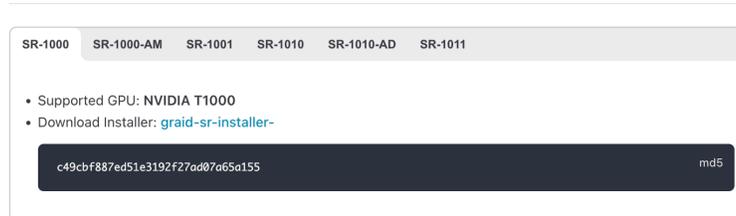

SR-1000 SR-1000-AM SR-1001 SR-1010 SR-1010-AD SR-1011


- Supported GPU: NVIDIA T1000
- Download Installer: [graid-sr-installer-](#)

c49cbf887ed51e3192f27ad07a65a155 md5


Step 5 Execute the installer and follow the provided steps to complete the installation.

```
$ sudo ./[filename]
```

A At the Welcome page, select Next and press **Enter** to view the end-user license agreement.

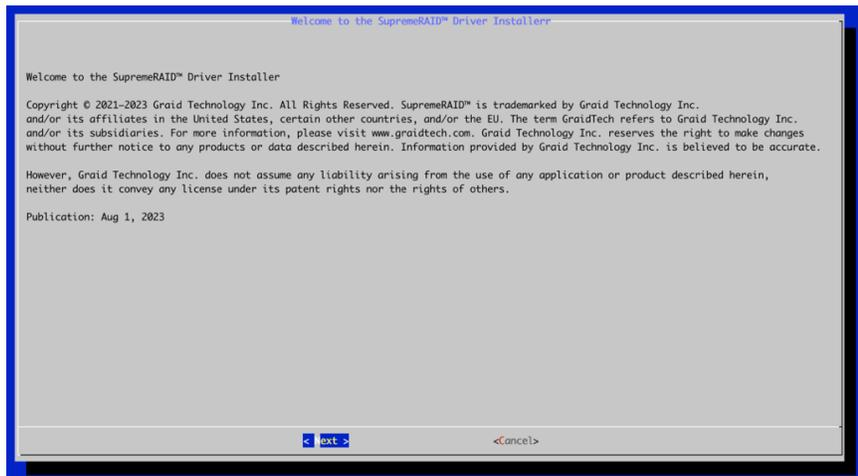


- B In the end-user license agreement page, use the spacebar to scroll down the content. After you review the license, select **Next** and press Enter.

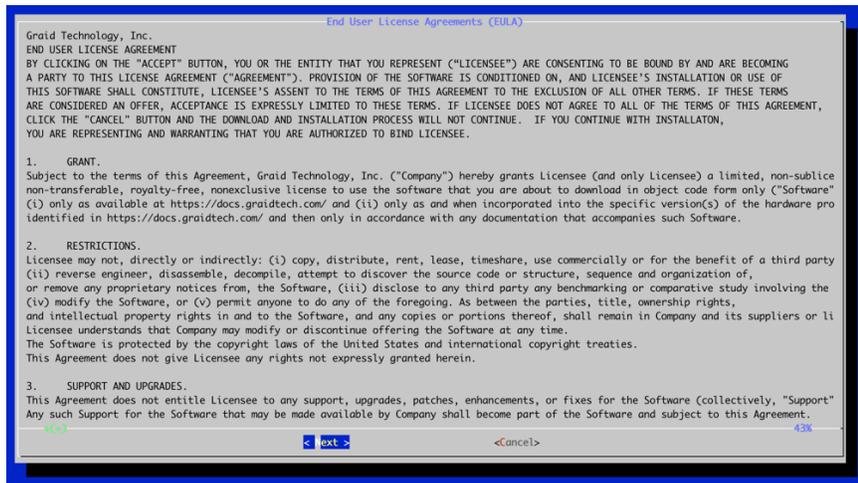

- C Type **Accept**, click tab, select **Next**, and press Enter to accept the license agreement.



- D Confirm the installation package, and then select **Next** to continue with the installation.

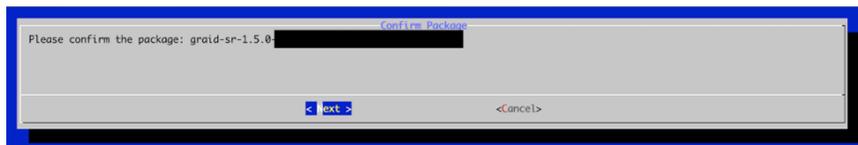

- E Complete the installation. You can access the SupremeRAID™ Management Console at: [https://\[IP\]:50060](https://[IP]:50060). If port 50060 is occupied by other applications, please refer to the [instructions](#) to change the port.

```
The installation was successful
The installation was successful.
- Please click the link below to access the SupremeRAID™ Management Console.
https://172.16.55.103:50060/host-token?code=bslxbn
- You can also access the SupremeRAID™ Management Console at: https://172.16.55.103:50060
and
enter the host token: bslxbn

Notice:
- Please turn off the sleep and hibernation modes to prevent data loss and system
instability.
- The SupremeRAID™ Management Console requires port 50060 to be open for proper
functionality. If this port is not enable, the web interface may not work correctly.
- If port 50060 is already in use by another application, please refer to [the
instructions to change the port]
```

If port 50060 is occupied by another application, you can set up your own port and IP, please edit the configuration file `/etc/graidmgr/service.conf`.

For example, if you want to set the port and IP to 8888 and 172.16.12.34 respectively, it would look as follows:

```
[common]
web_port=8888
web_addr="172.16.12.34"
```

If you have lost the host token, please use the following command to retrieve the host token.

```
$ sudo graid-mgr host_token gen
```

Step 6 To activate the software, apply the SupremeRAID™ license key.

```
$ sudo graidctl apply license [LICENSE_KEY]
```

Using Installer for Silent Installation

This section is designed for users who require mass deployment and may be designing scripts for installation. However, we strongly recommend using the GUI installation process for the best user experience and comprehensive configuration options.

Step 1 Please follow the steps from the previous section to download the pre-installer and installer, make them executable, and use the pre-installer to install the dependencies required by the SupremeRAID™ service.

```
$ sudo chmod +x [filename]
```

Step 2 To install pre-installer without interactive mode, add "--yes" while executing the pre-installer.

```
$ sudo ./[filename] --yes
```

Step 3 To install the driver directly with the ULAs license acceptance, simply add the command '--accept-license' in the end when executing the installer.

```
$ sudo ./[filename] --accept-license
```

```
root@graid-demo:~/driver# sudo ./graid-sr-installer-1.5.0-001-659-82-x86_64.run --accept-license
Extracting installer files, please wait a few seconds ...
Extracting installer files done.

Starting installer ...
systemctl stop graid
Creating symlink /var/lib/dkms/grebar/0.1.0/source -> /usr/src/grebar-0.1.0

Kernel preparation unnecessary for this kernel. Skipping...

Building module:
cleaning build area...
make -j32 KERNELRELEASE=5.15.0-83-generic...
Signing module:
- /var/lib/dkms/grebar/0.1.0/5.15.0-83-generic/x86_64/module/grebar.ko
Secure Boot not enabled on this system.
cleaning build area...

grebar.ko:
Running module version sanity check.
- Original module
  - No original module exists within this kernel
- Installation
  - Installing to /lib/modules/5.15.0-83-generic/updates/dkms/

depmod...
Selecting previously unselected package graid-sr.
(Reading database ... 83819 files and directories currently installed.)
Preparing to unpack .../graid-sr-1.5.0-659.g10e76f72.001.x86_64.deb ...
No need to patch
Unpacking graid-sr (1.5.0) ...
Setting up graid-sr (1.5.0) ...
Creating symlink /var/lib/dkms/graid/1.5.0/source -> /usr/src/graid-1.5.0

Kernel preparation unnecessary for this kernel. Skipping...

Building module:
cleaning build area...
./build.sh 5.15.0-83-generic /lib/modules/5.15.0-83-generic/build.....
Signing module:
- /var/lib/dkms/graid/1.5.0/5.15.0-83-generic/x86_64/module/graid-nvidia.ko
- /var/lib/dkms/graid/1.5.0/5.15.0-83-generic/x86_64/module/graid.ko
Secure Boot not enabled on this system.
cleaning build area...

graid.ko:
Running module version sanity check.
- Original module
  - No original module exists within this kernel
- Installation
  - Installing to /lib/modules/5.15.0-83-generic/updates/dkms/

graid-nvidia.ko:
Running module version sanity check.
- No original module exists within this kernel
- Installation
  - Installing to /lib/modules/5.15.0-83-generic/updates/dkms/

depmod...
Processing triggers for man-db (2.10.2-1) ...
Suggestion!! This installer will reboot the system for apply previous kernel module grebar setting!
Do you want to continue? [Y/n]
```

Step 4 To log in to the SupremeRAID™ Management Console, please generate a host token and enter it.

```
$ sudo graid-mgr host_token gen
```

Step 5 To activate the software, apply the SupremeRAID™ license key.

```
$ sudo graidctl apply license [LICENSE_KEY]
```

Manual Installation

The following procedure describes how to manually install the SupremeRAID™ software on various operating systems. The reference for packages and dependencies for each operating system is provided below.

- For [CentOS, Rocky Linux, AlmaLinux, and RHEL operating systems](#).
- For [Ubuntu operating systems](#).
- For [openSUSE operating systems](#).
- For [SLES operating systems](#).

Note: For systems without internet access, download required dependencies from official repositories. See the distribution section below for details. Only perform manual installation if necessary or if the pre-installer fails. For most cases, check Supported Operating Systems on our website and use the automated pre-installer script to install the SupremeRAID™ software.

Dependency Table for Manual Installation

Here is the dependency tree for manual installation and the comparison table for each operating system.

RHEL	CentOS/Rocky/ Almalinux/Oracle	SLES	Debian/Ubuntu
automake	automake	automake	automake
dialog	dialog	dialog	dialog
dkms	dkms	dkms	dkms
gcc	gcc	gcc	gcc

ipmitool	ipmitool	ipmitool	ipmitool
make	make	make	make
mdadm	mdadm	mdadm	mdadm
mokutil	mokutil	mokutil	mokutil
pciutils	pciutils	pciutils	pciutils
tar	tar	tar	tar
vim	vim	vim	vim
wget	wget	wget	wget
sg3_utils	sg3_utils	libsgutils-devel	libsgutils2-2
--	--	libpci3	libpci3
--	--	libpci3	libpci3
sqlite-libs	sqlite-libs	sqlite3	sqlite3
--	--	libudev-devel	--
--	--	--	initramfs-tools
--	--	--	gawk
gcc-c++-\$(VERSION_ID)	gcc-c++	g++	g++
gcc-\$(VERSION_ID)	--	--	--
kernel-devel-\$(kernel_version)	kernel-devel-\$(kernel_version)	--	--
kernel-headers-\$(kernel_version)	kernel-headers-\$(kernel_version)	-C kernel-default-devel=\$(kernel_version_suse)	linux-headers-\$(kernel_version)

libibverbs	libibverbs	libibverbs1	libibverbs1
librdmacm	librdmacm	librdmacm1	librdmacm1
--	--	libnuma1	libnuma1
--	--	rdma-core	--

Note: To determine the kernel version for RHEL, you can use the command `uname -r`. For SUSE, extract the kernel version using `uname -r | awk -F"-default" '{print $1}'`. Additionally, please using `awk -F=' /VERSION_ID/{ gsub("/", ""); print $2}' /etc/os-release` to retrieve the version ID.

Manual Installation on a CentOS, Rocky Linux, AlmaLinux, and RHEL Operating Systems

Graid Technology, Inc. recommends referring to [Latest Linux Release Notes](#) on our website and using the pre-installer to configure the environmental settings.

Step 1 Install the package dependencies and build for Dynamic Kernel Module Support (DKMS) based on your operating system.

- For CentOS, Rocky Linux, and AlmaLinux: issue the following commands.

```
$ sudo yum install --enablerepo=extras epel-release  
  
$ sudo yum install vim wget make automake gcc gcc-c++ kernel-devel  
kernel-headers kernel dkms ipmitool tar mdadm sg3_utils sqlite-libs  
automake dialog perl nvme-cli
```

- For RHEL9, issue the following commands:

```
$ sudo yum install https://dl.fedoraproject.org/pub/epel/epel-  
release-latest-9.noarch.rpm  
  
$ sudo yum install make automake kernel-devel-matched-$(uname -r)  
kernel-headers-$(uname -r) dkms gcc gcc-c++ ipmitool tar mdadm  
sg3_utils sqlite-libs automake dialog perl nvme-cli vim wget
```

- For RHEL8, issue the following commands:

```
$ sudo yum install https://dl.fedoraproject.org/pub/epel/epel-  
release-latest-8.noarch.rpm  
  
$ sudo yum install make automake kernel-devel-$(uname -r) kernel-  
headers-$(uname -r) dkms gcc gcc-c++ ipmitool tar mdadm sg3_utils  
sqlite-libs automake dialog perl nvme-cli vim wget
```

- For RHEL7.9: issue the following commands.

```
$ sudo yum install https://dl.fedoraproject.org/pub/epel/epel-  
release-latest-7.noarch.rpm  
  
$ sudo yum install gcc-$(awk -F=' ' /VERSION_ID/{ gsub("/", "");  
print $2}' /etc/os-release) gcc-c++-$(awk -F=' '  
'/VERSION_ID/{ gsub("/", ""); print $2}' /etc/os-release)  
  
$ sudo yum install make automake kernel-devel-$(uname -r) kernel-  
headers-$(uname -r) dkms ipmitool tar mdadm sg3_utils sqlite-libs  
automake dialog vim wget
```

Step 2 Add the kernel option. This step prevents the Nouveau driver from loading during installation and disables IOMMU in the system BIOS.

```
$ sudo vim /etc/default/grub
```

Step 3 Append the command line parameters and then update the grub configuration based on your operating system.

- For RHEL8, 9 and above versions, append `iommu=pt` and `'nvme_core.multipath=Y'` to `GRUB_CMDLINE_LINUX_DEFAULT`.
- For RHEL7.9, append `iommu=pt` to `'GRUB_CMDLINE_LINUX_DEFAULT'`.

```
$ sudo grub2-mkconfig -o /boot/grub2/grub.cfg
```

Step 4 Append `blacklist nouveau` and `options nouveau modeset=0` to the end of the file `/etc/modprobe.d/graid-blacklist.conf` to disable the Nouveau driver and update `initramfs`.

```
$ sudo update-initramfs -u
```

```
root@graid-demo:/etc/modprobe.d# cat graid-blacklist.conf
blacklist nouveau
options nouveau modeset=0
```

Step 5

- For CentOS, Rocky Linux, and AlmaLinux: Find the latest version of the kernel and assign it to `-kver`.

```
$ sudo dracut -f --kver `rpm -qa | grep kernel-headers | awk -F'kernel-headers-' {'print $2'}`
```

- For RHEL: issue the following command.

```
$ sudo dracut -f
```

Step 6 Reboot the system and make sure the grub configuration was applied. You can check `/proc/cmdline` for the grub configuration in use. For example:

- For RHEL9:

```
[root@localhost ~]# cat /proc/cmdline
BOOT_IMAGE=(md/root)/boot/vmlinuz-5.14.0-284.30.1.el9_2.x86_64 root=UUID=f2440cd3-491b-4d55-af1b-fe14b545c09e ro crashkernel=1G-4G:192M,4G-64G:256M,64G-512M resume=UUID=1aed4049-d82a-4d23-802d-7ac9f4c73a24 rd.md.uuid=4fe3b4ad:6e55c5eb:6a5da201:bd307bb4 rd.md.uuid=e6e24cf5:6149f434:ff7292d3:3c77e608 rhgb quiet iommu=pt nvme_core.multipath=Y iommu=pt nvme_core.multipath=Y
```

- For RHEL8:

```
[root@localhost ~]# cat /proc/cmdline
BOOT_IMAGE=(hd9,gpt2)/vmlinuz-4.18.0-553.5.1.el8_10.x86_64 root=/dev/mapper/rl-root ro crashkernel=auto resume=/dev/mapper/rl-swap rd.lvm.lv=rl/root rd.lvm.lv=rl/swap rhgb quiet iommu=pt nvme_core.multipath=Y
```

- For RHEL7:

```
[root@localhost ~]# cat /proc/cmdline
BOOT_IMAGE=(hd9,gpt2)/vmlinuz-4.18.0-553.5.1.el7_9.x86_64 root=/dev/mapper/rl-root ro crashkernel=auto resume=/dev/mapper/rl-swap rd.lvm.lv=rl/root rd.lvm.lv=rl/swap rhgb quiet rd.driver.blacklist=nouveau iommu=pt
```

Step 7 Install the NVIDIA driver.

```
$ wget https://us.download.nvidia.com/XFree86/Linux-x86_64/550.67/NVIDIA-Linux-x86_64-550.67.run
$ chmod +x ./NVIDIA-Linux-x86_64-550.67.run
```

- For CentOS: Use the latest version of kernel-headers to install the NVIDIA driver.

```
$ sudo ./NVIDIA-Linux-x86_64-550.67.run -s --no-systemd --no-opengl-files --no-nvidia-modprobe --dkms -k `rpm -qa | grep kernel-headers | awk -F'kernel-headers-' {'print $2}'`
```

- For RHEL:

```
$ sudo ./NVIDIA-Linux-x86_64-550.67.run -s --no-systemd --no-opengl-files --no-nvidia-modprobe --dkms -k `rpm -qa | grep kernel-headers | awk -F'kernel-headers-' {'print $2}'`
```

Step 8 The Nouveau driver is now disabled. Reboot and install the NVIDIA driver before proceeding with the installation.

```
$ sudo reboot
```

Step 9 Use the `nvidia-smi` command to confirm that the NVIDIA GPU is working. The following figure shows an output example of a successful installation.

```
root@graid:~# nvidia-smi
Wed Jun 26 09:28:33 2024

+-----+
| NVIDIA-SMI 550.67                Driver Version: 550.67          CUDA Version: 12.4     |
+-----+-----+
| GPU Name      Persistence-M| Bus-Id        Disp.A | Volatile Uncorr. ECC | |
| Fan  Temp  Perf    Pwr:Usage/Cap|      Memory-Usage | GPU-Util  Compute M. |
|               |                    |   Memory Usage   |      GPU-Util  Compute M. |
+-----+-----+
| 0   NVIDIA T400 4GB    N/A / 31W | 00000000:01:00:0 Off |                  N/A |
| 61%   75C    P0             N/A / 31W | 1271MiB / 4096MiB |      100%    E. Process MIG M. |
+-----+-----+

+-----+
| Processes:                       |
| GPU   GI   CI        PID   Type   Process name          GPU Memory |
|   ID   ID   ID             |              |           Usage     |
+-----+-----+
| 0     N/A  N/A         720   C     /usr/bin/graid_core   1260MiB |
+-----+-----+
```

Step 10 From the Graid Technology website, download the latest version of the installer and make it executable.

```
$ sudo chmod +x [filename]
```

Step 11 Proceed to [Executing the Installer and Completing the Installation](#) to execute the installer and to complete the installation.

Manual Installation on an Ubuntu Operating System

Step 1 Graid Technology, Inc. recommends referring to [Latest Linux Release Notes](#) on our website and using the pre-installer to configure the environmental settings.

Step 2 Install the package dependencies and build for DKMS.

```
$ sudo apt-get update

$ sudo apt-get install make automake gcc g++ linux-headers-$(uname -r)
dkms ipmitool initramfs-tools tar mdadm libsgutils2-2 libudev-dev
libpci3 sqlite automake dialog perl nvme-cli
```

Step 3 Disable Ubuntu daily upgrade.

```
$ sed -i '/Unattended-Upgrade "1"/ s/"1"/"0"/'
/etc/apt/apt.conf.d/20auto-upgrades

$ sed -i '/Update-Package-Lists "1"/ s/"1"/"0"/'
/etc/apt/apt.conf.d/20auto-upgrades
```

Step 4 Add the kernel option. This step prevents the Nouveau driver from loading during installation and disables IOMMU in the system BIOS.

```
$ sudo vim /etc/default/grub
```

Step 5 Append **iommu=pt** and **nvme_core.multipath=Y** to GRUB_CMDLINE_LINUX_DEFAULT, and then update the grub configuration.

```
$ sudo update-grub
```

Step 6 Append **blacklist nouveau** and **options nouveau modeset=0** to the end of the `/etc/modprobe.d/graid-blacklist.conf` file to disable the Nouveau driver and update initramfs.

```
$ sudo update-initramfs -u
```

```
root@graid-demo:/etc/modprobe.d# cat graid-blacklist.conf
blacklist nouveau
options nouveau modeset=0
```

Note: You might need to manually create the `/etc/modprobe.d/graid-blacklist.conf` file and append **blacklist nouveau** and **options nouveau modeset=0**.

Step 7 Reboot the system and make sure the grub configuration was applied. You can check `/proc/cmdline` for the grub configuration in use. For example:

```
root@graid-demo:/etc/modprobe.d# cat /proc/cmdline
BOOT_IMAGE=/boot/vmlinuz-5.15.0-46-generic root=UUID=32b02b62-7173-4f3b-a723-8aa1e2fbf60a ro text iommu=pt nvme_core.multipath=Y
```

Step 8 Install the NVIDIA driver (The following is a sample. For the latest NVIDIA driver version, please refer to the [Release Notes](#)).

(Note: For GPUs with NVLink/NVSwitch, please refer to the [Knowledge Base](#) for guidance on installing the NVIDIA Fabric Manager.)

```
$ wget https://us.download.nvidia.com/XFree86/Linux-x86_64/550.67/NVIDIA-Linux-x86_64-570.124.04.run
$ sudo chmod +x ./NVIDIA-Linux-x86_64-570.124.04.run
$ sudo ./NVIDIA-Linux-x86_64-570.124.04.run -s --no-systemd --no-opengl-files --no-nvidia-modprobe --dkms --disable-nouveau
```

Step 9 Use the `nvidia-smi` command to confirm that the NVIDIA GPU is working. The following figure shows an output example of a successful installation.

```
root@graid:~# nvidia-smi
Wed Feb 21 02:55:13 2024

+-----+
| NVIDIA-SMI 535.154.05             Driver Version: 535.154.05   CUDA Version: 12.2   |
+-----+-----+
| GPU  Name           Persistence-M | Bus-Id  Disp.A | Volatile Uncorr. ECC |
| Fan  Temp   Perf          Pwr:Usage/Cap |  Memory-Usage | GPU-Util  Compute M. |
|                                           |              | MIG M.     |
+-----+-----+
|  0   NVIDIA T400 4GB      Off      | 00000000:01:00.0 Off |   N/A   |
| 46%   46C   P0              N/A / 31W |  0MiB / 4096MiB |    0%   Default   |
|                                           |              |           |
+-----+-----+

+-----+
| Processes:                               |
| GPU  GI  CI           PID  Type  Process name          GPU Memory |
| ID   ID  ID              |              |           Usage       |
+-----+-----+
| No running processes found              |
+-----+-----+

```

Step 10 Go to the Graid Technology website to download the latest version of the pre-installer and make it executable, please download the package in [Latest Linux Release Notes](#).

```
$ sudo chmod +x [Filename]
```

Dependencies and Utilities

	Links
NVIDIA Driver	NVIDIA-Linux-
SupremeRAID™ Pre-installer	graid-sr-pre-installer (MD5: 8218aac)

Driver Package

SR-1000 SR-1000-AM SR-1001 SR-1010 SR-1010-AD SR-1011

- Supported GPU: NVIDIA T1000
- Download Installer: [graid-sr-installer](#)

c49cbf887ed51e3192f27ad070650155
md5

Step 11 Proceed to [Executing the Installer and Completing the Installation](#) to execute the installer and to complete the installation.

Manual Installation on an openSUSE Operating System

Graid Technology, Inc. recommends referring to [Latest Linux Release Notes](#). on our website and using the pre-installer to configure the environmental settings.

Step 1 Install openSUSE and select all online repositories.

Step 2 Install the package dependencies and build for DKMS.

```
$ sudo zypper addrepo -f
https://download.opensuse.org/distribution/leap/15.3/repo/oss/ leap-
15.3

$ sudo zypper --gpg-auto-import-keys refresh

$ sudo zypper install sudo vim wget libpci3 dkms ipmitool tar mdadm
libsgutils-devel libudev-devel sqlite3 automake dialog perl nvme-cli

$ sudo zypper install -C kernel-default-devel=$(uname -r | awk -F"-
default" '{print $1}')
```

Step 3 Add the kernel option. This step prevents the Nouveau driver from loading during installation and disables IOMMU in the system BIOS.

```
$ sudo vim /etc/default/grub
```

Step 4 Append iommu=pt and 'nvme_core.multipath=Y' to GRUB_CMDLINE_LINUX_DEFAULT, and then update the grub configuration.

```
$ sudo grub2-mkconfig -o /boot/grub2/grub.cfg
```

- Step 5** Append 'blacklist nouveau' to the end of the /etc/modprobe.d/graid-blacklist.conf file to disable the Nouveau driver. You might need to manually create the /etc/modprobe.d/graid-blacklist.conf file and append **blacklist nouveau** and **options nouveau modeset=0**.

```
root@graid-demo:/etc/modprobe.d# cat graid-blacklist.conf
blacklist nouveau
options nouveau modeset=0
```

- Step 6** Set the **allow_unsupported_modules** option to **1** in the /etc/modprobe.d/10-unsupported-modules.conf file and update initrd.

```
$ sudo mkinitrd
```

- Step 7** Reboot the system and make sure the grub configuration was applied. You can check /proc/cmdline for the grub configuration in use. For example:

```
root@graid:~# cat /proc/cmdline
BOOT_IMAGE=/boot/vmlinuz-5.3.18-59.5-default root=UUID=7560fe42-0275-4618-b8a0-0785765610c9 modprobe.blacklist=nouveau lvmu=pt splash=silent quiet
mitigations=auto nvme_core.multipath=Y
```

- Step 8** Install the NVIDIA driver.

```
$ wget https://us.download.nvidia.com/XFree86/Linux-x86_64/550.67/NVIDIA-Linux-x86_64-550.67.run
$ sudo chmod +x ./NVIDIA-Linux-x86_64-550.67.run
$ sudo ./NVIDIA-Linux-x86_64-550.67.run -s --no-systemd --no-opengl-files --no-nvidia-modprobe --dkms --disable-nouveau
```

- Step 9** The Nouveau driver is now disabled. Reboot and install the NVIDIA driver before proceeding with the installation.

```
$ sudo reboot
```

- Step 10** Use the **nvidia-smi** command to confirm that the NVIDIA GPU is working. The following figure shows an output example of a successful installation.

```
root@graid-demo:~# nvidia-smi
Tue Aug 29 18:18:37 2023

+-----+
| NVIDIA-SMI 515.86.01   Driver Version: 515.86.01   CUDA Version: 11.7   |
+-----+-----+
| GPU  Name            Persistence-M| Bus-Id        Disp.A | Volatile Uncorr. ECC |
| Fan  Temp  Perf    Pwr:Usage/Cap|  Memory-Usage | GPU-Util  Compute M. |
|                                           MIG M.         |
+-----+-----+
|  0  NVIDIA RTX A2000   Off          | 00000000:22:00.0 Off |          0          |
| 30%  48C   P2      24W / 70W    |  0MiB /  5754MiB |    2%      Default  |
|                                           |                 |
+-----+-----+
+-----+
| Processes:
| GPU  GI  CI           PID  Type  Process name          GPU Memory
|   ID  ID                                     Usage            |
+-----+-----+
| No running processes found
+-----+-----+-----+-----+-----+-----+
|
+-----+-----+-----+-----+-----+-----+
|
```

Step 11 Go to the Graid Technology website to download the latest version of the pre-installer and make it executable, please download the package in [Latest Linux Release Notes](#).

```
$ sudo chmod +x [Filename]
```

Dependencies and Utilities

	Links
NVIDIA Driver	NVIDIA-Linux-
SupremeRAID™ Pre-installer	graid-sr-pre-installer (MD5: 8218aa)

Driver Package

SR-1000 SR-1000-AM SR-1001 SR-1010 SR-1010-AD SR-1011

- Supported GPU: NVIDIA T1000
- Download installer: [graid-sr-installer-](#)

c49cbf887e51e3192f27ad07665a155
md5

Step 12 Proceed to [Executing the Installer and Completing the Installation](#) to execute the installer and to complete the installation.

Manual Installation on a SLES Operating System

Graid Technology, Inc. recommends referring to [Latest Linux Release Notes](#) on our website and using the pre-installer to configure the environmental settings.

Step 1 Install SLES with the following extensions and modules:

- SUSE Package Hub 15 SP3 x86_64
- Desktop Applications Module 15 SP3 x86_64
- Development Tools Module 15 SP3 x86_64

Step 2 Install the package dependencies and build for DKMS.

```
$ sudo zypper addrepo -f
https://download.opensuse.org/distribution/leap/15.3/repo/oss/ leap-
15.3

$ sudo zypper --gpg-auto-import-keys refresh

$ sudo zypper install sudo vim wget libpci3 dkms ipmitool tar mdadm
libsgutils-devel libudev-devel sqlite3 automake dialog perl nvme-cli

$ sudo zypper install -C kernel-default-devel=$(uname -r | awk -F"-
default" '{print $1}')
```

Step 3 Add the kernel option. This step prevents the Nouveau driver from loading during installation and disables IOMMU in the system BIOS.

```
$ sudo vim /etc/default/grub
```

Step 4 Append `iommu=pt` and `nvme_core.multipath=Y` to `GRUB_CMDLINE_LINUX_DEFAULT`, and then update the grub configuration:

```
$ sudo grub2-mkconfig -o /boot/grub2/grub.cfg
```

Step 5 Append `blacklist nouveau` to the end of the `/etc/modprobe.d/graid-blacklist.conf` file to disable the Nouveau driver. You might need to manually modify the configuration file.

```
root@graid-demo:/etc/modprobe.d# cat graid-blacklist.conf
blacklist nouveau
options nouveau modeset=0
```

Step 6 Set the `allow_unsupported_modules` option to 1 in the `/etc/modprobe.d/10-unsupported-modules.conf` file and update `initrd`.

```
$ sudo mkinitrd
```

Step 7 Reboot the system and make sure the grub configuration was applied. You can check `/proc/cmdline` for the grub configuration in use. For example:

```
root@graid:~ # cat /proc/cmdline
BOOT_IMAGE=/boot/vmlinuz-5.3.18-59.5-default root=UUID=7560fe42-0275-4618-b8a0-0785765610c9 modprobe.blacklist=nouveau iommu=pt splash=silent quiet
mitigations=auto nvme_core.multipath=Y
```

Step 8 Install the NVIDIA driver.

```
$ wget https://us.download.nvidia.com/XFree86/Linux-x86_64/550.67/NVIDIA-Linux-x86_64-550.67.run
$ sudo chmod +x ./NVIDIA-Linux-x86_64-550.67.run
$ sudo ./NVIDIA-Linux-x86_64-550.67.run -s --no-systemd --no-opengl-files --no-nvidia-modprobe --dkms --disable-nouveau
$ sudo reboot
```

Step 9 The Nouveau driver is now disabled. Reboot and install the NVIDIA driver before proceeding with the installation.

```
$ sudo reboot
```

Step 10 Use the `nvidia-smi` command to confirm that the NVIDIA GPU is working. The following figure shows an output example of a successful installation.

```

root@graid:~# nvidia-smi
Wed Jun 26 09:28:33 2024
+-----+
| NVIDIA-SMI 550.67                Driver Version: 550.67          CUDA Version: 12.4         |
+-----+-----+
| GPU   Name           Persistence-M | Bus-Id        Disp.A | Volatile Uncorr. ECC |
| Fan  Temp  Perf    Pwr:Usage/Cap |      Memory-Usage | GPU-Util  Compute M. |
|=====+=====+
| 0   NVIDIA T400  4GB          On       | 00000000:01:00.0 Off |           N/A         |
| 61%   75C    P0              N/A / 31W   | 1271MiB / 4096MiB | 100%      E. Process |
|=====+=====+
+-----+-----+
| Processes:                        |
| GPU   GI   CI          PID    Type   Process name          GPU Memory |
| ID   ID   ID              |                 |           Usage      |
|=====+=====+
| 0   N/A  N/A           720    C   /usr/bin/graid_core   1260MiB |
+-----+-----+

```

Step 11 Go to the Graid Technology website to download the latest version of the pre-installer and make it executable, please download the package in [Latest Linux Release Notes](#).

```
$ sudo chmod +x [Filename]
```

Dependencies and Utilities

	Links
NVIDIA Driver	NVIDIA-Linux-
SupremeRAID™ Pre-installer	graid-sr-pre-installer (MD5: 9218aaa)

Driver Package

SR-1000 SR-1000-AM SR-1001 SR-1010 SR-1010-AD SR-1011

- Supported GPU: NVIDIA T1000
- Download installer: [graid-sr-installer](#)

c49cbf887ed51e3192f27d6d97d65a155 md5

Step 12 Proceed to next part of [Executing the Installer and Completing the Installation](#) to execute the installer and to complete the installation.

Executing the Installer and Completing the Installation


Step 1 Execute the installer and follow the provided steps to complete the installation.

```
$ sudo ./[filename]
```


Step 2 At the Welcome page select **Next** and click **Enter** to view the end-user license agreement.




Step 3 In the end-user license agreement, use the spacebar to scroll through the content. When you complete your review, select **Next** and click **Enter** to proceed.

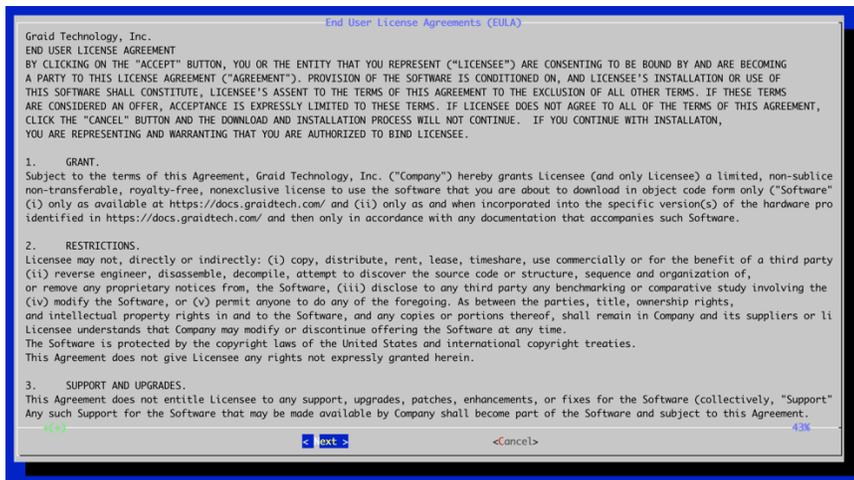

Step 4 Type **accept**, click tab, select **Next**, and click **Enter** to accept the license agreement.

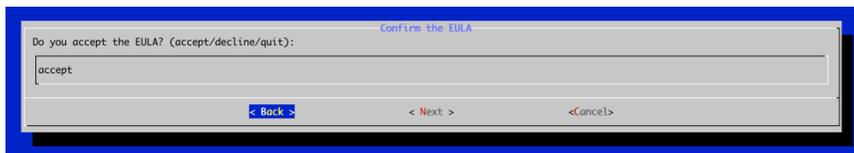

Step 5 Complete the installation, and the installer will reboot the system.

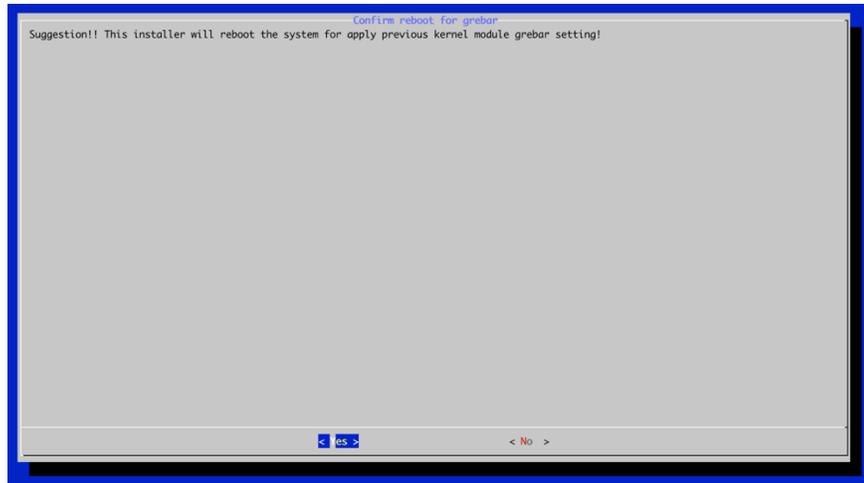

Step 6 To activate the software, apply the SupremeRAID™ license key. Please note that if you have installed driver version 2.0, a 2.0 license key is required.

```
$ sudo graidctl apply license [LICENSE_KEY]
```

Uninstalling the Software Driver

Enter the following command to uninstall the driver.

Ubuntu & Debian

```
sudo systemctl stop graid graid-mgr
sudo dpkg -r graid-sr graid-mgr
sudo reboot
```

or

```
sudo systemctl stop graid graid-mgr
sudo apt remove graid-sr -y
sudo reboot
```

RHEL & SUSE :

```
sudo systemctl stop graid graid-mgr
sudo rpm -e graid-sr graid-mgr
sudo reboot
```

or

```
sudo systemctl stop graid graid-mgr
sudo dnf remove -y graid-sr
sudo reboot
```

Setup Graphical Management Console

SupremeRAID™ offers a graphical management console for user to control the RAID resource via web portal. This intuitive interface streamlines the process, enhancing user experience and operational fluency.

Install the Graphical Management Console Service

Step 1 Download the installer and finish SupremeRAID™ installation process.

Step 2 Apply license before enable the service, the license state should be 'APPLIED'.

```
$ sudo graidctl apply license <LICENSE_KEY>
$ sudo graidctl describe license
```

Step 3 Add port of management console into firewall service, then reload it.
For RHEL/SUSE

```
$ sudo firewall-cmd --zone=public --add-port=50060/tcp
$ sudo firewall-cmd --zone=public --permanent --add-port=50060/tcp
$ sudo firewall-cmd -reload
```

For Ubuntu

```
$ sudo ufw allow 50060/tcp
$ sudo ufw reload
```


Step 4 Enable the graphical management console service and start it.

```
$ sudo systemctl enable graid-mgr.service
$ sudo systemctl start graid-mgr.service
```

OR

```
$ sudo systemctl --now enable graid-mgr.service
```

Step 5 Open web browser, key-in 'https://<SYSTEM-IP>:50060' and login with default account. Enter the host token into the SupremeRAID™ SE Management Console.

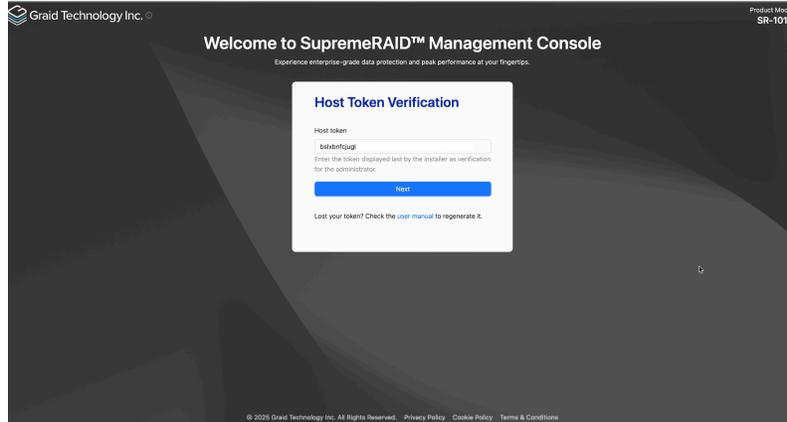


If you have lost the host token, please use the following command to retrieve the host token.


```
$ sudo graid-mgr host_token gen
```

Step 6 Set up a password. You can also use the following command to set up the admin password.

```
$ sudo graid-mgr set admin password
```

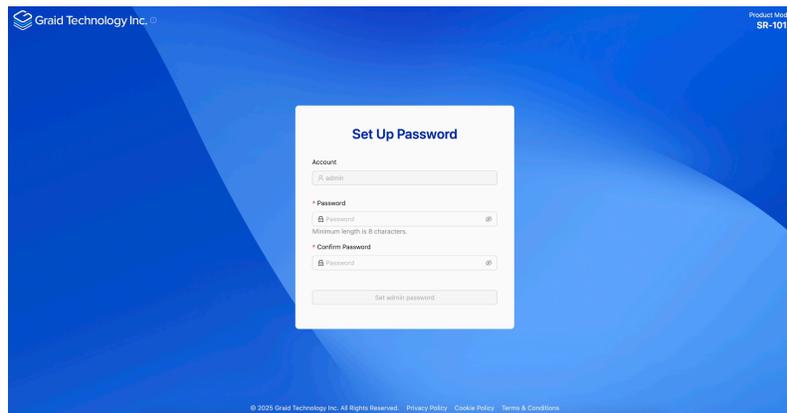

Note: The default account for graphical management console is 'admin'.

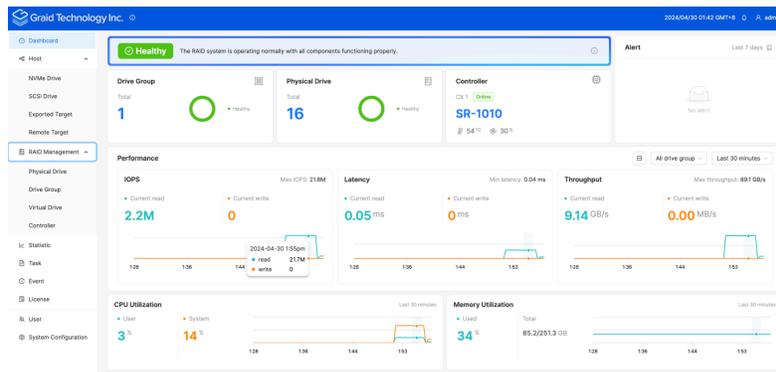

Setup the port and IP

To set up your own port and IP, please edit the configuration file `/etc/graidmgr/service.conf`. For example, if you want to set the port and IP to 8888 and 172.16.12.34 respectively, it would be as follows:

```
[common]
web_port=8888
web_addr="172.16.12.34"
```

USING THE SUPREMERAIID™ DRIVER

This section describes how to use the basic functions of SupremeRAID™. It consists of step- by-step examples and command instructions that guide you to accessing all SupremeRAID™ features.

- To activate the SupremeRAID™ service, see [Activating the SupremeRAID™ Driver and Managing the License\(s\)](#).
- To set up a local volume (Virtual Drive), see [Creating a RAID5 Virtual Drive with Five NVMe SSDs](#).
- To create drive group without journaling space, see [Creating a RAID6 Drive Group without Journaling Space](#).
- To edit journal mode of a drive group, see [Modifying Journal Mode on a RAID5 Drive Group](#).
- To set up an Initiator server, see [Creating a Physical Drive from the Remote NVMe-oF Targets](#).
- To replace the physical drive, see [Replace the Nearly Worn-out or Broken SSD](#).
- To set up a Target server, see [Exporting the Virtual Drive as an NVMe-oF Target Drive Using RDMA to the Initiator](#).
- To set up the high availability (HA) feature in one server, see [Setting Up the Dual-Controller to Enable HA and Auto-Failover](#).

Activating the SupremeRAID™ Driver and Managing the License(s)

When you install the SupremeRAID™ driver, you must activate the SupremeRAID™ service by applying a specific license key prior to use the SupremeRAID™ service, and the license key you could get from your vendor. Once this is done, you can perform activities such as creating drive groups and virtual drives to use the SupremeRAID™.

- To check the SupremeRAID™ driver version, issue:

```
$ sudo graidctl version
```

- To activate the SupremeRAID™ software, issue:

```
$ sudo graidctl apply license [LICENSE_KEY]
```

- To check the license information, issue:

```
$ sudo graidctl describe license
```

- To check the controller status, issue:

```
$ sudo graidctl list controller
```

- To replace a new controller with the same model of the controller when the old controller is failure or missing, issue:

```
$ sudo graidctl disable controller [Controller_ID]
```

```
$ sudo graidctl replace controller [Controller_ID] [LICENSE_KEY]
```

- To delete the old controller that failed, missing, or disabled, issue:

```
$ sudo graidctl delete controller [Controller_ID]
```

Output example:

```
[graid@graid demo~]$ sudo graidctl apply license XXXXXXXX-XXXXXXXX-XXXXXXXX-XXXXXXXX
✓Apply license successfully.
[graid@graid demo~]$ sudo graidctl describe license
✓Describe license successfully.
License State:      APPLIED
Controller 0:
    Name: SR-1000
    Serial Number: 1xxxxxxxxxxx0
    License State: APPLIED
    License Key: XXXXXXXX-XXXXXXXX-XXXXXXXX-XXXXXXXX
    License Type: Full
    Expiration Days: Unlimited
    NVMe / NVMe-oF PD Number: 32
Controller 1:
    Name: SR-1000
    Serial Number: 1xxxxxxxxxxx1
    License State: APPLIED
    License Key: XXXXXXXX-XXXXXXXX-XXXXXXXX-XXXXXXXX
    License Type: Full
    Expiration Days: Unlimited
    NVMe / NVMe-oF PD Number: 32
Features:
    NVMe / NVMe-oF PD Number: 32
    RAIDS: true
    RAID6: true
    Export VD via NVMe-oF: true
    Multiple Controller Support: true
[graid@graid demo~]$ sudo graidctl list controller
✓List controller successfully.


| ID | CONTROLLER MODEL | SERIAL NUMBER | NUMA | STATE  | DG  |
|----|------------------|---------------|------|--------|-----|
| 0  | SR-1000          | 1xxxxxxxxxxx0 | 0    | ONLINE | 0,1 |
| 1  | SR-1000          | 1xxxxxxxxxxx1 | 1    | ONLINE | 2,3 |


[graid@graid demo~]$ sudo graidctl disable controller 1
✓Disable controller successfully.
✓Disable controller Controller 1 successfully.
[graid@graid demo~]$ sudo graidctl disable controller 1
✓Disable controller successfully.
✓Disable controller Controller 1 successfully.
[graid@graid demo~]$ sudo graidctl replace controller 1 XXXXXXXX-XXXXXXXX-XXXXXXXX-XXXXXXXX
✓Replace controller successfully.
✓Replace controller Controller 1 successfully.
```

Note: To apply the license, you might need to provide the NVIDIA GPU serial number to Graid Technology Technical Support. Use either of the following commands to obtain the serial number for all NVIDIA cards in your environment:

```
$ sudo nvidia-smi --query-gpu=name,index,serial --format=csv
```

OR

```
$ sudo nvidia-smi -q | grep -i serial
```

Note: If two controllers are activated in the `graid.conf` system configuration file, the SupremeRAID™ service prevents you from activating any additional controllers until one of the existing controllers is removed. This safeguard prevents conflicts and ensures proper system operation. Exercise caution and consult the software documentation or seek professional assistance if needed.

Creating a RAID5 Virtual Drive with Five NVMe SSDs

To create a RAID5 virtual drive with 5 NVMe SSDs:

Step 1 Create a physical drive.

```
$ sudo graidctl create physical_drive /dev/nvme0-4
```

Step 2 Create a drive group.

```
$ sudo graidctl create drive_group raid5 0-4
```

Step 3 Create a virtual drive with a 5TB volume size.

```
$ sudo graidctl create virtual_drive 0 5T
```

Step 4 Check the device path of the new virtual drive.

```
$ sudo graidctl list virtual_drive --dg-id=0
```

Output example:

```
[graid@graid demo~]$ sudo graidctl create physical_drive /dev/nvme0-4
✓Create physical drive successfully.
✓Create physical drive PD0 (/dev/nvme0: nqn.2019-08.org.qemu:NVME0002) successfully.
✓Create physical drive PD1 (/dev/nvme1: nqn.2019-08.org.qemu:NVME0004) successfully.
✓Create physical drive PD2 (/dev/nvme2: nqn.2019-08.org.qemu:NVME0001) successfully.
✓Create physical drive PD3 (/dev/nvme3: nqn.2019-08.org.qemu:NVME0003) successfully.
✓Create physical drive PD4 (/dev/nvme4: nqn.2019-08.org.qemu:NVME0005) successfully.
[graid@graid demo~]$ sudo graidctl create drive_group raid5 0-4
✓Create drive group successfully.
✓Create drive group DG0 successfully.
[graid@graid demo~]$ sudo graidctl create virtual_drive 0 5T
✓Create virtual drive successfully.
✓Create virtual drive DG0/VD0 successfully.
[graid@graid demo~]$ sudo graidctl list virtual_drive --dg-id=0
✓List virtual drive successfully.
```

VD ID	DG ID	SIZE	DEVICE PATH	STATE	EXPORTED
0	0	4.7 TiB	/dev/gdg0n1	OPTIMAL	No

Creating a RAID6 Drive Group without Journal Space

To create a RAID6 drive group without journal space.

Step 1 Create physical drives.

```
$ sudo graidctl create physical_drive /dev/nvme0-4
```

Step 2 Create a RAID6 drive group without journal space.

```
$ sudo graidctl create drive_group raid6 0-4 --no-journal
```

Step 3 List the drive group configuration, the journal section should show 'No Journal Space'.

```
$ sudo graidctl describe drive_group [DG_ID]
```

Output example:

```
root@graid:~# sudo graidctl create drive_group raid6 0-4 --no-journal
✓Create drive group successfully.
✓Create drive group DG0 successfully.
root@graid:~# sudo graidctl describe drive_group 0
✓Describe drive group successfully.
DG ID: 0
NQN: nqn.2020-05.com.graidtech:GRAID-SR6889EAED7B8F8E64
Model: GRAID-SR
Serial: 6889EAED7B8F8E64
Firmware: 1.6.0-rc1
Mode: RAID6
Capacity: 30 GiB (32007782400 B)
Free Space: 30 GiB (32007782400 B)
Used Space: 0 B
Strip Size: 4096
State: OPTIMAL
PD IDs: [0 1 2 3 4]
Number of VDs: 0
Prefer Controller: 0
Running Controller: 0
Volatile Cache: Disabled
PD Volatile Cache: Enabled
Journal: No Journal Space
Attributes:
    spdk_bdev = DISABLE
    cc_speed = high
    rebuild_speed = high
    auto_failover = ENABLE
    init_speed = high
    resync_speed = high
```

Note: Once the drive group is set up, the journal space cannot be recreated. Without journal space, you cannot edit journal mode.

Modifying Journal Mode on a RAID5 Drive Group

To edit the journal mode of a RAID5 drive group.

Step 1 List current drive group configuration.

```
$ sudo graidctl describe drive_group
```

Step 2 Modify the journal mode.

```
$ sudo graidctl edit drive_group [DG_ID] journal [JOURNAL_MODE]
```

Output example:

```
root@graid:~# graidctl edit drive_group 0 journal always_on
✓Edit drive group successfully.
root@graid:~# graidctl describe drive_group 0
✓Describe drive group successfully.
DG ID:                0
NQN:                  nqn.2020-05.com.graidtech:GRAID-SR2D2DF2D826D71D62
Model:                GRAID-SR
Serial:               2D2DF2D826D71D62
Firmware:             1.6.0-beta
Mode:                 RAID5
Capacity:             59 GiB (63172509696 B)
Free Space:           0 B
Used Space:           59 GiB (63172509696 B)
Strip Size:           4096
State:                OPTIMAL
PD IDs:               [3 1 2]
Number of VDs:        1
Prefer Controller:    0
Running Controller:   0
Volatile Cache:       Disabled
PD Volatile Cache:    Enabled
Journal:              Always On
Attributes:
    init_speed = high
    resync_speed = high
    rebuild_speed = high
    spdk_bdev = DISABLE
    cc_speed = high
    auto_failover = ENABLE
```

Note: Only RAID5/6 can enable the journal function. If the user bypasses the creation of the journal space, it cannot be recreated.

Creating a Physical Drive from the Remote NVMe-oF Targets

To create a physical drive from the Remote NVMe-oF targets:

Step 1 Connect to the remote NVMe-oF target.

```
$ sudo graidctl connect remote_target [tcp|rdma|fc] [addr] [address family] [service id]
```

Step 2 Check the NVMe drives from the remote NVMe-oF target.

```
$ sudo graidctl list nvme_drive
```

Step 3 Create the physical drives.

```
$ sudo graidctl create physical_drive [nqn or devpath]...
```

Step 4 Create a RAID5 drive group with four physical drives.

```
$ sudo graidctl create drive_group [Mode] [PD_ID]... [flags]
```

Output example:

```
[graid@graid demo~]$ sudo graidctl connect remote_target tcp 172.16.11.81 ipv4 4420
✓Connect remote target successfully.
✓Connect remote target Target 0 successfully.
[graid@graid demo~]$ sudo graidctl list nvme_drive
✓List nvme drive successfully.
```

DEVICE PATH (4)	MODEL	NQN/WWID	NSID	CAPACITY	ADDRESS
/dev/nvme0n1	Linux	uuid.b951d877-76af-4dfe-84ee-a45164554fe2	1	22 GB	traddr=172.16.11.81,trsvcid=4420
/dev/nvme1n1	Linux	uuid.6f21ec8f-00ee-4a30-a9b8-413447b8f138	1	22 GB	traddr=172.16.11.81,trsvcid=4420
/dev/nvme2n1	Linux	uuid.34d1d6aa-41fc-4c02-a660-f75429d7d74b	1	22 GB	traddr=172.16.11.81,trsvcid=4420
/dev/nvme3n1	Linux	uuid.d846f451-31af-49ae-b3db-8ca90f454c3b	1	22 GB	traddr=172.16.11.81,trsvcid=4420

```
[graid@graid demo~]$ sudo graidctl create physical_drive uuid.b951d877-76af-4dfe-84ee-a45164554fe2 /dev/nvme1 /dev/nvme3 uuid.34d1d6aa-41fc-4c02-a660-f75429d7d74b
✓Create physical drive successfully.
✓Create physical drive PD0 (uuid.b951d877-76af-4dfe-84ee-a45164554fe2) successfully.
✓Create physical drive PD1 (/dev/nvme1: uuid.6f21ec8f-00ee-4a30-a9b8-413447b8f138) successfully.
✓Create physical drive PD2 (/dev/nvme3: uuid.d846f451-31af-49ae-b3db-8ca90f454c3b) successfully.
✓Create physical drive PD3 (uuid.34d1d6aa-41fc-4c02-a660-f75429d7d74b) successfully.
[graid@graid demo~]$ sudo graidctl create drive_group raid5 0-3
✓ Create drive group DG0 successfully.
```

Replace the Nearly Worn-out or Broken SSD.

To replace the SSD that is nearly worn-out or broken:

- Step 1** Check the status of the physical drive. If the drive is already displaying as MISSING or another abnormal status, you can skip step 2 and go directly to step 3.

```
$ sudo graidctl list pd
```

- Step 2** If the physical drive status is “online”, mark the physical drive as BAD.

```
$ sudo graidctl edit pd [OLD_PD_ID] marker bad
```

- Step 3** Replace the NVMe SSD. The state of the previous physical drive will indicate FAILED.

- Step 4** Check the NQN of the new SSD.

```
$ sudo graidctl list nvme_drive
```

- Step 5** Replace the physical drive.

```
$ sudo graidctl replace physical_drive [OLD_PD_ID]  
[DEVICE_PATH|NQN|WWID]
```

Output example:

```
[graid@graid demo ~]$ sudo graidctl edit physical_drive 0 marker bad
✓Edit physical drive successfully.
✓Edit physical drive PD0 successfully.
[graid@graid demo ~]$ sudo graidctl list physical_drive
✓List physical drive successfully.
```

PD ID (S)	DG ID	DEVICE PATH	NON/WMID	MODEL	CAPACITY	SLOT ID	STATE
0	0	/dev/gpd0	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z010A004T1L8	KCM61VUL3T20	3.2 TB	15	FAILED
1	0	/dev/gpd1	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z060A006T1L8	KCM61VUL3T20	3.2 TB	9	ONLINE
2	0	/dev/gpd2	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z010A001T1L8	KCM61VUL3T20	3.2 TB	8	ONLINE
3	0	/dev/gpd3	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A04HT1L8	KCM61VUL3T20	3.2 TB	11	ONLINE
4	0	/dev/gpd4	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A05KT1L8	KCM61VUL3T20	3.2 TB	3	ONLINE

```
[graid@graid demo ~]$ sudo graidctl list nvme_drive
✓List nvme drive successfully.
```

DEVICE PATH (1)	NON	MODEL	CAPACITY
/dev/nvme5	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z050A002T1L8	KCM61VUL3T20	3.2 TB

```
[graid@graid demo ~]$ sudo graidctl replace physical_drive 0 /dev/nvme5
✓Replace physical drive successfully.
[graid@graid demo ~]$ sudo graidctl list physical_drive
✓List physical drive successfully.
```

PD ID (S)	DG ID	DEVICE PATH	NON/WMID	MODEL	CAPACITY	SLOT ID	STATE
1	0	/dev/gpd1	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z060A006T1L8	KCM61VUL3T20	3.2 TB	15	ONLINE
2	0	/dev/gpd2	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z010A001T1L8	KCM61VUL3T20	3.2 TB	9	ONLINE
3	0	/dev/gpd3	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A04HT1L8	KCM61VUL3T20	3.2 TB	8	ONLINE
4	0	/dev/gpd4	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A05KT1L8	KCM61VUL3T20	3.2 TB	11	ONLINE
5	0	/dev/gpd5	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z050A002T1L8	KCM61VUL3T20	3.2 TB	3	REBUILD (12.69%, 54 mins remaining)

```
[graid@graid demo ~]$ sudo graidctl list drive_group
✓List drive group successfully.
```

DG ID	MODE	VD NUM	CAPACITY	FREE	USED	STATE
0	RAIDS	1	13 TB	12 TB	1.0 TB	RECOVERY

```
[graid@graid demo ~]$ sudo graidctl list virtual_drive
✓List virtual drive successfully.
```

VD ID	DG ID	SIZE	DEVICE PATH	STATE
0	0	1.0 TB	/dev/gdg0n1	RECOVERY

Note: Make sure that the system or other applications are not utilizing the physical drive before initiating the creation or replacement process.

Exporting the Virtual Drive as an NVMe-oF Target Drive Using RDMA to the Initiator

To export the virtual drive as an NVMe-oF target drive using RDMA to the initiator:

Step 1 Create the RDMA/TCP NVMe-oF export target port services.

```
$ sudo graidctl create export_target [tcp|rdma] [interface] [address family] [srvcid] [flags]
```

Step 2 Export a virtual drive as an NVMe-oF target.

```
$ sudo graidctl export virtual_drive [DG_ID] [VD_ID]... [flags]
```

Step 3 List all NVMe-oF export targets.

```
$ sudo graidctl list export_target [flags]
```

Step 4 Describe the detailed information for an NVMe-oF export target.

```
$ sudo graidctl describe export_target [PORT_ID] [flags]
```

Output example:

```
[graid@graid-demo ~]$ sudo graidctl list virtual_drive
✓List virtual drive successfully.
```

VD ID	DG ID	SIZE	DEVICE PATH	STATE	EXPORTED
0	0	93 GiB	/dev/gdg0n1	OPTIMAL	No
1	0	93 GiB	/dev/gdg0n2	OPTIMAL	No

```
[graid@graid-demo ~]$ sudo graidctl create export_target tcp eno1 ipv4 4420
✓Create export target successfully.
✓Create export target Target 0 successfully.
[graid@graid-demo ~]$ sudo graidctl export virtual_drive 0 0 -i 0
✓Export virtual drive successfully.
✓Export virtual drive VD0 into Target 0 successfully.
[graid@graid-demo ~]$ sudo graidctl describe export_target 0
✓Describe export target successfully.
Id: 0
Port: 0
TransportType: tcp
Address: 172.17.2.20
Interface: eno1
AddressFamily: ipv4
ServiceId: 4420
Subsystems:
```

NAME	DG ID	VD ID	DEVICE PATH
nqn.2020-05.com.graidtech:GRAID-SR1851EC569B6888A5:dg0vd0	0	0	/dev/gdg0n1

Setting Up the Dual-Controller to Enable HA and Auto-Failover

To activate the HA feature, you need two SupremeRAID™ cards installed in your server model and have the service activated. One drive group can only run on one controller. However, the number of drive groups assigned to each controller does not need to be equal.

If one controller fails and the auto-failover function is turned on (it is enabled by default), the drive group under the failed controller fails over immediately to the functioning controller. To ensure data integrity, the drive group statuses that failover switch to Resync mode.

Step 1 Activate two cards to enable the HA feature.

```
$ sudo graidctl apply license [LICENSE_KEY]
```

Step 2 Check the controller status.

```
$ sudo graidctl list controller
```

Step 3 Check the NVMe devices' NUMA location.

```
$ sudo graidctl list nvme_drive -n [NUMA_ID]
```

Step 4 Create physical drives.

```
$ sudo graidctl create physical_drive [DEVICE_PATH|NQN|WWID]
```

Step 5 Create two drive groups with specific controllers.

```
$ sudo graidctl create drive_group [RAID_MODE] [PD_IDS] -c  
[Controller_ID]
```

Step 6 Create a specific virtual drive with a different drive group.

```
$ sudo graidctl create virtual_drive [DG_ID] [VD_SIZE]
```

Step 7 The drive group can optionally be assigned to a specific controller by editing it.

```
$ sudo graidctl edit [DG_ID] controller [Controller_ID]
```

Note: Typically, there is no need to set the controller manually while creating a drive group because SupremeRAID™ selects the optimal controller automatically based on the chosen physical drive. However, it is possible to adjust the controller manually for the drive group by making edits to it.

Output example:

```
[graid@graid demo~]$ sudo RAIDCTL apply license XXXXXXX-XXXXXXXX-XXXXXXXX-XXXXXX
✓Apply license successfully.
[graid@graid demo~]$ sudo RAIDCTL apply license YYYYYYY-YYYYYYY-YYYYYYY-XXXXXX
✗Apply license failed: New license PD number 12 is less than old license PD number 32
[graid@graid demo~]$ sudo RAIDCTL apply license YYYYYYY-YYYYYYY-YYYYYYY-YYYYYYY
✓Apply license successfully.
[graid@graid demo~]$ sudo RAIDCTL list controller
✓List controller successfully.
```

ID	CONTROLLER MODEL	SERIAL NUMBER	NUMA	STATE	DG
0	SR-1000	1xxxxxxxxx1	0	ONLINE	
1	SR-1000	1xxxxxxxxx2	1	ONLINE	

```
[graid@graid demo~]$ sudo RAIDCTL list nvme_drive -n 0
✓List nvme drive successfully.
```

DEVICE PATH (3)	MODEL	NQN/NWID	NSID	CAPACITY	NUMA NODE	ADDRESS
/dev/nvme0n1	KCM61VUL3T20	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A04HT1L8	1	50 GiB	0	0000:22:00.0
/dev/nvme2n1	KCM61VUL3T20	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z0F0A031T1L8	1	50 GiB	0	0000:23:00.0
/dev/nvme4n1	KCM61VUL3T20	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A058T1L8	1	50 GiB	0	0000:41:00.0

```
[graid@graid demo~]$ sudo RAIDCTL list nvme_drive -n 1
✓List nvme drive successfully.
```

DEVICE PATH (3)	MODEL	NQN/NWID	NSID	CAPACITY	NUMA NODE	ADDRESS
/dev/nvme1n1	KCM61VUL3T20	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z060A006T1L8	1	50 GiB	1	0000:22:00.0
/dev/nvme3n1	KCM61VUL3T20	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A058T1L8	1	50 GiB	1	0000:23:00.0
/dev/nvme5n1	KCM61VUL3T20	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z010A002T1L8	1	50 GiB	1	0000:41:00.0

```
[graid@graid demo~]$ sudo RAIDCTL create physical_drive /dev/nvme0,2,4
✓Create physical drive successfully.
✓Create physical drive PD0 (/dev/nvme0: nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A04HT1L8) successfully.
✓Create physical drive PD1 (/dev/nvme2: nqn.2019-10.com.kioxia:KCM61VUL3T20:Z0F0A031T1L8) successfully.
✓Create physical drive PD2 (/dev/nvme4: nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A058T1L8) successfully.
[graid@graid demo~]$ sudo RAIDCTL create physical_drive /dev/nvme1,3,5
✓Create physical drive successfully.
✓Create physical drive PD3 (/dev/nvme1: nqn.2019-10.com.kioxia:KCM61VUL3T20:Z060A006T1L8) successfully.
✓Create physical drive PD4 (/dev/nvme3: nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A058T1L8) successfully.
✓Create physical drive PD5 (/dev/nvme5: nqn.2019-10.com.kioxia:KCM61VUL3T20:Z010A002T1L8) successfully.
[graid@graid demo~]$ sudo RAIDCTL list physical_drive
✓List physical drive successfully.
```

PD ID (6)	DG ID	DEVICE PATH	NQN/NWID	MODEL	CAPACITY	SLOT ID	NUMA NODE	STATE
0	N/A	/dev/gpd0	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A04HT1L8	KCM61VUL3T20	50 GiB	N/A	0	UNCONFIGURED_GOOD
1	N/A	/dev/gpd1	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z0F0A031T1L8	KCM61VUL3T20	50 GiB	N/A	0	UNCONFIGURED_GOOD
2	N/A	/dev/gpd2	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A058T1L8	KCM61VUL3T20	50 GiB	N/A	0	UNCONFIGURED_GOOD
3	N/A	/dev/gpd3	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z060A006T1L8	KCM61VUL3T20	50 GiB	N/A	1	UNCONFIGURED_GOOD
4	N/A	/dev/gpd4	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A058T1L8	KCM61VUL3T20	50 GiB	N/A	1	UNCONFIGURED_GOOD
5	N/A	/dev/gpd5	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z010A002T1L8	KCM61VUL3T20	50 GiB	N/A	1	UNCONFIGURED_GOOD

```
[graid@graid demo~]$ sudo RAIDCTL create drive_group raid5 0-2 -c 0
✓Create drive group successfully.
✓Create drive group DG0 successfully.
[graid@graid demo~]$ sudo RAIDCTL list drive_group
✓List drive group successfully.
```

DG ID	MODE	VD NUM	CAPACITY	FREE	USED	CONTROLLER	STATE
0	RAID5	0	100 GiB	100 GiB	0 B	running: 0 prefer: 0	OPTIMAL

```
[graid@graid demo~]$ sudo RAIDCTL create drive_group raid5 3-5 -c 1
✓Create drive group successfully.
✓Create drive group DG1 successfully.
[graid@graid demo~]$ sudo RAIDCTL list drive_group
✓List drive group successfully.
```

DG ID	MODE	VD NUM	CAPACITY	FREE	USED	CONTROLLER	STATE
0	RAID5	0	100 GiB	100 GiB	0 B	running: 0 prefer: 0	OPTIMAL
1	RAID5	0	100 GiB	100 GiB	0 B	running: 1 prefer: 1	OPTIMAL

```
[graid@graid demo~]$ sudo RAIDCTL edit drive_group 1 controller 0
✓Edit drive group successfully.
[graid@graid demo~]$ sudo RAIDCTL list drive_group
✓List drive group successfully.
```

DG ID	MODE	VD NUM	CAPACITY	FREE	USED	CONTROLLER	STATE
0	RAID5	0	100 GiB	100 GiB	0 B	running: 0 prefer: 0	OPTIMAL
1	RAID5	0	100 GiB	100 GiB	0 B	running: 0 prefer: 0	OPTIMAL

```
[graid@graid demo~]$ sudo RAIDCTL edit drive_group 1 controller 1
✓Edit drive group successfully.
[graid@graid demo~]$ sudo RAIDCTL create virtual_drive 0
```

Upgrading the Software

To upgrade the Linux Driver, we offer two methods: silent upgrade and manual setup. Please follow the steps below for your preferred method. Perform the following procedure exactly as described. If you encounter any abnormal failure messages during the driver upgrade, please [collect the logs](#) and contact Graid Technical Support team.

Silent Upgrade to Driver 1.7

In the SupremeRAID™ Linux Driver, if you have already installed the SupremeRAID™ driver, there's no need to uninstall it. Simply run the pre-installer and installer then include '--accept-license' in the upgrade command to automatically apply the license key to the new software.

Step 1 Stop all applications running on the virtual drive.

Step 2 Stop the management service. If you have already enabled the graphical management console, please ensure to disable it as well.

```
$ sudo systemctl stop graid
$ sudo systemctl stop graid-mgr.service
```

Step 3 Download the upgrade [1.7 driver package](#) and make it executable.

Step 4 Run the pre-installer directly, it will automatically check the required dependencies and install the NVIDIA driver.

```
$ sudo ./[filename] --yes
```

Step 5 Run the installer and add 'accept-license' to automatically apply the license key.

```
$ sudo ./[filename] --accept-license
```

Step 6 Check the driver version to ensure the upgrade is successful.

```
$ sudo graidctl version
```

Step 7 Use nvidia-smi to check the serial number of the SupremeRAID™ Card. (If the license has already been applied, this step can be skipped)

```
$ nvidia-smi -q
$ sudo graidctl apply license [LICENSE_KEY]
```

Silent Upgrade to Driver 2.0

If your current driver version is 1.7.2 update 67 or later (e.g., 1.7.2 Update 70), please follow the steps below to upgrade the software. Please note that a V2 license key is required to activate driver version 2.0. To obtain a V2 license key, please contact our sales department.

Step 1 Please ensure that the VD and DG are in an optimal state first and stop all applications running on the virtual drive.

Step 2 Apply the V2 license key

```
$ sudo graidctl apply license [LICENSE_KEY]
```

Step 3 Stop the management service. If you have already enabled the graphical management console, please ensure to disable it as well.

```
$ sudo systemctl stop graid  
$ sudo systemctl stop graid-mgr.service
```

Step 4 Please uninstall the 1.7.2 update 67 driver or later first. Refer to the [Uninstalling the Software Driver](#) section for detailed instructions.

Step 5 Download the [2.0 driver package](#) (Pre-installer & Installer) and make it executable.

Step 6 Run the 2.0 **Pre-installer** first, it will automatically check the required dependencies and install the NVIDIA driver.

```
$ sudo ./[filename] --yes
```

Step 7 Run the 2.0 installer and add 'accept-license' to automatically apply the license key.

```
$ sudo ./[filename] --accept-license
```

Step 8 Check the driver version to ensure the upgrade is successful.

```
$ sudo graidctl version
```

Step 9 Use nvidia-smi to check the serial number of the SupremeRAID™ Card. (If the license has already been applied, this step can be skipped). Please note that a 2.0 license key is required to activate driver version 2.0.

```
$ nvidia-smi -q  
$ sudo graidctl apply license [LICENSE_KEY]
```

If your current driver version is earlier than 1.7.2 Update 67 (e.g., 1.7.2 Update 61), you must first upgrade to version 1.7.2 update 67 before proceeding with the upgrade to version 2.0. Please follow the steps below to upgrade the software. Please note that a V2 license key is required to activate driver version 2.0. To obtain a V2 license key, please contact our sales department.

Step 1 Stop all applications running on the virtual drive.

Step 2 Stop the management service. If you have already enabled the graphical management console, please ensure to disable it as well.

```
$ sudo systemctl stop graid
$ sudo systemctl stop graid-mgr.service
```

Step 3 Download the [1.7.2 Update 67 driver package](#) and make it executable.

Step 4 Run the 1.7.2 Update 67 **Pre-installer** first, it will automatically check the required dependencies and install the NVIDIA driver.

```
$ sudo ./[filename] --yes
```

Step 5 Run the 1.7.2 Update 67 installer and add 'accept-license' to automatically apply the license key.

```
$ sudo ./[filename] --accept-license
```

Step 6 Check the driver version to ensure the upgrade is successful.

```
$ sudo graidctl version
```

Step 7 Use nvidia-smi to check the serial number of the SupremeRAID™ Card. (If the license has already been applied, this step can be skipped)

```
$ nvidia-smi -q
$ sudo graidctl apply license [LICENSE_KEY]
```

Step 8 After successfully installing driver version 1.7.2 Update 67, at this stage the VD and DG may temporarily enter a transforming state. Please wait until both the VD and the DG reach an optimal state before proceeding the next step.

Step 9 Apply the V2 license key

```
$ sudo graidctl apply license [LICENSE_KEY]
```

Step 10 Uninstall the 1.7.2 Update 67 driver. Please refer to the [Uninstalling the Software Driver](#) section for detailed instructions.

Step 11 Download the [2.0 driver package](#) (Pre-installer & Installer) and make it executable (repeat Step 4 to Step 7). Please note that a 2.0 license key is required to activate driver version 2.0.

Manual Upgrade to Driver 1.7

If you need to perform a manual upgrade, please follow the steps below to upgrade the software.

Step 1 Stop all applications running on the virtual drive.

Step 2 Stop the management service. If you have already enabled the graphical management console, please ensure to disable it as well.

```
$ sudo systemctl stop graid
$ sudo systemctl stop graid-mgr.service
```

Step 3 Make sure the SupremeRAID™ kernel module is unloaded.

```
$ sudo rmmod graid_nvidia graid
```

Step 4 Check the NVIDIA driver DKMS status.

```
$ sudo dkms status nvidia
```

Step 5 The version of the NVIDIA driver installed in the kernel must match the SupremeRAID™ driver version. If they do not match, perform the following steps to uninstall the NVIDIA driver.

A Dracut the initramfs (Centos, Rocky Linux, AlmaLinux, and RHEL).

```
$ sudo dracut --omit-drivers "nvidia graid" -f
```

B Uninstall the NVIDIA driver.

```
$ sudo ./usr/bin/nvidia-uninstall
```

C Install the new NVIDIA driver.

```
$ sudo ./NVIDIA-Linux-x86_64-550.67.run -s --no-systemd --no-opengl-files --no-nvidia-modprobe --dkms --disable-nouveau
```

D Reboot the server.

Step 6 Uninstall the package using the command appropriate for your operating system.

- For Centos, Rocky Linux, AlmaLinux, RHEL, openSUSE, and SLES:

```
$ sudo rpm -e graid-sr
```

- For Ubuntu:

```
$ sudo dpkg -r graid-sr
```

Step 7 Confirm that the SupremeRAID™ module is unloaded. There should not be any output.

```
$ sudo lsmod | grep graid
```

Step 8 Confirm that the SupremeRAID™ package is uninstalled using the command appropriate for your operating system, the output should be empty.

- For Centos, Rocky Linux, AlmaLinux, RHEL, openSUSE, and SLES:

```
$ sudo rpm -qa | grep graid
```

- For Ubuntu:

```
$ sudo dpkg -l | grep graid
```

Step 9 Go to the Graid Technology website to download the latest version of the pre-installer and make it executable, please download the package in [Latest Linux Release Notes](#).

```
$ sudo chmod +x [Filename]
```

Dependencies and Utilities

	Links
NVIDIA Driver	NVIDIA-Linux-
SupremeRAID™ Pre-installer	graid-sr-pre-installer (MD5: 8218aa:)

Driver Package

SR-1000
SR-1000-AM
SR-1001
SR-1010
SR-1010-AD
SR-1011

- Supported GPU: NVIDIA T1000
- Download Installer: [graid-sr-installer-](#)

c49cbf887ed51e3192f27ad07a65a155
md5

Step 10 Proceed to [Executing the Installer and Completing the Installation](#) to execute the installer and to complete the installation.

Step 11 Start the SupremeRAID™ service.

```
$ sudo systemctl enable graid
```

```
$ sudo systemctl start graid
```

OR

```
$ sudo systemctl --now enable graid
```

Note: If you upgrade from version 1.2.x to version 1.6.x of the SupremeRAID™ driver, the device path changes from /dev/gvdXn1 to /dev/gdgXnY.

Manual Upgrade to Driver 2.0

If your current driver version is 1.7.2 update 67 or later (e.g., 1.7.2 Update 70), please follow the steps below to upgrade the software. Please note that a V2 license key is required to activate driver version 2.0. To obtain a V2 license key, please contact our sales department.

Step 1 Please ensure that the VD and DG are in an optimal state first and stop all applications running on the virtual drive.

Step 2 Apply the V2 license key

```
$ sudo graidctl apply license [LICENSE_KEY]
```

Step 3 Stop the management service. If you have already enabled the graphical management console, please ensure to disable it as well.

```
$ sudo systemctl stop graid
$ sudo systemctl stop graid-mgr.service
```

Step 4 Make sure the SupremeRAID™ kernel module is unloaded.

```
$ sudo rmmod graid_nvidia graid
```

Step 5 Check the NVIDIA driver DKMS status.

```
$ sudo dkms status nvidia
```

Step 6 The version of the NVIDIA driver installed in the kernel must match the SupremeRAID™ driver version. If they do not match, perform the following steps to uninstall the NVIDIA driver.

A Dracut the initramfs (Centos, Rocky Linux, AlmaLinux, and RHEL).

```
$ sudo dracut --omit-drivers "nvidia graid" -f
```

B Uninstall the NVIDIA driver.

```
$ sudo ./usr/bin/nvidia-uninstall
```

C Install the new NVIDIA driver.

```
$ sudo ./NVIDIA-Linux-x86_64-550.67.run -s --no-systemd --no-opengl-files --no-nvidia-modprobe --dkms --disable-nouveau
```

D Reboot the server.

Step 7 Uninstall the package using the command appropriate for your operating system.

For Centos, Rocky Linux, AlmaLinux, RHEL, openSUSE, and SLES:

```
$ sudo rpm -e graid-sr
```

For Ubuntu:

```
$ sudo dpkg -r graid-sr
```

Step 8 Confirm that the SupremeRAID™ module is unloaded. There should not be any output.

```
$ sudo lsmod | grep graid
```

Step 9 Confirm that the SupremeRAID™ package is uninstalled using the command appropriate for your operating system, the output should be empty.

- For Centos, Rocky Linux, AlmaLinux, RHEL, openSUSE, and SLES:

```
$ sudo rpm -qa | grep graid
```

- For Ubuntu:

```
$ sudo dpkg -l | grep graid
```

Step 10 Go to the Graid Technology website to download the 2.0 version of the **Pre-installer** and make it executable, please download the package in [Latest Linux Release Notes](#).

```
$ sudo chmod +x [Filename]
```

Dependencies and Utilities

	Links
NVIDIA Driver	NVIDIA-Linux-
SupremeRAID™ Pre-installer	graid-sr-pre-installer (MD5: 8218aac)

Driver Package

SR-1000 SR-1000-AM SR-1001 SR-1010 SR-1010-AD SR-1011

- Supported GPU: NVIDIA T1000
- Download Installer: [graid-sr-installer-](#)

c49cbf887ed51e3192f27ad07a65a155
md5

Step 11 Proceed to [Executing the Installer and Completing the Installation](#) to execute the installer and to complete the installation.

Step 12 Start the SupremeRAID™ service.

```
$ sudo systemctl enable graid
$ sudo systemctl start graid
```

OR

```
$ sudo systemctl --now enable graid
```

If your current driver version is earlier than 1.7.2 Update 67 (e.g., 1.7.2 Update 61), you must first upgrade to version 1.7.2 update 67 before proceeding with the upgrade to version 2.0. Please follow the steps below to upgrade the software. Please note that a V2 license key is required to activate driver version 2.0. To obtain a V2 license key, please contact our sales department.

Step 1 Stop all applications running on the virtual drive.

Step 2 Stop the management service. If you have already enabled the graphical management console, please ensure to disable it as well.

```
$ sudo systemctl stop graid
$ sudo systemctl stop graid-mgr.service
```

Step 3 Make sure the SupremeRAID™ kernel module is unloaded.

```
$ sudo rmmod graid_nvidia graid
```

Step 4 Check the NVIDIA driver DKMS status.

```
$ sudo dkms status nvidia
```

Step 5 The version of the NVIDIA driver installed in the kernel must match the SupremeRAID™ driver version. If they do not match, perform the following steps to uninstall the NVIDIA driver.

A Dracut the initramfs (Centos, Rocky Linux, AlmaLinux, and RHEL).

```
$ sudo dracut --omit-drivers "nvidia graid" -f
```

B Uninstall the NVIDIA driver.

```
$ sudo ./usr/bin/nvidia-uninstall
```

C Install the new NVIDIA driver.

```
$ sudo ./NVIDIA-Linux-x86_64-550.67.run -s --no-systemd --no-opengl-files --no-nvidia-modprobe --dkms --disable-nouveau
```

D Reboot the server.

Step 6 Uninstall the package using the command appropriate for your operating system.

- For Centos, Rocky Linux, AlmaLinux, RHEL, openSUSE, and SLES:

```
$ sudo rpm -e graid-sr
```

- For Ubuntu:

```
$ sudo dpkg -r graid-sr
```

Step 7 Confirm that the SupremeRAID™ module is unloaded. There should not be any output.

```
$ sudo lsmod | grep graid
```

Step 8 Confirm that the SupremeRAID™ package is uninstalled using the command appropriate for your operating system, the output should be empty.

- For Centos, Rocky Linux, AlmaLinux, RHEL, openSUSE, and SLES:

```
$ sudo rpm -qa | grep graid
```

- For Ubuntu:

```
$ sudo dpkg -l | grep graid
```

Step 9 Go to the Graid Technology website to download the 1.7.2 update 67 version of the Pre-installer and make it executable, please download the package in [Linux Release Notes](#).

```
$ sudo chmod +x [Filename]
```

Dependencies and Utilities

	Links
NVIDIA Driver	NVIDIA-Linux-
SupremeRAID™ Pre-installer	graid-sr-pre-installer (MD5: 8218aa...

Driver Package

SR-1000 SR-1000-AM SR-1001 SR-1010 SR-1010-AD SR-1011

- Supported GPU: NVIDIA T1000
- Download Installer: [graid-sr-installer-](#)

c49cbf887ed51e3192f27ad07a65a155
md5

Step 10 Proceed to [Executing the Installer and Completing the Installation](#) to execute the 1.7.2 update 67 installer and to complete the installation.

Step 11 After successfully installing driver version 1.7.2 update 67, at this stage the VD and DG may temporarily enter a transforming state. Please wait until both the VD and the DG reach an optimal state before proceeding with next step.

Step 12 Apply the V2 license key

```
$ sudo graidctl apply license [LICENSE_KEY]
```

Step 13 Uninstall the 1.7.2 update 67 driver. Please refer to the [Uninstalling the Software Driver](#) section for detailed instructions.

Step 14 Download the [2.0 driver package](#) (Pre-installer & Installer) and make it executable (repeat Step 9 to Step 10). Please note that a 2.0 license key is required to activate driver version 2.0.

Step 15 Start the SupremeRAID™ service.

```
$ sudo systemctl enable graid
```

```
$ sudo systemctl start graid
```

OR

```
$ sudo systemctl --now enable graid
```

Replacing a SupremeRAID™ Card

Step 1 Stop all applications running on the virtual drive.

Step 2 Stop the management service. If you have already enabled the graphical management console, please ensure to disable it as well.

```
$ sudo systemctl stop graid
$ sudo systemctl stop graid-mgr.service
```

Step 3 Back up the configuration file.

```
$ sudo cp /etc/graid.conf graid.conf.bak
```

Step 4 Make sure the SupremeRAID™ kernel module is unloaded.

```
$ sudo rmmod graid_nvidia graid
```

Step 5 Check the NVIDIA driver DKMS status.

```
$ sudo dkms status nvidia
```

Note: The NVIDIA driver version installed in the kernel must match the SupremeRAID™ driver version. Perform step 5 if the versions do not match.

Step 6 Uninstall the package using the command appropriate for your operating system:

- For Centos, Rocky Linux, AlmaLinux, RHEL, openSUSE, and SLES:

```
$ sudo rpm -e graid-sr
```

- For Ubuntu:

```
$ sudo dpkg -r graid-sr
```

Step 7 Confirm that the SupremeRAID™ module is unloaded, the output should be empty.

```
$ sudo lsmod | grep graid
```

Step 8 Confirm that the SupremeRAID™ package is uninstalled using the command appropriate for your operating system, the output should be empty.

- Centos, Rocky Linux, AlmaLinux, RHEL, openSUSE, and SLES:

```
$ sudo rpm -qa | grep graid
```

- Ubuntu:

```
$ sudo dpkg -l | grep graid
```

Step 9 Power-off the server, and then install the new card into the server.

Step 10 Power-on the server.

Step 11 Go to the Graid Technology website to download the latest version of the pre-installer and make it executable, please download the package in [Latest Linux Release Notes](#).

```
$ sudo chmod +x [Filename]
```

Dependencies and Utilities

	Links
NVIDIA Driver	NVIDIA-Linux-x86_64-550.67.run ↗
SupremeRAID™ Pre-installer	graid-sr-pre-installer-1.6.1-134-x86_64.run ↗ (MD5: 8218aaa3efaa0050cf21742b218f600b)

Driver Package

SR-1000 SR-1000-AM SR-1001 SR-1010 SR-1010-AD SR-1011

- Supported GPU: NVIDIA T1000
- Download Installer: [graid-sr-installer-1.6.1-000-334-324.run](#) ↗

c49cbf887ed51e3192f27ad07a65a155
md5

Step 12 Proceed to [Executing the Installer and Completing the Installation](#) to execute the installer and to complete the installation.

Step 13 When the installer finishes, restart the SupremeRAID™ service.

```
$ sudo systemctl restart graid
```

If the settings do not return properly after restarting SupremeRAID™ service, see

[Manually Migrating the RAID Configuration Between](#) Hosts.

Note: If you are replacing a card in the system, deleting any inactive or invalid licenses associated with the old card is essential. Failing to do so may prevent other cards from becoming active, which is key for multi-controller systems.

COMMANDS AND SHORTCUTS

Syntax

Use the following syntax to run `graidctl` commands from the terminal window:

```
$ sudo graidctl [command] [OBJECT_TYPE] [OBJECT_ID] [flags]
```

where `command`, `OBJECT_TYPE`, `OBJECT_ID`, and `flags` are:

- **command:** Specifies the operation to perform on one or more resources (for example `create`, `list`, `describe`, and `delete`).
- **OBJECT_TYPE:** Specifies the object type. Object types are case-sensitive (for example `license`, `physical_drive`, and `drive_group`).
- **OBJECT_ID:** Specifies the object ID. Some commands support simultaneous operations on multiple objects. You can specify the `OBJECT_ID` individually or use a dash to describe an `OBJECT_ID` range. For example, to delete physical drives 1, 3, 4, and 5 simultaneously, issue the command:

```
$ sudo graidctl delete physical_drive 1 3-5
```

- **flags:** Specifies optional flags. For example:

- `-force` forces the deletion of a physical drive.

```
$ sudo graidctl delete physical_drive 0 -force
```

- `-json` prints output in JSON format. This flag can also assist with API implementation.

```
$ sudo graidctl list virtual_drive --format json
```

For help, run `graidctl help` from the terminal window.

Command and Subcommand Quick Reference

General

Category	Commands	Alias	Sub-Commands	alias
Common	version			
License	apply		license	lic
	describe	desc	license	lic

Resources

Category	Commands	Alias	Sub-Commands	alias
NVMe Drive	list	l, ls	nvme_drive	nd
SCSi Drive	list	l, ls	scsi_drive	sd
Physical Drive	create	c, cre, crt	physical_drive	pd
	icreate	ic, icre, icrt	physical_drive	pd
	delete	d, del	physical_drive	pd
	describe	desc	physical_drive	pd
	edit	e	physical_drive	pd
	list	l, ls	physical_drive	pd
	replace	rep	physical_drive	pd

Category	Commands	Alias	Sub-Commands	alias
Drive Group	create	c, cre, crt	drive_group	dg
	icreate	ic, icre, icrt	drive_group	dg
	delete	d, del	drive_group	dg
	describe	desc	drive_group	dg
	edit	e	drive_group	dg
	list	l, ls	drive_group	dg
Virtual Drive	create	c, cre, crt	virtual_drive	vd
	icreate	ic, icre, icrt	virtual_drive	vd
	delete	d, del	virtual_drive	vd
	describe	desc	virtual_drive	vd
	edit	e	virtual_drive	vd
	list	l, ls	virtual_drive	vd
Controller	enable		controller	cx
	disable		controller	cx
	delete	d, del	controller	cx
	list	l, ls	controller	cx
	replace	rep	controller	cx
MD Boot Drive	import	im, imp	md_drive	md
	replace	rep	md_drive	md

Category	Commands	Alias	Sub-Commands	alias
Config	describe	desc	config	conf
	edit	e	config	conf
	delete	d, del	config	conf
	restore	re	Config	conf
Event	delete	d, del	event	ev
	list	l, ls	event	ev

Features

Category	Commands	Alias	Sub-Commands	alias
Consistency Check	describe	desc	consistency_check	cc
	set		consistency_check	cc
	start		consistency_check	cc
	stop		consistency_check	cc
Export NVMe-oF	create	c, cre, crt	export_target	nt
	describe	desc	export_target	nt
	delete	d, del	export_target	nt
	list	l, ls	export_target	nt
	export	ex, exp	virtual_drive	vd
	unexport	unex, unexp	virtual_drive	vd

Category	Commands	Alias	Sub-Commands	alias
Import NVMe-oF	connect	conn	remote_target	rt
	disconnect	dis, disconn	remote_target	rt
	list	l, ls	remote_target	rt
Copyback	start		copyback	cp
	stop		copyback	cp

Managing Licenses

You can apply the license and check license information.

Applying the License


To apply the license and complete the installation, issue the following command:

```
$ sudo graidctl apply license [LICENSE_KEY] [flags]
```

OR

```
$ sudo graidctl apply lic [LICENSE_KEY] [flags]
```

Output example: for invalid and valid licenses is shown below:

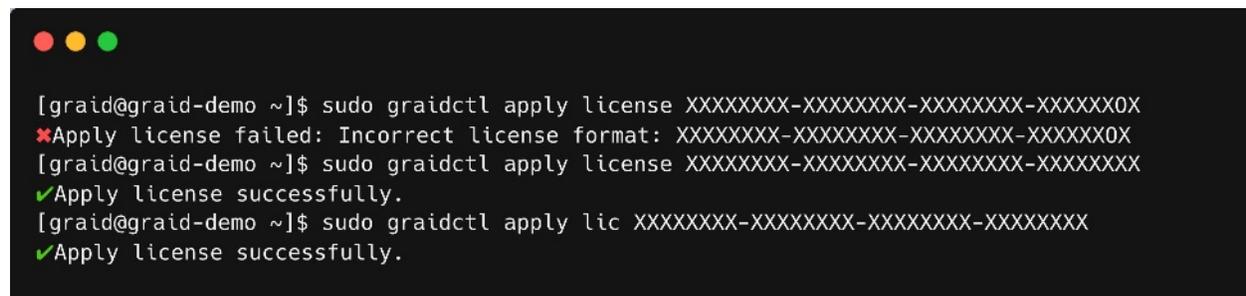A terminal window with a black background and white text. It shows two attempts to apply a license. The first attempt uses the 'license' flag and fails with an error message: 'Apply license failed: Incorrect license format: XXXXXXXX-XXXXXXX-XXXXXXX-XXXXXX0X'. The second attempt uses the 'lic' flag and succeeds with the message: 'Apply license successfully.'

```
[graid@graid-demo ~]$ sudo graidctl apply license XXXXXXXX-XXXXXXX-XXXXXXX-XXXXXX0X
✘Apply license failed: Incorrect license format: XXXXXXXX-XXXXXXX-XXXXXXX-XXXXXX0X
[graid@graid-demo ~]$ sudo graidctl apply license XXXXXXXX-XXXXXXX-XXXXXXX-XXXXXXX
✔Apply license successfully.
[graid@graid-demo ~]$ sudo graidctl apply lic XXXXXXXX-XXXXXXX-XXXXXXX-XXXXXXX
✔Apply license successfully.
```

Note: When applying the license, you must provide the serial number of the NVIDIA GPU to Graid Technology Technical Support.

To obtain NVIDIA GPU serial number, issue the following command:

```
$ sudo nvidia-smi --query-gpu=name,index,serial --format=csv
```

OR

```
$ sudo nvidia-smi -q | grep -i serial
```

This command lists all NVIDIA cards in your environment and their serial number.

Checking License Information

To obtain the license information, issue the following command:

```
$ sudo graidctl describe license [flags]
```

OR

```
$ sudo graidctl desc lic [flags]
```

Output example:

```
[graid@graid-demo ~]$ sudo graidctl describe license
✔Describe license successfully.
Controller 0:
    Name: SR-1000
    Serial Number: 1352424094196
    License State: APPLIED
    License Key: XXXXXXXX-XXXXXXX-XXXXXXX-XXXXXXX
    License Type: Full
    Expiration Days: Unlimited
    NVMe / NVMe-oF PD Number: 32

Controller 1:
    Name: SR-1000
    Serial Number: 1320439569794
    License State: APPLIED
    License Key: XXXXXXXX-XXXXXXX-XXXXXXX-XXXXXXX
    License Type: Full
    Expiration Days: Unlimited
    NVMe / NVMe-oF PD Number: 32

Features:
    NVMe / NVMe-oF PD Number: 32
    RAID5: true
    RAID6: true
    Export VD via NVMe-oF: true
    Multiple Controller Support: true
```

Output content:

Field	Description
Name	Product SKU
Serial Number	Applied controller's serial number
License State	License state (see the following table)
License Key	Applied license key

Field	Description
License Type	License type (Full or Essential)
Expiration Days	Expiration date of the license key
NVMe / NVMe-oF PD Number	This license allows for a maximum number of PDs for NVMe/NVMe-oF.

License state:

State	Description
UNAPPLIED	License was not applied.
APPLIED	A valid license was applied.
INVALID	A valid license was applied, but a valid RAID card cannot be detected.

Feature support:

Features	Description	Value
NVMe / NVMe-oF PD Number	Accept total create maximum amount of the PD	Integer
RAID5	Support RAID5 function	Boolean
RAID6	Support RAID6 function	Boolean
Export VD via NVMe-oF	Support Export NVMe-of function	Boolean
Multiple Controller Support	Support Multiple Controller function	Boolean


Checking the SupremeRAID™ Driver Version

You can prompt the version command to check SupremeRAID™ service information.

To obtain the SupremeRAID™ service version information, issue the following command:

```
$ sudo graidctl version [flags]
```

Output example:

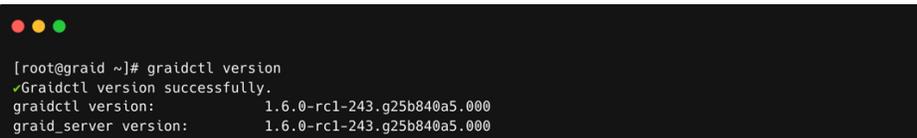

```
[root@graid ~]# graidctl version
✓Graidctl version successfully.
graidctl version:      1.6.0-rc1-243.g25b840a5.000
graid_server version: 1.6.0-rc1-243.g25b840a5.000
```

Viewing Host Drive Information

Listing NVMe Drives

To list all the directly attached NVMe drives or NVMe-oF target drives that can be used to create physical drives, issue the following command:

```
$ sudo graidctl list nvme_drive [flags]
```

OR

```
$ sudo graidctl ls nd [flags]
```

Related command flags:

Flag	Description
-h, --help	Help for the list nvme_drive command
-n, --numa-node	[int32] Filter by numa node Default: -1

Output example:

```
[graid@graid-demo ~]$ sudo graidctl list nvme_drive
✔List nvme drive successfully.
```

DEVICE PATH(4)	MODEL	NQN/WWID	NSID	CAPACITY	NUMA NODE	ADDRESS
/dev/nvme0	KCM61VUL3T20	nqn.2019-10.com.kloxia:KCM61VUL3T20:Z080A064T1L8	1	3.2 TB	1	0000:e4:00.0
/dev/nvme1	KCM61VUL3T20	nqn.2019-10.com.kloxia:KCM61VUL3T20:Z050A002T1L8	1	3.2 TB	0	0000:01:00.0
/dev/nvme2	KCM61VUL3T20	nqn.2019-10.com.kloxia:KCM61VUL3T20:Z080A05KT1L8	1	3.2 TB	1	0000:e1:00.0
/dev/nvme3	KCM61VUL3T20	nqn.2019-10.com.kloxia:KCM61VUL3T20:X0N0A015T1L8	1	3.2 TB	0	0000:43:00.0

```
[graid@graid-demo ~]$ sudo graidctl ls nd
✔List nvme drive successfully.
```

DEVICE PATH(4)	MODEL	NQN/WWID	NSID	CAPACITY	NUMA NODE	ADDRESS
/dev/nvme0	KCM61VUL3T20	nqn.2019-10.com.kloxia:KCM61VUL3T20:Z080A064T1L8	1	3.2 TB	1	0000:e4:00.0
/dev/nvme1	KCM61VUL3T20	nqn.2019-10.com.kloxia:KCM61VUL3T20:Z050A002T1L8	1	3.2 TB	0	0000:01:00.0
/dev/nvme2	KCM61VUL3T20	nqn.2019-10.com.kloxia:KCM61VUL3T20:Z080A05KT1L8	1	3.2 TB	1	0000:e1:00.0
/dev/nvme3	KCM61VUL3T20	nqn.2019-10.com.kloxia:KCM61VUL3T20:X0N0A015T1L8	1	3.2 TB	0	0000:43:00.0

```
[graid@graid-demo ~]$ sudo graidctl ls nd -n 1
✔List nvme drive successfully.
```

DEVICE PATH(2)	MODEL	NQN/WWID	NSID	CAPACITY	NUMA NODE	ADDRESS
/dev/nvme0	KCM61VUL3T20	nqn.2019-10.com.kloxia:KCM61VUL3T20:Z080A064T1L8	1	3.2 TB	1	0000:e4:00.0
/dev/nvme2	KCM61VUL3T20	nqn.2019-10.com.kloxia:KCM61VUL3T20:Z080A05KT1L8	1	3.2 TB	1	0000:e1:00.0

Output content:

Field	Description
DEVICE PATH	Block device path of the drive
NQN	NVMe Qualified Name of the drive
MODEL	Model number of the drive
CAPACITY	Capacity of the drive
NUMA NODE	NUMA NODE of the drive

Note: The serial number will only be displayed when using --format json.

Listing SAS/SATA Drives

To list all SAS/SATA drives that can be used as physical drives, issue the following command:

```
$ sudo graidctl list scsi_drive
```

OR

```
$ sudo ls sd
```

Output example:

```
[graid@graid-demo ~]$ sudo graidctl list scsi_drive
✔List scsi drive successfully.
+-----+-----+-----+-----+
| DEVICE PATH | WWID | MODEL | CAPACITY |
+-----+-----+-----+-----+
| /dev/sda | t10.ATA INTEL SSDSC2KB240G7 BTYS83010GKS240AGN | INTEL SSDSC2KB24 | 240 GB |
| /dev/sdb | t10.ATA INTEL SSDSC2KB240G8 BTYF052107VH240AGN | INTEL SSDSC2KB24 | 240 GB |
+-----+-----+-----+-----+

[graid@graid-demo ~]$ sudo graidctl ls sd
✔List scsi drive successfully.
+-----+-----+-----+-----+
| DEVICE PATH | WWID | MODEL | CAPACITY |
+-----+-----+-----+-----+
| /dev/sda | t10.ATA INTEL SSDSC2KB240G7 BTYS83010GKS240AGN | INTEL SSDSC2KB24 | 240 GB |
| /dev/sdb | t10.ATA INTEL SSDSC2KB240G8 BTYF052107VH240AGN | INTEL SSDSC2KB24 | 240 GB |
+-----+-----+-----+-----+
```

Output content:

Field	Description
DEVICE PATH	Block device path of the drive
WWID	Worldwide Identification of the drive
MODEL	Model number of the drive
CAPACITY	Capacity of the drive

Managing Physical Drives

Creating a Physical Drive

To create a physical drive, issue the following command:

```
$ sudo graidctl create physical_drive [DEVICE_PATH|NQN|WWID] [flag]
```

OR

```
$ sudo graidctl c pd [DEVICE_PATH|NQN|WWID] [flag]
```

Related command flags:

Flag	Description
-h, --help	Help for physical_drive
-c, --current-sid string	Current SID password of the SEDs. Can be used with either --sed-take-ownership or --sed-import-key
-i, --sed-import-key	Import the "SED key" of the Self-Encrypting Drives (SEDs). It will ask for the current SID password, which must also be the admin's password. The password will be saved as the SED key of the drive
-k, --new-sed-key string	Set a new SED key of the drives. Can only be used with --sed-take-ownership
-n, --no-current-sid	Indicates that Block SID authentication is currently disabled on the SEDs. Can only be used with --sed-take-ownership
-o, --sed-take-ownership	Take ownership of the SEDs with the specified new SED key. Can be used with one of --no-current-sid, --new-sed-key, and --psid to specify the authentication method
-p, --psid string	Physical Secure ID (PSID) of SEDs. Can only be used with --sed-take-ownership

Flag	Description
-p, --confirm-to-erase	Confirm to erase all data on the SED supporting physical drives forcibly
-w, --wipe-metadata	Wipe metadata forcibly

The following figure shows an output example when creating multiple physical drives simultaneously with the device path and NQN.

```
[graid@graid-demo ~]$ sudo graidctl create physical_drive /dev/nvme0-3
✓Create physical drive successfully.
✓Create physical drive PD0 (/dev/nvme0: nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A064T1L8) successfully.
✓Create physical drive PD1 (/dev/nvme1: nqn.2019-10.com.kioxia:KCM61VUL3T20:Z050A002T1L8) successfully.
✓Create physical drive PD2 (/dev/nvme2: nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A05KT1L8) successfully.
✓Create physical drive PD3 (/dev/nvme3: nqn.2019-10.com.kioxia:KCM61VUL3T20:X0N0A015T1L8) successfully.
[graid@graid-demo ~]$ sudo graidctl create physical_drive nqn.2019-10.com.kioxia:KCM61VUL3T20:X0X0A01ET1L8 \
> nqn.2019-10.com.kioxia:KCM61VUL3T20:Z0F0A031T1L8
✓Create physical drive PD8 (nqn.2019-10.com.kioxia:KCM61VUL3T20:X0X0A01ET1L8) successfully.
✓Create physical drive PD9 (nqn.2019-10.com.kioxia:KCM61VUL3T20:Z0F0A031T1L8) successfully.
[graid@graid-demo ~]$ sudo graidctl c pd /dev/nvme4,7,8
✓Create physical drive successfully.
✓Create physical drive PD10 (/dev/nvme4: nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A032T1L8) successfully.
✓Create physical drive PD11 (/dev/nvme7: nqn.2019-10.com.kioxia:KCM61VUL3T20:Z050A078T1L8) successfully.
✓Create physical drive PD12 (/dev/nvme8: nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A09XT1L8) successfully.
```

Note: Be sure the system or other applications are not on the physical drive before creating or replacing the drive.

Listing the Physical Drives

To list all the physical drives, issue the following command:

```
$ sudo graidctl list physical_drive [flag]
```

OR

```
$ sudo graidctl ls pd [flag]
```

Related command flags:

Flag	Description
-h, --help	Help for the list physical_drive command
-d, --dg-id	[int32] Filter result by drive group ID Default: -1
-f, --free	List unused PDs
-l, --locating	List locating PDs
-n, --numa-node	[int32] Filter by NUMA node Default: -1

Note: The serial number will only be displayed when using --format json.

Output example:

```
[graid@graid-demo ~]$ sudo graidctl list physical drive
✔List physical drive successfully.
```

PD ID (10)	DG ID	DEVICE PATH	NQN/WWID	MODEL	CAPACITY	SLOT ID	NUMA NODE	STATE
0	N/A	/dev/gpd0	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z000A038T1L8	KCM61VUL3T20	3.2 TB	0	1	UNCONFIGURED_GOOD
1	N/A	/dev/gpd1	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z000A060T1L8	KCM61VUL3T20	3.2 TB	1	0	UNCONFIGURED_GOOD
2	N/A	/dev/gpd2	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z000A044T1L8	KCM61VUL3T20	3.2 TB	2	1	UNCONFIGURED_GOOD
3	N/A	/dev/gpd3	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z050A002T1L8	KCM61VUL3T20	3.2 TB	3	0	UNCONFIGURED_GOOD
4	N/A	/dev/gpd4	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z010A003T1L8	KCM61VUL3T20	3.2 TB	4	1	UNCONFIGURED_GOOD
5	N/A	/dev/gpd5	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z060A005T1L8	KCM61VUL3T20	3.2 TB	5	0	UNCONFIGURED_GOOD
6	N/A	/dev/gpd6	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z0F0A031T1L8	KCM61VUL3T20	3.2 TB	6	1	UNCONFIGURED_GOOD
7	N/A	/dev/gpd7	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z010A002T1L8	KCM61VUL3T20	3.2 TB	7	0	UNCONFIGURED_GOOD
32	4	/dev/nvme0n1	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z000A044T1L8	KCM61VUL3T20	3.2 TB	N/A	1	ONLINE
33	4	/dev/nvme1n1	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z010A001T1L8	KCM61VUL3T20	3.2 TB	N/A	1	ONLINE

```
[graid@graid-demo ~]$ sudo graidctl ls pd
✔List physical drive successfully.
```

PD ID (10)	DG ID	DEVICE PATH	NQN/WWID	MODEL	CAPACITY	SLOT ID	NUMA NODE	STATE
0	N/A	/dev/gpd0	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z000A038T1L8	KCM61VUL3T20	3.2 TB	0	1	UNCONFIGURED_GOOD
1	N/A	/dev/gpd1	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z000A060T1L8	KCM61VUL3T20	3.2 TB	1	0	UNCONFIGURED_GOOD
2	N/A	/dev/gpd2	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z000A044T1L8	KCM61VUL3T20	3.2 TB	2	1	UNCONFIGURED_GOOD
3	N/A	/dev/gpd3	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z050A002T1L8	KCM61VUL3T20	3.2 TB	3	0	UNCONFIGURED_GOOD
4	N/A	/dev/gpd4	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z010A003T1L8	KCM61VUL3T20	3.2 TB	4	1	UNCONFIGURED_GOOD
5	N/A	/dev/gpd5	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z060A005T1L8	KCM61VUL3T20	3.2 TB	5	0	UNCONFIGURED_GOOD
6	N/A	/dev/gpd6	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z0F0A031T1L8	KCM61VUL3T20	3.2 TB	6	1	UNCONFIGURED_GOOD
7	N/A	/dev/gpd7	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z010A002T1L8	KCM61VUL3T20	3.2 TB	7	0	UNCONFIGURED_GOOD
32	4	/dev/nvme0n1	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z000A044T1L8	KCM61VUL3T20	3.2 TB	N/A	1	ONLINE
33	4	/dev/nvme1n1	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z010A001T1L8	KCM61VUL3T20	3.2 TB	N/A	1	ONLINE

```
[graid@graid-demo ~]$ sudo graidctl ls pd -n 0
✔List physical drive successfully.
```

PD ID (4)	DG ID	DEVICE PATH	NQN/WWID	MODEL	CAPACITY	SLOT ID	NUMA NODE	STATE
1	N/A	/dev/gpd1	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z000A060T1L8	KCM61VUL3T20	3.2 TB	1	0	UNCONFIGURED_GOOD
3	N/A	/dev/gpd3	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z050A002T1L8	KCM61VUL3T20	3.2 TB	3	0	UNCONFIGURED_GOOD
5	N/A	/dev/gpd5	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z060A005T1L8	KCM61VUL3T20	3.2 TB	5	0	UNCONFIGURED_GOOD
7	N/A	/dev/gpd7	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z010A002T1L8	KCM61VUL3T20	3.2 TB	7	0	UNCONFIGURED_GOOD

Output content:

Field	Description
SLOT ID	Slot ID of the corresponding NVMe/SAS/SATA drive. The PD ID is not related to the SLOT ID. To set the physical drives, use the PD ID.
DG ID	Drive group ID of the physical drive
PD ID	PD ID. The PD ID is a unique ID provided by the SupremeRAID™ driver when the physical drive is created. It is not related to any SSD information such as slot ID or NQN. The PD ID is used for all further operations.
NQN/WWID	NQN or WWID of corresponding NVMe/SAS/SATA drive
MODEL	Model number of the corresponding NVMe/SAS/SATA drive

Field	Description
CAPACITY	Capacity of corresponding NVMe/SAS/SATA drive
NODE	NUMA NODE of the corresponding NVMe/SAS/SATA drive
STATE	State of the physical drive (see the following table).

Physical drive state:

State	Description
ONLINE	Physical drive was added to a drive group and is ready to work.
HOTSPARE	Physical drive is configured as a hot spare drive.
FAILED	Physical drive is detected, but it is not operating normally.
OFFLINE	Physical drive is marked as offline.
REBUILD	Physical drive is being rebuilt.
MISSING	Physical drive cannot be detected.
UNCONFIGURED_GOOD	Physical drive did not join a drive group.
UNCONFIGURED_BAD	Physical drive did not join a drive group and is not operating normally.
COPYBACK	Physical drive is performing copyback.

If an (!) appears after the state mentioned above, it represents a critical warning.

Deleting a Physical Drive


To delete a physical drive, issue the following command:

```
$ sudo graidctl delete physical_drive [PD_ID]
```

OR

```
$ sudo graidctl del pd [PD_ID]
```

The following figure shows an output example for deleting multiple physical drives simultaneously.

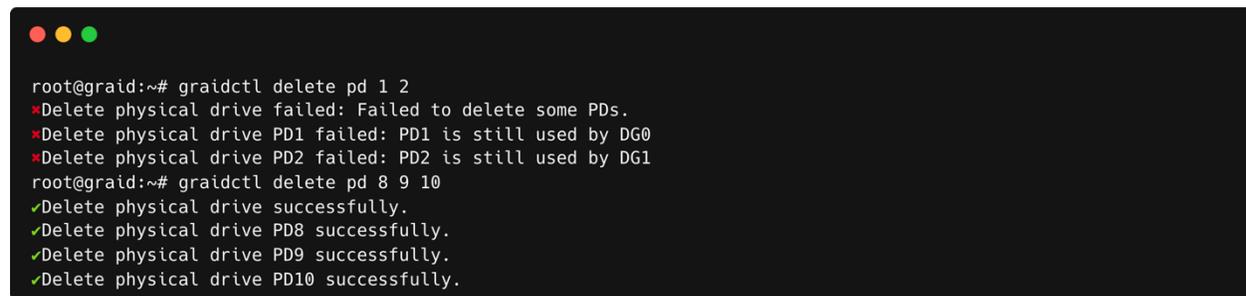

```
root@graid:~# graidctl delete pd 1 2
✖Delete physical drive failed: Failed to delete some PDs.
✖Delete physical drive PD1 failed: PD1 is still used by DG0
✖Delete physical drive PD2 failed: PD2 is still used by DG1
root@graid:~# graidctl delete pd 8 9 10
✔Delete physical drive successfully.
✔Delete physical drive PD8 successfully.
✔Delete physical drive PD9 successfully.
✔Delete physical drive PD10 successfully.
```

The output shows that a physical drive cannot be deleted when it is part of a drive group.

Describing a Physical Drive

To view detailed information for a physical drive, issue the following command:

```
$ sudo graidctl describe physical_drive [PD_ID]
```

OR

```
$ sudo graidctl desc pd [PD_ID]
```

Output example:

```
root@graid:~# graidctl describe physical_drive 1
✓Describe physical drive successfully.
PD ID:          1
DG ID:          0
Slot ID:        10
GUID:           nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A038T1L8
Mode:           KCM61VUL3T20
Capacity:       2.9 TiB
State:          ONLINE
Device Path:    /dev/gpd6
Numa Node:      0
Volatile Cache: Enabled
Wearout:        0%
Critical Warning: No warning.

Attributes:
    locating = false
    hotspare =

root@graid:~# graidctl desc pd 4
✓Describe physical drive successfully.
PD ID:          4
DG ID:          0
Slot ID:        9
GUID:           nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080IP38T1L8
Mode:           KCM61VUL3T20
Capacity:       2.9 TiB
State:          ONLINE
Device Path:    /dev/gpd3
Numa Node:      0
Volatile Cache: Enabled
Wearout:        0%
Critical Warning: No warning.

Attributes:
    locating = false
    hotspare =
```

Locating a Physical Drive

To locate a physical drive, issue the following command:

```
$ sudo graidctl edit physical_drive [PD_ID] locating start
```

To stop locating a physical drive, issue the following command:

```
$ sudo graidctl edit physical_drive [PD_ID] locating stop
```

Marking a Physical Drive Online or Offline

To mark a physical drive as online or offline, issue the following command:

```
$ sudo graidctl edit physical_drive [PD_ID] marker [offline|online]
```

Note: Marking a physical drive as offline, even briefly, puts the physical drive in the **REBUILD** state.

Assigning a Hot Spare Drive

To assign a physical drive as global hot spare, issue the following command:

```
$ sudo graidctl edit physical_drive [PD_ID] hotspare global
```

To assign a physical drive as the hot spare for a specific drive group, issue the following command:

```
$ sudo graidctl edit physical_drive [PD_ID] hotspare [DG_ID]
```

To assign a physical drive as a hot spare for multiple drive groups, use a comma (,) to separate the drive group IDs.

Replacing a Nearly Worn-Out or Broken SSD

Note: Make sure the system or other applications are not on the physical drive before creating or replacing the drive.

To replace a nearly worn-out or broken SSD:

Step 1 If the physical drive is in the **MISSING** or other abnormal state, skip this step. Otherwise, issue the following command to mark the physical drive as bad:

```
$ sudo graidctl edit pd [OLD_PD_ID] marker bad
```

Step 2 Replace the NVMe SSD. The state of the prior physical drive indicates **FAILED**.

Step 3 Check the NQN of the new SSD.

```
$ sudo graidctl list nvme_drive
```

Step 4 Replace the physical drive.

```
$ sudo graidctl replace physical_drive [OLD_PD_ID]  
[DEVICE_PATH|NQN|WWID]
```

Output example:

```
[graid@graid demo ~]$ sudo graidctl edit physical_drive 0 marker bad
✔Edit physical drive successfully.
✔Edit physical drive PD0 successfully.
[graid@graid demo ~]$ sudo graidctl list physical_drive
✔List physical drive successfully.
```

PD ID (5)	DG ID	DEVICE PATH	NQN/WWID	MODEL	CAPACITY	SLOT ID	STATE
0	0	/dev/gpd0	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z010A004T1L8	KCM61VUL3T20	3.2 TB	15	FAILED
1	0	/dev/gpd1	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z060A006T1L8	KCM61VUL3T20	3.2 TB	9	ONLINE
2	0	/dev/gpd2	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z010A001T1L8	KCM61VUL3T20	3.2 TB	8	ONLINE
3	0	/dev/gpd3	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A04HT1L8	KCM61VUL3T20	3.2 TB	11	ONLINE
4	0	/dev/gpd4	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A05KT1L8	KCM61VUL3T20	3.2 TB	3	ONLINE

```
[graid@graid demo ~]$ sudo graidctl list nvme_drive
✔List nvme drive successfully.
```

DEVICE PATH (1)	NQN	MODEL	CAPACITY
/dev/nvme5	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z050A002T1L8	KCM61VUL3T20	3.2 TB

```
[graid@graid demo ~]$ sudo graidctl replace physical_drive 0 /dev/nvme5
✔Replace physical drive successfully.
[graid@graid demo ~]$ sudo graidctl list physical_drive
✔List physical drive successfully.
```

PD ID (5)	DG ID	DEVICE PATH	NQN/WWID	MODEL	CAPACITY	SLOT ID	STATE
1	0	/dev/gpd1	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z060A006T1L8	KCM61VUL3T20	3.2 TB	15	ONLINE
2	0	/dev/gpd2	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z010A001T1L8	KCM61VUL3T20	3.2 TB	9	ONLINE
3	0	/dev/gpd3	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A04HT1L8	KCM61VUL3T20	3.2 TB	8	ONLINE
4	0	/dev/gpd4	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A05KT1L8	KCM61VUL3T20	3.2 TB	11	ONLINE
5	0	/dev/gpd5	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z050A002T1L8	KCM61VUL3T20	3.2 TB	3	REBUILD (12.69%, 54 mins remaining)

```
[graid@graid demo ~]$ sudo graidctl list drive_group
✔List drive group successfully.
```

DG ID	MODE	VD NUM	CAPACITY	FREE	USED	STATE
0	RAID5	1	13 TB	12 TB	1.0 TB	RECOVERY

```
[graid@graid demo ~]$ sudo graidctl list virtual_drive
✔List virtual drive successfully.
```

VD ID	DG ID	SIZE	DEVICE PATH	STATE
0	0	1.0 TB	/dev/gdg0n1	RECOVERY

Managing Drive Groups

Creating Drive Groups

To create a drive group or groups, issue the following command:

```
$ sudo graidctl create drive_group [RAID_MODE] [PD_IDs] [flag]
```

OR

```
$ sudo graidctl c dg [RAID_MODE] [PD_IDs] [flag]
```

Related command flags:

Flag	Description
-h, --help	Help for the create drive_group command
-b, --background-init	Background initialization
-c, --controller	[int32] Specific controller id Default: -1
-z, --foreground-init	Foreground initialization (Write Zeros)
-s, --strip-size	[uint32] Strip Size (KiB) Values: 4, 8, 16, 32, 64, 128 Default: 4

Output example:

```
[graid@graid-demo ~]$ sudo graidctl create drive_group raid1 0-1
✓Create drive group DG0 successfully.
[graid@graid-demo ~]$ sudo graidctl create drive_group raid5 2-4
✓Create drive group DG1 successfully.
[graid@graid-demo ~]$ sudo graidctl create drive_group raid6 5-9
✓Create drive group DG2 successfully.
```

Required parameters:

Option	Description
RAID_MODE	RAID mode of the drive group. Entries must be all uppercase or all lowercase. For example, RAID6 or raid6 are both correct.
PD_IDs	ID of the physical drive joining the drive group.

Optional parameters:

Option	Description	Behavior
--background - init, -b	Default option. Use standard methods to initialize the drive group. When all the physical drives in the drive group support the de-allocate dataset management command, it is used to synchronize the data, or parity, between the physical drives during the creation of the drive group.	An I/O-capable device path similar to /dev/gdg0n1 is created.
--foreground - init, -z	Foreground initialization. This method writes zeros to the entire drive.	The virtual drive appears in the system after initialization is complete. Use the following command to check the initialization progress: <pre>\$ sudo graidctl list drive_group</pre>
--controller, -c	Specific controller to control this drive_group. Default: -1, [Int32]	The drive group control by specific controller.
--no-journal	Bypass the creation of journal space in the drive group.	The drive group will not create journal space.
--strip-size, -s	Strip size of the drive_group. [RAID0, RAID10] Values: 4, 8, 16, 32, 64, 128 Default: 4, [Int32]	Adjust RAID0/RAID10 strip size to a specific size: (4k, 8k, 16k, 32k, 64k, or 128k)

Wait for the drive group initialization to complete. DO NOT power-off or reboot the system when the drive_group state is INIT, RESYNC, or RECOVERY. To check the drive_group state, issue the following command:

```
$ sudo graidctl list drive_group
```

OR

```
$ sudo graidctl ls dg
```

Output content:

Flag	Description
DG ID	Drive group ID
MODE	Drive group RAID mode
VD NUM	Number of virtual drives in the drive group
CAPACITY	Total usable capacity of the drive group
FREE	Unused space of the drive group
USED	Used space of the drive group
CONTROLLER	Drive group controlled by the specific controller
STATE	Drive group state (see the following table)

Drive group state:

State	Description
OFFLINE	Drive group is not working properly. This condition usually occurs when the number of damaged physical drives exceeds the limit.
OPTIMAL	Drive group is in optimal state.
OPTIMAL (!)	Drive group is in optimal state but found inconsistency data.
OPTIMAL (cc)	Drive group is in optimal state and the consistency check task is ongoing.
OPTIMAL (cp)	Drive group is in optimal state and the copyback task is ongoing.
OPTIMAL (cc!)	Drive group is in optimal state and the consistency check task is ongoing but found inconsistent data.
DEGRADED	Drive group is available and ready for use, but the number of missing or failed physical drives has reached the limit.
PARTIALLY_DEGRADED	Drive group is available and ready for use, but some physical drives are missing or failed.
RECOVERY	Drive group is recovering
FAILED	Drive group is not working normally.
INIT	Drive group is initializing.
RESYNC	Drive group is resynchronizing and remains available and ready for use. This condition usually occurs when the system encounters an abnormal crash. Do not replace the physical drive in this state until the resynchronization process completes.
RESCUE	Drive group is in rescue mode and can only be read.

Deleting Drive Groups

To delete a drive group, issue the following command:

Note: You cannot delete a drive group that contains a virtual drive.

```
$ sudo graidctl delete drive_group [DG_ID] [flag]
```

OR

```
$ sudo graidctl del dg [DG_ID] [flag]
```

Related command flags:

Flag	Description
--confirm-to-delete	Confirm to delete DG forcibly

In this example, drive group 1 was not deleted because it contains a virtual drive. Drive groups 0 and 2 were deleted successfully.

```
[graid@graid-demo ~]$ sudo graidctl del dg 1
*Delete drive group failed: Failed to delete some DGs.
*Delete drive group DG1 failed: rpc error: code = FailedPrecondition desc = DG1 still has IVD(s)
[graid@graid-demo ~]$ sudo graidctl delete drive_group 0 2
✓Delete drive group DG0 successfully.
✓Delete drive group DG2 successfully.
```

Displaying Drive Group Information

To display detailed information about a drive group, issue the following command:

```
$ sudo graidctl describe drive_group [DG_ID] [flag]
```

OR

```
$ sudo graidctl desc dg [DG_ID] [flag]
```

Output example:

```
root@graid:~# sudo graidctl describe drive_group 0
✓Describe drive group successfully.
DG ID:          0
NQN:            nqn.2020-05.com.graidtech:GRAID-SR2D2DF2D826D71D62
Model:         GRAID-SR
Serial:        2D2DF2D826D71D62
Firmware:     1.6.0-beta
Mode:          RAID5
Capacity:     59 GiB (63172509696 B)
Free Space:   0 B
Used Space:   59 GiB (63172509696 B)
Strip Size:   4096
State:        OPTIMAL
PD IDs:       [3 1 2]
Number of VDs: 1
Prefer Controller: 0
Running Controller: 0
Volatile Cache: Disabled
PD Volatile Cache: Enabled
Journal:      Degrade Only
Attributes:
              spdk_bdev = DISABLE
              rebuild_speed = high
              auto_failover = ENABLE
              cc_speed = high
              resync_speed = high
              init_speed = high

root@graid:~# graidctl desc dg 0
✓Describe drive group successfully.
DG ID:          0
NQN:            nqn.2020-05.com.graidtech:GRAID-SR2D2DF2D826D71D62
Model:         GRAID-SR
Serial:        2D2DF2D826D71D62
Firmware:     1.6.0-beta
Mode:          RAID5
Capacity:     59 GiB (63172509696 B)
Free Space:   0 B
Used Space:   59 GiB (63172509696 B)
Strip Size:   4096
State:        OPTIMAL
PD IDs:       [3 1 2]
Number of VDs: 1
Prefer Controller: 0
Running Controller: 0
Volatile Cache: Disabled
PD Volatile Cache: Enabled
Journal:      Degrade Only
Attributes:
              init_speed = high
              spdk_bdev = DISABLE
              rebuild_speed = high
              resync_speed = high
              auto_failover = ENABLE
              cc_speed = high
```

Output content:

Flag	Description
DG ID	Drive group ID
NQN	Drive group NQN
Model	Model number of the drive group
Serial	Serial number of the drive group
Firmware	Firmware version of the drive group
Mode	RAID mode of the drive group
Capacity	Capacity of the drive
Free Space	Remaining space on the drive
Used Space	Used space of the drive
Strip Size	Strip size (B) of the drive
PD IDs	All PDs of the drive
Number of VDs	Number of VDs of the drive Maximum: 1023
Prefer Controller	Preferred controller of the drive
Running Controller	Running controller number of the drive
Volatile Cache	VMC status for drive group
PD Volatile Cache	VMC status for physical drive
Journal	Journal mode of the drive group
Attributes	Status of all attributes of the drive

Selecting the Controller for a Drive Group

To set the controller to control a drive group, issue the following command:

```
$ sudo graidctl edit drive_group [DG_ID] controller [CX_ID]
```

Output example:

```
[graid@graid demo~]$ sudo graidctl list drive_group
✓List drive group successfully.
```

DG ID	MODE	VD NUM	CAPACITY	FREE	USED	CONTROLLER	STATE
0	RAID1	1	3.5 TiB	0 B	3.5 TiB	running: 0 prefer: 0	OPTIMAL
1	RAID5	35	10 TiB	10 TiB	0 B	running: 1 prefer: 1	OPTIMAL

```
[graid@graid demo~]$ sudo graidctl list controller
✓List controller successfully.
```

ID	CONTROLLER MODEL	SERIAL NUMBER	NUMA	STATE	DG
0	SR-1000	1xxxxxxxxxxx0	0	ONLINE	0
0	SR-1000	1xxxxxxxxxxx1	1	ONLINE	1

```
[graid@graid demo~]$ sudo graidctl edit dg 1 controller 0
✓Edit drive group successfully.
[graid@graid demo~]$ sudo graidctl list drive_group
✓List drive group successfully.
```

DG ID	MODE	VD NUM	CAPACITY	FREE	USED	CONTROLLER	STATE
0	RAID1	1	3.5 TiB	0 B	3.5 TiB	running: 0 prefer: 0	OPTIMAL
1	RAID5	35	10 TiB	10 TiB	0 B	running: 0 prefer: 1	OPTIMAL

Assigning a Controller to a Drive Group

To assign a controller to control a drive group, issue the following command:

```
$ sudo graidctl create drive_group [RAID_Type] [PD_IDs] -c [CX_ID]
```

Output example:

```
[graid@graid demo~]$ sudo graidctl create drive_group raid5 0-3 -c 0
✓Create drive group successfully.
✓Create drive group DG0 successfully.
```

Managing Background Task Speed

To set the background task speed for a drive group, issue the following command:

```
$ sudo graidctl edit drive_group [DG_ID] rebuild_speed {low|normal|high}
```

Locating the Physical Drives in the Drive Group

To locate all the physical drives in a drive group, issue the following command:

```
$ sudo graidctl edit drive_group [DG_ID] locating start
```

To stop locating all the physical drives in a drive group, issue the following command:

```
$ sudo graidctl edit drive_group [DG_ID] locating stop
```

Degradation and Recovery

If multiple drive groups require simultaneous recovery, the drive groups recover individually. If multiple physical drives in the same drive group require rebuilding, the physical drives are rebuilt simultaneously.

Rescue Mode

If a damaged drive group is initialized or a recovering drive group encounters an abnormal system crash, the data integrity of the drive group is affected. In this event, the drive group is forced offline to prevent data from being written to the drive group. To read the data for the drive group, force the drive group to go online using Rescue mode.

Note: A drive group in Rescue mode is read-only. Rescue mode cannot be disabled.

To enter rescue mode, issue the following command:

```
$ sudo graidctl edit drive_group [DG_ID] rescue_mode on
```

Managing Virtual Drives

Creating a Virtual Drive

To create a virtual drive, issue the following command:

```
$ sudo graidctl create virtual_drive [DG_ID] [VD_SIZE] [flags]
```

OR

```
$ sudo graidctl c vd [DG_ID] [VD_SIZE] [flags]
```

Related command flags:

Flag	Description
-h, --help	Help for the create virtual_drive command
-s, --serial	[string] Use user-specified serial ID

Output example:

```
[graid@graid-demo ~]$ sudo graidctl create virtual_drive 0
✓Create virtual drive VD0 in DG0 successfully.
[graid@graid-demo ~]$ sudo graidctl create virtual_drive 1 100G
✓Create virtual drive VD0 in DG1 successfully.
[graid@graid-demo ~]$ sudo graidctl create virtual_drive 2 1T
✓Create virtual drive VD0 in DG2 successfully.
```

Note: See [Setting Up the Auto-mount File Systems on Linux Using the SupremeRAID™ Driver](#). It is critically important to follow these instructions to guarantee that the RAID group mounts automatically during system boot and to avoid any improper or unclear shutdown processes that could cause the RAID group to enter resync mode.

Listing Virtual Drives

To list virtual drives, issue the following command:

```
$ sudo graidctl list virtual_drive [flag]
```

OR

```
$ sudo graidctl ls vd [flag]
```

Related command flags:

Flag	Description
-h, --help	Help for the list virtual_drive command
-d, --dg-id	[string] List VDs of a certain DG ID
-v, --vd-id	[string] List certain VD IDs

Output example:

```
root@graid:/home/graid# graidctl list virtual_drive
✔List virtual drive successfully.
```

VD ID	DG ID	SIZE	DEVICE PATH	STATE	EXPORTED
0	0	959 MiB	/dev/gdg0n1	OPTIMAL	No

Output content:

Flag	Description
DG ID	Drive group ID
VD ID	Virtual drive ID
SIZE	Usable size of the virtual drive
DEVICE PATH	Device path of the virtual drive
NQN	NQN of the virtual drive
STATE	Virtual drive state - identical to the drive group state (see the following table)
EXPORTED	Shows whether the virtual drive was exported using NVMe-oF or iSCSI

Note: Do not perform I/O before the virtual drive is initialized and the device path (for example, /dev/gdgXnY) is created.

Virtual drive state:

State	Description
OFFLINE	Drive group is not working normally. This condition is usually caused when the number of damaged physical drives exceeds the limit.
OPTIMAL	Drive group is in the optimal state.
DEGRADED	Drive group is available and ready for use, but the number of missing or failed physical drives has reached the limit.
PARTIALLY_DEGRADED	Drive group is available and ready for use, but some physical drives are missing or failed.
RECOVERY	Drive group is recovering.
FAILED	Drive group is not working normally.

State	Description
INIT	Drive group is initializing.
RESYNC	Drive group is resynchronizing and remains available and ready for use. This condition usually occurs when the system encounters an abnormal crash. Do not replace the physical drive in this state until the resynchronization process completes.
RESCUE	Drive group is in rescue mode and can only be read.

Stripe-cache state:

State	Description
OFFLINE	Stripe cache drive group is OFFLINE.
CLEAN	Stripe cache write-back has finished.
PURGE	Stripe cache is writing data into the virtual drive.
ACTIVE	Stripe cache is in optimal state.

Deleting Virtual Drives

To delete virtual drives, issue the following command:

```
$ sudo graidctl delete virtual_drive [DG_ID] [VD_ID] [flags]
```

OR

```
$ sudo graidctl del vd [DG_ID] [VD_ID] [flags]
```

Related command flags:

Flag	Description
--confirm-to-delete	Confirm to delete VD forcibly
-h, --help	Help for the delete virtual_drive command
-f, --force	Delete VD forcibly

The following example shows that a virtual drive being used by the application cannot be deleted without adding the force flag.

```
[graid@graid-demo ~]$ sudo graidctl delete virtual_drive 0 0
✓Delete virtual drive VD0 from DG0 successfully.
[graid@graid-demo ~]$ sudo graidctl delete virtual_drive 2 0-1
✓Delete virtual drive VD1 from DG2 successfully.
✓Delete virtual drive VD0 from DG2 successfully.
```

Displaying Virtual Drive Information

To display detailed information about a virtual drive, issue the following command:

```
$ sudo graidctl describe virtual_drive [DG_ID] [VD_ID] [flags]
```

OR

```
$ sudo graidctl desc vd [DG_ID] [VD_ID] [flags]
```

Output example:

```
[graid@graid-demo ~]$ sudo graidctl describe virtual_drive 0 4
✓Describe virtual drive successfully.
DG ID:          0
VD ID:          0
Serial:         EBFBC79373ED375F
DevicePath:     /dev/gdg0n1
Size:           4.3 GB
State:          OPTIMAL
Description:
Exported:


| PORT | TRANSPORT TYPE | ADDRESS      | INTERFACE | ADDRESS FAMILY | SERVICE ID |
|------|----------------|--------------|-----------|----------------|------------|
| 0    | tcp            | 172.16.11.64 | ens192    | ipv4           | 4420       |


```

Setting Up a Stripe Cache

Setting up a stripe cache improves HDD RAID 5 and RAID 6 sequential write performance. To set up a stripe cache:

Step 1 Create a stripe cache with a 4GB virtual drive.

```
$ sudo graidctl create virtual_drive 0 4GB
```

Note: For best practices, use a 4GB stripe whenever possible.

Step 2 Assign a 4GB virtual disk as the stripe cache.

```
$ sudo graidctl edit virtual_drive 0 0 stripecache 1 0
```

Step 3 Check the stripe cache.

```
$ sudo graidctl list virtual_drive
```

Step 4 To flush the stripe cache, issue the following command.

```
$ sudo graidctl edit vd 0 0 stripecache none
```

The following output is assigned virtual drive is listed as = **Stripe Cache** = in the DEVICE PATH column.

```
[graid@graid-sake ~]$ sudo graidctl create virtual_drive 0
✓Create virtual drive successfully.
✓Create virtual drive D0/VDO successfully.
[graid@graid-sake ~]$ sudo graidctl create virtual_drive 1 4GB
Create virtual drive successfully.
✓Create virtual drive DG1/VDO successfully.
[graid@graid-sake ~]$ sudo graidctl edit virtual_drive 0 0 stripecache 0 1
✓Edit virtual drive successfully.
[graid@graid-sake ~]$ sudo graidctl list virtual_drive
✓List virtual drive successfully.
```

VD ID (2)	DG ID	SIZE	DEVICE PATH	STATE	EXPORTED
0	0	9.3 GB	/dev/gdg0n1	OPTIMAL cache:ACTIVE	No
0	1	4.0 GB	Cache of DG0 VDO	OPTIMAL	No

Managing Controllers

Activating a Controller


To enable a controller, issue the following command:

```
$ sudo graidctl enable controller [Controller_ID] [flags]
```

OR

```
$ sudo graidctl enable cx [Controller_ID] [flags]
```

Output example:

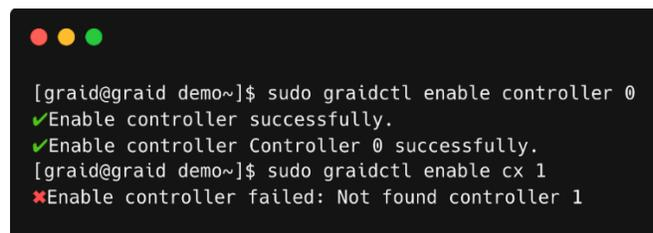

```
[graid@graid demo~]$ sudo graidctl enable controller 0
✓Enable controller successfully.
✓Enable controller Controller 0 successfully.
[graid@graid demo~]$ sudo graidctl enable cx 1
✗Enable controller failed: Not found controller 1
```

Deactivating a Controller


To disable a controller, issue the following command:

```
$ sudo graidctl disable controller [Controller_ID] [flags]
```

OR

```
$ sudo graidctl disable cx [Controller_ID] [flags]
```

Output example:

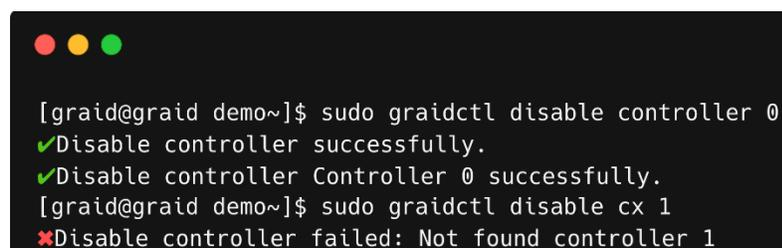

```
[graid@graid demo~]$ sudo graidctl disable controller 0
✓Disable controller successfully.
✓Disable controller Controller 0 successfully.
[graid@graid demo~]$ sudo graidctl disable cx 1
✗Disable controller failed: Not found controller 1
```

Listing Controllers


To list controllers, issue the following command:

```
$ sudo graidctl list controller [flag]
```

OR

```
$ sudo graidctl ls cx [flag]
```

Output example:

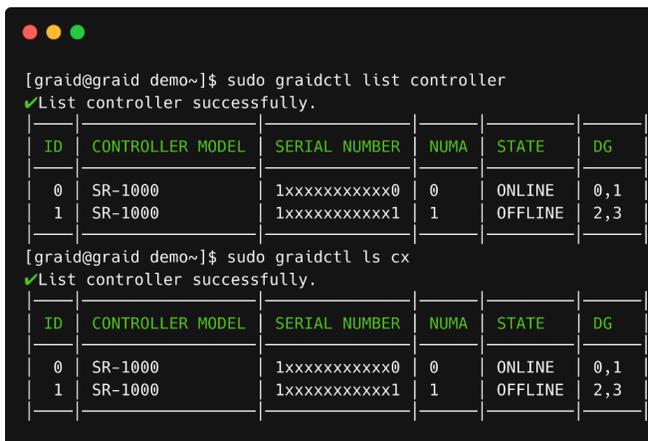

```
[graid@graid demo~]$ sudo graidctl list controller
✔List controller successfully.
```

ID	CONTROLLER MODEL	SERIAL NUMBER	NUMA	STATE	DG
0	SR-1000	1xxxxxxxxx0	0	ONLINE	0,1
1	SR-1000	1xxxxxxxxx1	1	OFFLINE	2,3

```
[graid@graid demo~]$ sudo graidctl ls cx
✔List controller successfully.
```

ID	CONTROLLER MODEL	SERIAL NUMBER	NUMA	STATE	DG
0	SR-1000	1xxxxxxxxx0	0	ONLINE	0,1
1	SR-1000	1xxxxxxxxx1	1	OFFLINE	2,3

Display Controller Information

To display the controller information, issue the following command:

```
$ sudo graidctl describe controller [Controller_ID] [flag]
```

OR

```
$ sudo graidctl desc cx [Controller_ID] [flag]
```

Output example:

```
[root@localhost ~]# sudo graidctl describe controller 0
✓Describe controller successfully.
Fullname:      SR-1001
Serial:        1420422030438
UUID:          489333294714454403
GPU UUID:      GPU-2d17547a-1d8e-2f43-9999-37ecf249f5ca
State:         ONLINE
Numa Node:     -1
Running Dgs:   0, 1, 2
Temperature:   72 C
Fan Speed:     59 %
```

Deleting a Controller

To delete a controller, issue the following command:

```
$ sudo graidctl delete controller [Controller_ID] [flag]
```

OR

```
$ sudo graidctl del cx [Controller_ID] [flag]
```

Note: You must disable the SupremeRAID™ controller before you can delete it. Disabling the controller prevents further access to it and its associated drives, allowing you to delete the controller safely without affecting the system's operation.

Output example:

```
[graid@graid demo~]$ graidctl delete controller 1
✗Delete controller failed: Controller 1 is still online, please disable it first
[graid@graid demo~]$sudo graidctl disable controller 1
✓Disable controller successfully.
✓Disable controller Controller 1 successfully.
[graid@graid demo~]$ sudo graidctl delete controller 1
✓Delete controller successfully.
✓Delete controller Controller 1 successfully.
```

Replacing a Controller License Key

To replace a controller's license key, issue the following command:

```
$ sudo graidctl replace controller [Controller_ID] [License_Key] [flags]
```

OR

```
$ sudo graidctl replace cx [Controller_ID] [License_Key] [flags]
```

Follow these guidelines when replacing a controller license key:

- **Disable the Controller:** Before replacing the license key for a controller in SupremeRAID™, disable the controller to ensure it is not in use. This prevents access to the controller and its associated drives, allowing the license key to be replaced safely without affecting system operation.
- **Ensure Compatibility:** You cannot replace a license key with one that has a different architecture or supported features. Use the same license key or a compatible replacement to avoid replacement issues.
- **Delete Inactive or Invalid Licenses:** If you are replacing a card in the system, delete any inactive or invalid licenses associated with the old card. Failing to do so may prevent other cards from becoming active, which is especially important in multi-controller systems.

Output example:

```
[graid@graid demo~]$ sudo graidctl replace controller 1 XXXXXXXX-XXXXXXX-XXXXXXX-XXXXXXX
✘Replace controller failed: Cannot replace ONLINE Controller 1
[graid@graid demo~]$sudo graidctl disable controller 1
✔Disable controller successfully.
✔Disable controller Controller 1 successfully.
[graid@graid demo~]$ sudo graidctl en cx 1 XXXXXXXX-XXXXXXX-XXXXXXX-XXXXXXX
✔Replace controller successfully.
✔Replace controller Controller 1 successfully.
```

Importing and Controlling MD Bootable NVMe RAIDs

After installing the SupremeRAID™ driver and the graidctl utility, SupremeRAID™ can import and control an MD bootable NVMe RAID. This feature makes it easy to swap drives if a bootable drive malfunctions.

Note: You must disable the SupremeRAID™ controller before you can delete it. Disabling the controller prevents further access to it and its associated drives, allowing you to delete the controller safely without affecting the system's operation. For instructions on setting up the MD bootable NVMe RAID, see [Configuring Boot-Drive Devices](#).

Importing an MD Bootable NVMe RAID

Note: You can import only MD bootable NVMe RAID1.

To import an MD bootable NVMe RAID, issue the following command:

```
$ sudo graidctl import md_drive [DEVICE_PATH_0] [DEVICE_PATH_1] [flags]
```

OR

```
$ sudo graidctl imp md [DEVICE_PATH_0] [DEVICE_PATH_1] [flags]
```

Output example:

```
[graid@graid ~]$ sudo graidctl import md_drive /dev/nvme0n1 /dev/nvme1n1
✓ Import md drive Import MD drives /dev/nvme0n1 /dev/nvme1n1 successfully.
[graid@graid ~]$ sudo graidctl ls pd
✓ List physical drive successfully.
```

PD ID	DG ID	MQW/MWID	MODEL	CAPACITY	SLOT ID	STATE
32	4	non.2014-08.org.nvmeexpress:uuid:527970f1-8f0f-27b3-fb2f-8462d3c8f972	VMware Virtual NVMe Disk	27 GB	N/A	ONLINE
33	4	non.2014-08.org.nvmeexpress:uuid:5218a65c-e259-6392-ff5c-35759b31b537	VMware Virtual NVMe Disk	27 GB	N/A	ONLINE

```
[graid@graid ~]$ sudo graidctl ls dg
✓ List drive group successfully.
```

DG ID	MODE	VD NUM	CAPACITY	FREE	USED	STATE
4	RAID1	3	27 GB	0 B	27 GB	OPTIMAL

```
[graid@graid ~]$ sudo graidctl ls vd
✓ List virtual drive successfully.
```

VD ID	DG ID	SIZE	DEVICE PATH	STATE
0	4	11 GB	/dev/md127	OPTIMAL
1	4	5.4 GB	/dev/md125	OPTIMAL
2	4	5.4 GB	/dev/md126	OPTIMAL

Replacing an MD Bootable NVMe RAID1

Note: You can replace only MD bootable NVMe RAID1.

To replace an MD bootable NVMe RAID 1, replace the old NVMe SSD with the new one. The old physical drive state should indicate **MISSING**.

```
$ sudo graidctl replace md_drive [OLD_MD)PD_ID] [NEW_DEVICE_PATH] [flags]
```

OR

```
$ sudo graidctl en md [OLD_MD)PD_ID] [NEW_DEVICE_PATH] [flags]
```

Related command flags:

Flag	Description
-h, --help	Help for the replace md_drive command
-f, --force	Replace ONLINE MD forcibly

The following example shows an MD missing.

```
[graid@graid ~]$ sudo graidctl ls pd
✓ List physical drive successfully.
```

PD ID	DG ID	NON/WWID	MODEL	CAPACITY	SLOT ID	STATE
32	4	nqn.2014-08.org.nvmexpress:uuid:527970f1-8f0f-27b3-fb2f-0462d3c8f972	VMware Virtual NVMe Disk	27 GB	N/A	ONLINE
33	4	nqn.2014-08.org.nvmexpress:uuid:5218a65c-e259-6392-ff5c-35759b31b537	VMware Virtual NVMe Disk	27 GB	N/A	MISSING

```
[graid@graid ~]$ sudo graidctl ls dg
✓ List drive group successfully.
```

DG ID	MODE	VD NUM	CAPACITY	FREE	USED	STATE
4	RAID1	3	27 GB	0 B	27 GB	DEGRADED

```
[graid@graid ~]$ sudo graidctl ls vd
✓ List virtual drive successfully.
```

VD ID	DG ID	SIZE	DEVICE PATH	STATE
0	4	11 GB	/dev/md127	DEGRADED
1	4	5.4 GB	/dev/md125	DEGRADED
2	4	5.4 GB	/dev/md126	DEGRADED

The following example shows a replaced drive. The bootable RAID group rebuilds immediately after replacing the drive.

```
[graid@graid ~]$ sudo graidctl replace md_drive 33 /dev/nvme2n1
✓ Replace md drive replaced_PD33 with /dev/nvme2n1 successfully.
[graid@graid ~]$ sudo graidctl ls pd
✓ List physical drive successfully.
```

PD ID	DG ID	NQN/WWID	MODEL	CAPACITY	SLOT ID	STATE
32	4	nqn.2014-08.org.nvmexpress:uuid:527970f1-8f0f-27b3-fb2f-8462d3c8f972	VMware Virtual NVMe Disk	27 GB	N/A	ONLINE
33	4	nqn.2014-08.org.nvmexpress:uuid:52524729-5a31-13e7-a316-f6e765e16ec8	VMware Virtual NVMe Disk	27 GB	N/A	REBUILD

```
[graid@graid ~]$ sudo graidctl ls dg
✓ List drive group successfully.
```

DG ID	MODE	VD NUM	CAPACITY	FREE	USED	STATE
4	RAID1	3	27 GB	0 B	27 GB	REBUILD

```
[graid@graid ~]$ sudo graidctl ls vd
✓ List virtual drive successfully.
```

VD ID	DG ID	SIZE	DEVICE PATH	STATE
0	4	11 GB	/dev/md127	REBUILD (pending)
1	4	5.4 GB	/dev/md125	REBUILD (82.52%)
2	4	5.4 GB	/dev/md126	REBUILD (pending)

Dismissing an Imported MD Bootable NVMe RAID1

Note: You can dismiss only MD bootable NVMe RAID1.

To dismiss an imported MD bootable NVMe RAID 1, issue the following command:

```
$ sudo graidctl delete drive_group [DG_ID] [flags]
```

OR

```
$ sudo graidctl del dg [DG_ID] [flags]
```

Output example:

```
[graid@graid ~]$ sudo graidctl ls dg
✓ List drive group successfully.
```

DG ID	MODE	VD NUM	CAPACITY	FREE	USED	STATE
4	RAID1	3	27 GB	0 B	27 GB	OPTIMAL

```
[graid@graid ~]$ sudo graidctl delete dg 4
✓ Delete drive group successfully.
```

Adjusting or Updating Configuration Settings for the SupremeRAID™ Add-on

The add-on for SupremeRAID™ provides enhanced configuration options and allows you to fine-tune system settings to meet your specific needs. Follow these steps to ensure that the add-on is configured optimally for maximum system performance.

Editing Configuration Settings

To edit the configuration, issue the following command:

```
$ sudo graidctl edit config [config_name] [value] [flags]
```

OR

```
$ sudo graidctl e conf [config_name] [value] [flags]
```

Configuration options:

Field	Description
SED_KEY	Add single SED key for specific device

Output example:

```
[graid@graid demo~]$ sudo graidctl edit config sed_key nqn.2019-08.org.qemu: NVME0002
Enter Key: ✓Edit config successfully.
```

Describing Configuration Settings

To describe the configuration, issue the following command:

```
$ sudo graidctl describe config [config_name] [flags]
```

OR

```
$ sudo graidctl desc conf [config_name] [flags]
```

Configuration options:

Field	Description
LED	Obtain the imported LED configuration files
SED	Obtain the SED key information

Output example:

```
[graid@graid demo~]$ sudo graidctl describe config sed
✓Describe config successfully.
Totally 1 SED keys.
Device GUIDs:
  ngn.2019-08.org. qemu: NVME0002
```

Deleting Configuration Settings

To delete the configuration, issue the following command:

```
$ sudo graidctl delete config [config_name] [flags]
```

OR

```
$ sudo graidctl del conf [config_name] [flags]
```

Configuration options:

Field	Description
LED	Obtain the imported LED configuration files
SED	Obtain the SED key information

Output example:

```
[root@graid ~]# sudo graidctl delete config led
✓Delete config successfully.
```


To restore the configuration from the file, please issue the following command:

```
$ sudo graidctl restore config --file <FilePath>
```

Output example:

```

$ sudo ./graidctl/cmd/graidctl/graidctl re config --file ~/graid.conf
/home/hann/graid.conf: Config integrity check Passed!
Timestamp: 2025-06-06 10:10:10
Epoch: 41
Config UUID: 863fb1c1-1c1c-4c1c-1c1c-1c1c1c1c1c1c
Physical Drive List:

```

PD ID (8)	DG ID	NQN/WWID	MODEL	CAPACITY
0	0	nqn.2016-10-00000000000000000000000000000000	QEMU NVMe Ctrl	7.9 GiB
1	1	nqn.2016-10-00000000000000000000000000000000	QEMU NVMe Ctrl	7.9 GiB
2	0	nqn.2016-10-00000000000000000000000000000000	QEMU NVMe Ctrl	7.9 GiB
3	1	nqn.2016-10-00000000000000000000000000000000	QEMU NVMe Ctrl	7.9 GiB
4	0	nqn.2016-10-00000000000000000000000000000000	QEMU NVMe Ctrl	7.9 GiB
5	1	nqn.2016-10-00000000000000000000000000000000	QEMU NVMe Ctrl	7.9 GiB
6	0	nqn.2016-10-00000000000000000000000000000000	QEMU NVMe Ctrl	7.9 GiB
7	1	nqn.2016-10-00000000000000000000000000000000	QEMU NVMe Ctrl	7.9 GiB

```

Drive Group List:

```

DG ID	MODE	VD NUM	CAPACITY
0	RAID5	3	22 GiB
1	RAID6	3	15 GiB

```

Warning: This is an unsafe operation!
Restore config from file to /etc/graid.conf may cause data inconsistency or data loss.
Proceed only if you fully understand the risks and have verified your backup.
To confirm, type (Case sensitive): 'Confirm Unsafe Operation'
Confirmation: Confirm Unsafe Operation
✓Restore config graid.conf successfully.

```

Note: The restore command does not support restoring configuration files created by a newer driver version. Therefore, it cannot be used to downgrade the driver to an earlier version.

Managing Events

Listing Events

To check detailed information from record, issue the following command:

```
$ sudo graidctl list event [flags]
```

OR

```
$ sudo graidctl ls event [flags]
```

Related command flags:

Flag	Description
-h, --help	Help for the list event command
-n, --max_entries	[int32] Limit the number of events returned
-o, --output	[string] Output to a file
-s, --severity	[string] Filter events by severity

Output example:

```
[graid@graid-demo ~]$ sudo graidctl list event -n 10 -s INFO -c DG
✓List event successfully.
[2022-06-22 22:06:29 +0800 CST][INFO][DG][0] State transitted from UNKNOWN to OFFLINE.
[2022-06-22 22:20:07 +0800 CST][INFO][DG][0] Drive group deleted.
[2022-06-22 22:21:13 +0800 CST][INFO][DG][0] State transitted from UNKNOWN to OPTIMAL.
[2022-06-22 22:21:13 +0800 CST][INFO][DG][0] Drive group created.
[2022-06-22 22:28:02 +0800 CST][INFO][DG][0] Drive group deleted.
[2022-06-22 22:28:20 +0800 CST][INFO][DG][0] State transitted from UNKNOWN to OPTIMAL.
[2022-06-22 22:28:20 +0800 CST][INFO][DG][0] Drive group created.
[2022-06-22 22:30:15 +0800 CST][INFO][DG][0] CC has started.
[2022-06-22 23:26:57 +0800 CST][INFO][DG][0] CC has completed.
[2022-06-22 23:26:57 +0800 CST][INFO][DG][0] CC has started.
```

Deleting Events

To delete events, issue the following command:

```
$ sudo graidctl delete event [flags]
```

OR

```
$ sudo graidctl del event [flags]
```

Related command flags:

Flag	Description
-h, --help	Help for the delete event command
-d, --date	[string] Delete event entries before the date
-e, --entries	int32] Keep the latest number of entries Default: -1

Managing NVMe-oF Remote Targets

Before you can create physical drives from remote NVMe-oF devices, you must connect to the NVMe-oF remote target.

Connecting to a NVMe-oF Remote Target

To connect to a remote NVMe-oF target, issue the following command:

```
$ sudo graidctl connect remote_target [transport type] [addr] [address family] [port service id]
```

OR

```
$ sudo graidctl con rt [transport type] [addr] [address family] [port service id]
```

Required parameters:

Option	Description
transport type	Network fabric used for a NVMe-over-Fabrics network. Current string values include: <ul style="list-style-type: none"> RDMA = network fabric is an RDMA network (RoCE, iWARP, InfiniBand, basic RDMA, etc.) TCP = network fabric is a TCP/IP network.
ip address	Network address of the controller
address family	Network address protocol. Current string values include ipv4/ipv6.
port service	Transport service ID

Output example:

```
[graid@graid-demo ~]$ sudo graidctl connect remote_target rdma 192.168.2.10 ipv4 4420
✓Connect remote target successfully.
✓Connect remote target Target 0 successfully.
[graid@graid-demo ~]$ sudo graidctl connect remote_target tcp 192.168.2.11 ipv4 4420
✓Connect remote target successfully.
✓Connect remote target Target 1 successfully.
```

Listing Connected NVMe-oF Remote Targets

To list all the connected NVMe-oF remote targets, issue the following command:

```
$ sudo graidctl list remote_target
```

OR

```
$ sudo graidctl ls rt
```

Output example:

```
[graid@graid-demo ~]$ sudo graidctl list nvmeof_target
✔List nvmeof target successfully.
```

PORT ID	TYPE	INTERFACE	ADDRESS	ADDRESS FAMILY	SERVICE ID	SUBSYSTEMS
0	tcp	ens160	172.16.11.81	ipv4	4420	DG0/VD0, DG0/VD1
1	tcp	ens160	172.16.11.81	ipv4	4421	DG0/VD0, DG0/VD1, DG0/VD3

```
[graid@graid-demo ~]$ sudo graidctl ls nt
✔List nvmeof target successfully.
```

PORT ID	TYPE	INTERFACE	ADDRESS	ADDRESS FAMILY	SERVICE ID	SUBSYSTEMS
0	tcp	ens160	172.16.11.81	ipv4	4420	DG0/VD0, DG0/VD1
1	tcp	ens161	172.16.11.82	ipv4	4420	DG0/VD0, DG0/VD1, DG0/VD3

Disconnecting from NVMe-oF Remote Targets

Note: You cannot delete the target when there are physical drives created from the target.

To disconnect from an NVMe-oF remote target, issue the following command:

```
$ sudo graidctl disconnect remote_target [target id]
```

OR

```
$ sudo graidctl dis rt [target id]
```

Output example:

```
[graid@graid-demo ~]$ sudo graidctl disconnect remote_target 0
✔Disconnect remote target successfully.
✔Disconnect remote target Port 0 successfully.
[graid@graid-demo ~]$ sudo graidctl dis rt 1
✔Disconnect remote target successfully.
✔Disconnect remote target Port 1 successfully.
```

Managing NVMe-oF Export Target

You can export the virtual drive via the NVMe-oF export target to other initiators.

Creating the NVMe-oF Export Target Port Service

To create the NVMe-oF export target port service, issue the following command:

```
$ sudo graidctl create export_target [tcp|rdma] [interface] [address family] [srvcid] [flags]
```

OR

```
$ sudo graidctl c et [tcp|rdma] [interface] [address family] [srvcid] [flags]
```

Output example:

```
[graid@graid-demo ~]$ sudo graidctl create export_target tcp eno1 ipv4 4420
✓Create export target successfully.
✓Create export target Target 0 successfully.
[graid@graid-demo ~]$ sudo graidctl create export_target tcp eno1 ipv4 4421
✓Create export target successfully.
✓Create export target Target 1 successfully.
[graid@graid-demo ~]$ sudo graidctl list export_target
✓List export target successfully.
```

ID	TYPE	INTERFACE	ADDRESS	ADDRESS FAMILY	SERVICE ID	SUBSYSTEMS
0	tcp	eno1	172.17.2.20	ipv4	4420	
1	tcp	eno1	172.17.2.20	ipv4	4421	

Exporting the Virtual Drive via NVMe-oF Export Targets

To export the virtual drive via NVMe-oF export targets using the service port you created, use the following command:

```
$ sudo graidctl export virtual_drive [DG_ID] [VD_ID] [flags]
```

OR

```
$ sudo graidctl exp vd [DG_ID] [VD_ID] [flags]
```

Related command flags:

Flag	Description
-h, --help	Help for the export NVMe-oF targets command
-a, --all	Export all NVMe-oF target into all ports
-p, --port-ids	Port IDs [Int32]

Output example:

```
[graid@graid-demo ~]$ sudo graidctl export virtual_drive 0 0-1 --all
✓Export virtual drive successfully.
✓Export virtual drive VD0 into Target 0 successfully.
✓Export virtual drive VD0 into Target 1 successfully.
✓Export virtual drive VD1 into Target 0 successfully.
✓Export virtual drive VD1 into Target 1 successfully.
[graid@graid-demo ~]$ sudo graidctl export virtual_drive 0 2 --ids=1
✓Export virtual drive successfully.
✓Export virtual drive VD2 into Target 1 successfully.
[graid@graid-demo ~]$ sudo graidctl export virtual_drive 0 3 -i 0
✓Export virtual drive successfully.
✓Export virtual drive VD3 into Target 0 successfully.
```

Listing Created NVMe-oF Export Targets

To list all created NVMe-oF export target devices, issue the following command:

```
$ sudo graidctl list export_target
```

OR

```
$ sudo graidctl ls et
```

Output example:

ID	TYPE	TRANSPORT	INTERFACE	ADDRESS	ADDRESS FAMILY	SERVICE ID	SUBSYSTEMS
0	SPDK	tcp	enp0s1	172.16.32.6	ipv4	4420	DG0/VD0
1	SPDK	tcp	enp0s1	172.16.32.6	ipv4	4421	DG1/VD0
2	kernel	tcp	enp0s1	172.16.32.6	ipv4	4422	

To describe the created NVMe-oF export target device, issue the following command:

```
$ sudo graidctl describe export_target [ID]
```

Deleting the NVMe-oF Export Target Port Service

To delete the NVMe-oF export target port service, issue the following command:

```
$ sudo graidctl delete export_target [PORT_ID] [flags]
```

OR

```
$ sudo graidctl del et [PORT_ID] [flags]
```

Related command flags:

Flag	Description
-h, --help	Help for the delete export_target command
-f, --force	Force delete ports

Output example:

```
[graid@graid-demo ~]$ sudo graidctl delete export_target 0
✓Delete export target successfully.
✓Delete export target Target 0 successfully.
[graid@graid-demo ~]$ sudo graidctl del et 1
✓Delete export target successfully.
✓Delete export target Target 1 successfully.
```

Unexporting the Virtual Drives form NVMe-oF export Targets

To unexport a virtual drive from an NVMe-oF export target, issue the following command:

```
$ sudo graidctl unexport virtual_drive [DG_ID] [VD_ID] [flags]
```

OR

```
$ sudo graidctl unexp vd [DG_ID] [VD_ID] [flags]
```

Output example:



```
[graid@graid-demo ~]$ sudo graidctl unexport virtual_drive 0 0 --all
✓Unexport virtual drive successfully.
✓Unexport virtual drive VD0 from target 0 successfully.
✓Unexport virtual drive VD0 from target 1 successfully.
[graid@graid-demo ~]$ sudo graidctl unexport virtual_drive 0 1 -i 1
✓Unexport virtual drive successfully.
✓Unexport virtual drive VD1 from target 1 successfully.
```

Managing NVMe-oF Export Target (SPDK)

Integrated SPDK NVMe-oF target within the Graid management daemon, enabling direct, zero-copy data export from SupremeRAID™ virtual drives to remote clients over NVMe-oF (TCP or RDMA). This feature eliminates the need for an external SPDK instance and reduces I/O latency by bypassing the kernel block layer. The integrated SPDK target shares the same GPU-accelerated RAID engine as the kernel path but offloads the I/O stack entirely into user space. This enables low-latency data services, simplified deployment, and unified control via `graidctl`, making it ideal for hypervisor, disaggregated storage, or remote-NVMe use cases.

Guidelines

To enable Integrated SPDK target follow these guidelines:

- SPDK mode applies to the entire drive group (DG). All virtual drives within that group will no longer have the kernel `/dev/gdgXnY` devices.
- It is recommended to allocate a total of 8 GB of hugepages for stability.
- The default block size of a virtual drive (VD) in SPDK mode is 4K. These VDs can optionally be configured in 512-byte LBA emulation (512e) mode.
- For parameters related to Integrated SPDK target, please refer to the configuration file (`/etc/graid/graid_spdk.conf`).
- The `reactor_mask` option in the configuration file specifies a bitmask of the CPU cores on which SPDK is allowed to execute work items. If it is not set, the SPDK reactors will not be launched, and the integrated SPDK features will not be available. You must configure `reactor_mask` before starting the Graid service to enable the SPDK export target. Once the Graid service is running, the `reactor_mask` setting cannot be changed.

Preparing the Environment

- Root access
- Enough contiguous free memory (for configuring hugepages) - recommended additional 8 GB.
- NICs and routes ready for NVMe-oF (TCP or RDMA).
- It is recommended to run our [pre-installer](#). Otherwise, you need to install or refresh dependencies: `libibverbs1`, `librdmacm1`, `libnuma1`, please refer to the [dependency table](#).

Enabling HugePages

This section provides information on how to enable 1 GB hugepages persistently.

- Setting default hugepages size to 1GB

Ubuntu/Debian:

```
$ sudo sed -i
's/^GRUB_CMDLINE_LINUX_DEFAULT="/GRUB_CMDLINE_LINUX_DEFAULT="default_hugepage
sz=1G /' /etc/default/grub

$ sudo sh -c 'OS_ID=$(. /etc/os-release && echo $ID) && grub-mkconfig -o
/boot/efi/EFI/$OS_ID/grub.cfg'

$ sudo reboot
```

Red Hat/Centos/Rocky

```
$ sudo grubby --update-kernel=ALL --args="default_hugepagesz=1G"

$ sudo reboot
```

- After rebooting, make sure that the default hugepages size is set to 1,048,576 kB:

```
$ sudo grep Hugepagesize /proc/meminfo
```

- Make sure that no 2MB hugepages are allocated in the environment.

```
echo 0 > /sys/kernel/mm/hugepages/hugepages-2048kB/nr_hugepages
```

Allocating HugePages

It is recommended to allocate a total of 8 GB of hugepages for stability and not less than 4 GB as the minimum. You can allocate eight 1GB hugepages by issuing the following command:

```
echo 8 > /sys/kernel/mm/hugepages/hugepages-1048576kB/nr_hugepages
```

Alternatively, you can allocate hugepages by NUMA node. To optimize performance when NUMA mode is enabled, each NUMA node included in the *reactor_mask* should be allocated at least 1 GB of hugepages, and the first NUMA node should be allocated at least 3 GB when using the default performance-related parameters defined in */etc/graid/graid_spdk.conf*.

For a system with two NUMA nodes, you can allocate five 1GB hugepages to node 0 and three 1GB hugepages to node 1 by issuing the following command:

```
$ echo 5 > /sys/devices/system/node/node0/hugepages/hugepages-1048576kB/nr_hugepages

$ echo 3 > /sys/devices/system/node/node1/hugepages/hugepages-1048576kB/nr_hugepages
```

Make sure that the allocation is successful:

```
$ grep Hugetlb /proc/meminfo
Hugetlb:          8388608 kB
```

If any of the NUMA nodes included in *reactor_mask* does not have enough hugepages to achieve optimal performance, you will see warning messages in */etc/graid/graid_server.log*:

```
[warning] Node 0 has no enough free hugepages for SPDK graid pages. Disable NUMA support for bdev_graid module.
[warning] SPDK: Performance may be degraded since NUMA support is disabled for bdev_graid module.
```

Enabling the Integrated SPDK Service

Edit the configuration file: */etc/graid/graid_spdk.conf* and bind SPDK reactors to specific CPU cores to enable the integrated SPDK service. For example, to bind CPU cores 0 to 3 to the integrated SPDK service, set the *reactor_mask*:

```
# /etc/graid/graid_spdk.conf

[system]
reactor_mask = [0-3]
```

Restart to apply the setting:

```
$ sudo systemctl restart graid
```

Creating PDs, DGs, and VDs

Please refer to the [previous sections](#) for instructions on creating physical drive (PD), drive group (DG) and virtual drive (VD). If a DG was created with zero-init, wait until initialization is complete before switching to SPDK mode.

Enabling SPDK Mode

Convert the drive group (DG) to SPDK mode, all VDs become SPDK bdevs (no /dev/gdg*). Kernel and SPDK access cannot coexist within the same DG.

```
$ sudo graidctl edit drive_group <DG_ID> spdk_bdev <value>
```

The value can be:

- "enable": Enable Internal SPDK mode for DG, meaning the SPDK bdev_graid module will take control of the DG.
- "disable": Disable Internal SPDK mode for the DG, meaning the Graid driver will resume of the DG.

After enabling DG spdk_bdev mode, the DG will temporarily go offline but will come back online shortly thereafter.

Creating SPDK NVMe-oF Export Targets

Please note that NVMe-oF export targets of the kernel and SPDK types cannot share the same IP and port.

To create the SPDK NVMe-oF export target port service, issue the following command:

```
$ sudo graidctl create export_target [tcp|rdma] [interface] [address family] [srvcid] --spdk
```

Example:

```
$ sudo graidctl create export_target tcp enp0s1 ipv4 4420 --spdk
```

Related command flags:

Flag	Description
--spdk	Create as an SPDK NVMe-oF target

To delete the SPDK NVMe-oF export target, please refer to the section [Delete the NVMe-oF Export Target Port Service](#).

Exporting Virtual Drives to SPDK NVMe-oF Export Targets

To export the virtual drive to SPDK export targets, issue the following command:

```
$ sudo graidctl export virtual_drive [DG_ID] [VD_ID] [flag]
```

Alternatively, to export a target with a 512-byte block size, which is required for VMware ESXi datastores:

```
$ sudo graidctl export virtual_drive [DG_ID] [VD_ID] --spdk-512e
```

Related command flags:

Flag	Description
--spdk-512e	Enable SPDK 512 bytes block size emulation

Only SPDK-enabled virtual drives can be exported to SPDK export targets. Once an SPDK virtual drive has been exported with 512-byte LBA emulation, the same virtual drive cannot be exported to another SPDK export target with default 4K LBA size.

To unexport the virtual drive from SPDK export targets, please refer to the section [Unexporting the Virtual Drives from NVMe-oF export Targets](#).

Listing Created SPDK NVMe-oF Export Targets

To list all SPDK NVMe-oF export targets, please refer to the section [Listing Created NVMe-oF Export Targets](#).

As shown in the output, the target type will display SPDK instead of Kernel.

ID	TYPE	TRANSPORT	INTERFACE	ADDRESS	ADDRESS FAMILY	SERVICE ID	SUBSYSTEMS
0	SPDK	tcp	enp0s1	172.16.32.6	ipv4	4420	DG0/VD0
1	SPDK	tcp	enp0s1	172.16.32.6	ipv4	4421	DG1/VD0

To describe the SPDK NVMe-oF export target, please refer to the section [Listing Created NVMe-oF Export Targets](#).

SPDK Log Files

If the integrated SPDK has been enabled (i.e., *reactor_mask* is properly configured), the following log files will be generated for SPDK logging:

```
/var/log/graid/graid_server_spdk.log  
/var/log/graid/graid_core{0,1}_spdk.log
```

Using Consistency Checks to Ensure Data Integrity

The consistency check operation verifies that the data is correct in DGs that use RAID levels 1, 5, 6, and 10. In a system with parity, for example, checking consistency calculates the data on one drive and compares the results to the contents of the parity drive.

Note: You cannot perform a consistency check on RAID 0 because it does not provide data redundancy. Additionally, a consistency check can only run when the DG is in OPTIMAL or PARTIALLY_DEGRADED state.

The consistency check function records all events to the event database, and `graidctl` provides commands to retrieve the events. The maximum number of event entries is 1,000. The system deletes event entries periodically. You can also delete entries manually.

Starting Consistency Checks Manually

To start a consistency check manually, issue the following command:

```
$ sudo graidctl start consistency_check manual_task [flags]
```

OR

```
$ sudo graidctl start cc [flags]
```

Related command flags:

Flag	Description
-h, --help	Help for the start consistency_check manual command
-p, --policy	[string] Specify CC policy [stop_on_error/auto_fix]

DG state for consistency check: Enabling a consistency check task will add the following annotations beside the output string of the DG state.

DG State	Description
OPTIMAL	Normal state without enabling consistency check
OPTIMAL (!)	Inconsistency found
OPTIMAL (cc)	Consistency check ongoing
OPTIMAL (cc!)	Consistency check ongoing and inconsistency found

Output example:

```
[graid@graid-demo ~]$ sudo graidctl start consistency_check manual_task 0 1 -p stop_on_error
✓Start consistency check successfully.
[graid@graid-demo ~]$ sudo graidctl start cc manual_task 2 -p auto_fix
✓Start consistency check successfully.
```

Stopping Consistency Check


To stop a consistency check task, issue the following command:

```
$ sudo graidctl stop consistency_check current_task [flags]
```

OR

```
$ sudo graidctl stop cc current_task [flags]
```

Output example:

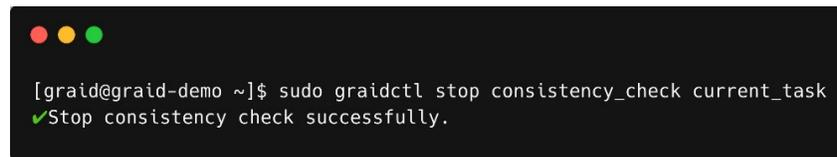

```
[graid@graid-demo ~]$ sudo graidctl stop consistency_check current_task
✓Stop consistency check successfully.
```

Scheduling Consistency Checks

To schedule a consistency check task, issue the following command:

```
$ sudo graidctl set consistency_check schedule_mode
[off|continuously|hourly|daily|weekly|monthly] [yyyy/mm/dd] [hh] [flags]
```

OR

```
$ sudo graidctl set cc schedule_mode
[off|continuously|hourly|daily|weekly|monthly] [yyyy/mm/dd] [hh] [flags]
```

DG State: Enabling a consistency check task adds the following annotations beside the output string of the DG state.

DG State	Description
OPTIMAL	Normal state without enabling consistency check
OPTIMAL (!)	Inconsistency found
OPTIMAL (cc)	Consistency check ongoing
OPTIMAL (cc!)	Consistency check ongoing and inconsistency found

Output example:

```
[graid@graid-demo ~]$ sudo graidctl set consistency_check schedule_mode daily 2022/06/25 10
✔Set consistency check successfully.
```

Viewing Consistency Check Information

To view detailed consistency check information, issue the following command:

```
$ sudo graidctl describe consistency_check [flags]
```

OR

```
$ sudo graidctl desc consistency_check [flags]
```

Output example:

```
[graid@graid-demo ~]$ sudo graidctl describe consistency_check
✔Describe consistency check successfully.
Schedule Mode:      daily
Schedule Base:      2022-06-25 10:00:00 +0800 CST
Excluded DGs:       []
Policy:             stop_on_error
Next Schedule:      2022-06-26 10:00:00 +0800 CST
Current Task:       2 DG(s)
                    -DG0: Checking (progress: 28.15%)
                        Start Time: 2022-06-26 09:37:37 +0800 CST
                        End Time:
                    -DG1: Pending
                        Start Time:
                        End Time:
```

Setting the Consistency Check Policy

To set a consistency check policy, issue the following command.

Note: By default, the consistency check runs on all drive_groups. To exclude drive groups, run the `xcluded_dgs` command.

```
$ sudo graidctl set consistency_check policy [auto_fix|stop_on_error] [flags]
```

Output example:

```
[graid@graid-demo ~]$ sudo graidctl set consistency_check policy auto_fix
✔Set consistency check successfully.
```

Excluding Drive Groups from the Consistency Check Policy

To exclude some drive groups from a consistency check policy, issue the following command:

```
$ sudo graidctl set consistency_check excluded_dgs [DG_IDs]
```

OR

```
$ sudo graidctl set cc excluded_dgs [DG_IDs]
```

Output example:

```
[graid@graid-demo ~]$ sudo graidctl set consistency_check excluded_dgs 1
✔Set consistency check successfully.
```

ADDITIONAL FUNCTIONS

This chapter describes the following additional tasks you can perform with SupremeRAID™.

- Configuring Boot-Drive Devices
- Manually Migrating the RAID Configuration Between Hosts
- Restarting the SupremeRAID™ Service After Upgrading the System Kernel
- Obtaining SMART Information from Devices
- Monitoring System Input/Output Statistics for Devices Using iostat
- Setting Up the Auto-mount File Systems on Linux Using the SupremeRAID™ Driver
- ESXi Virtual Machine Support Using GPU Passthrough
- Using Self-Encrypting Drives
- Mail Notification Service
- Drive Copyback

Configuring Boot-Drive Devices

You can configure two NVMe SSDs as RAID1 boot devices and control them using SupremeRAID™. The procedure you use depends on the operating system.

- For CentOS, see [Procedure for CentOS](#).
- For Ubuntu, see [Procedure for Ubuntu](#).
- For SLES 15 SP2 and SP3, see [Procedure for SLES 15 SP2, and SP3](#).


Note: Please note, these procedures are provided for reference only. Your actual steps may vary depending on your Linux distribution and version. For complete and up-to-date information, please refer to your Linux distro's documentation or contact the distro's support team for further information. You cannot configure boot-drive devices across multiple operating systems.

Procedure for CentOS


Assigning RAID1 Boot Devices Manually

You assign RAID1 boot devices when you install CentOS. If the CentOS GUI does not prompt you to assign the boot devices, you can assign them manually.

Step 1 From the INSTALLATION SUMMARY page, select **SYSTEM** > Installation Destination.

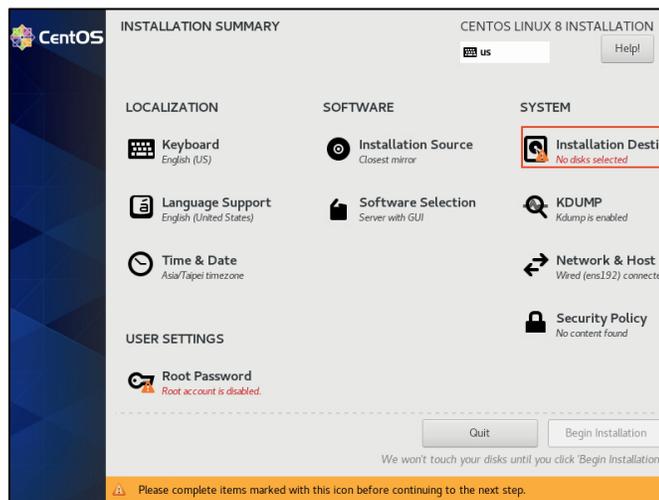


Step 2 From the INSTALLATION DESTINATION page, select the two NVMe SSDs that you want to set as RAID1 boot devices.

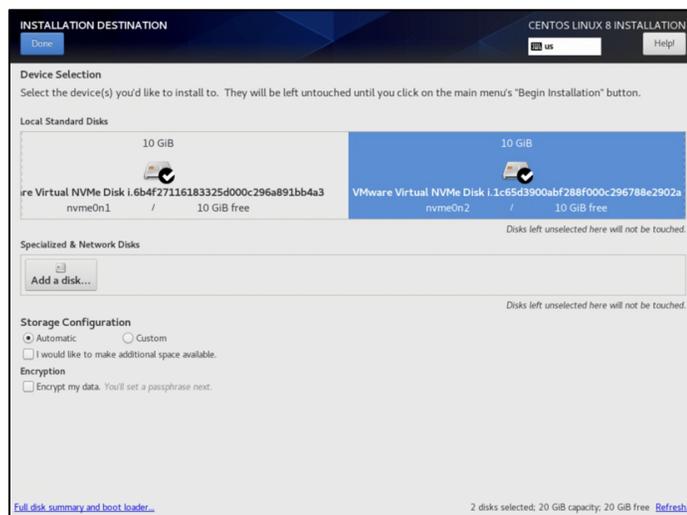

Note: To select multiple devices, use the Ctrl key.

Step 3 For Storage Configuration, select Custom.

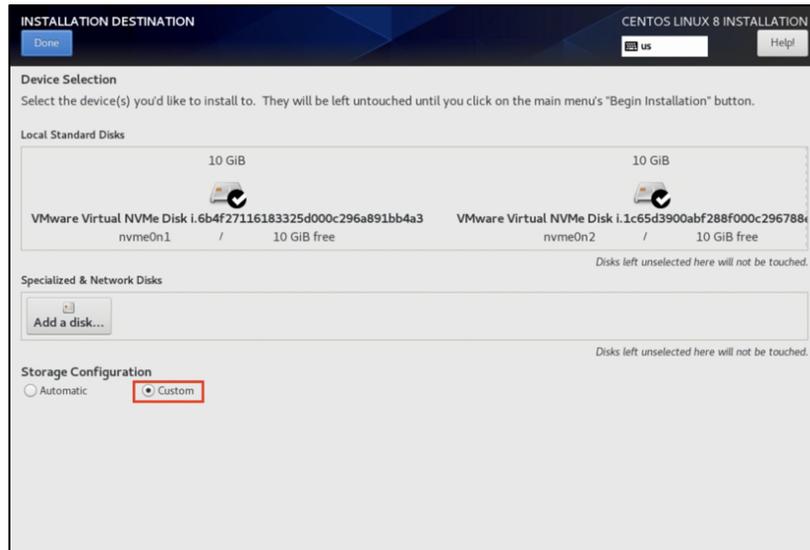


Step 4 Click Done.

Creating Storage Partitions Manually

You manually create the storage partitions on CentOS systems. Each partition function as a software RAID.


Step 1 From the MANUAL PARTITIONING page, select New CentOS Linux 8 Installation.

Step 2 Click here to create them automatically to create the mount points.

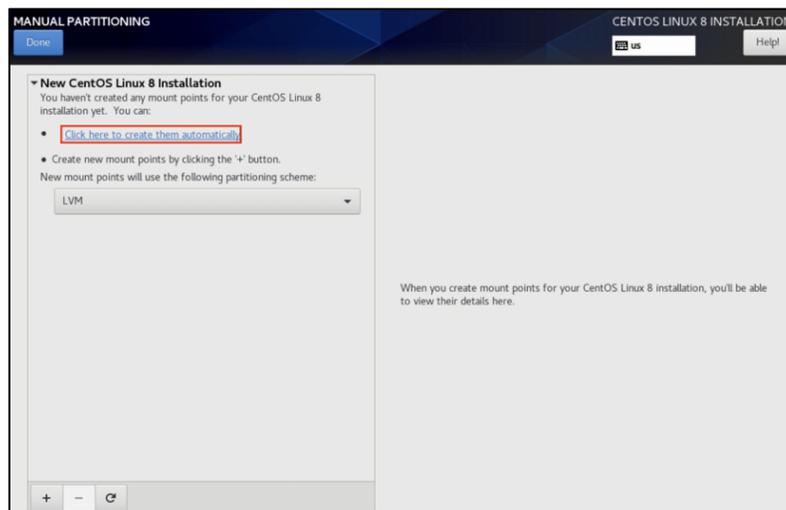

Step 3 Set Device Type to RAID and set RAID LEVEL to RAID 1.

Step 4 Click Update Settings. Each partition function as a software RAID.

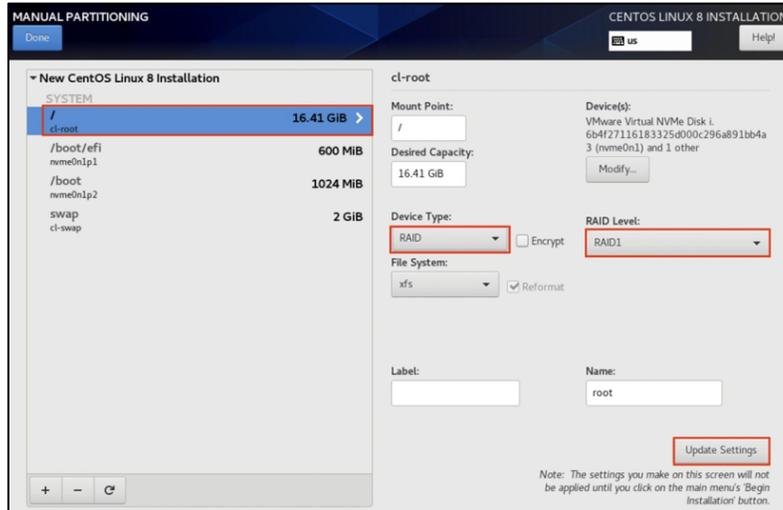


Procedure for Ubuntu


Creating and Configuring Storage Partitions

Storage partitions must be created and configured during the Ubuntu Server 20.04 installation. The partitions are required for mounting /boot, swap, and root/. Each partition functions as a software RAID.


Step 1 From the Guided storage configuration page, select **Custom storage layout**.

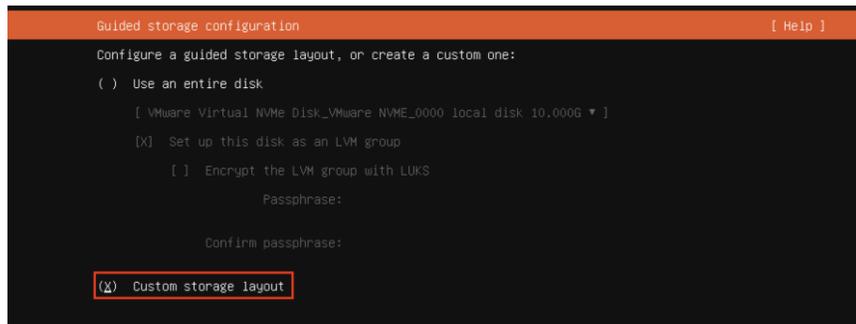


Step 2 From the Storage configuration page, select the first disk and choose **Use As Boot Device**.

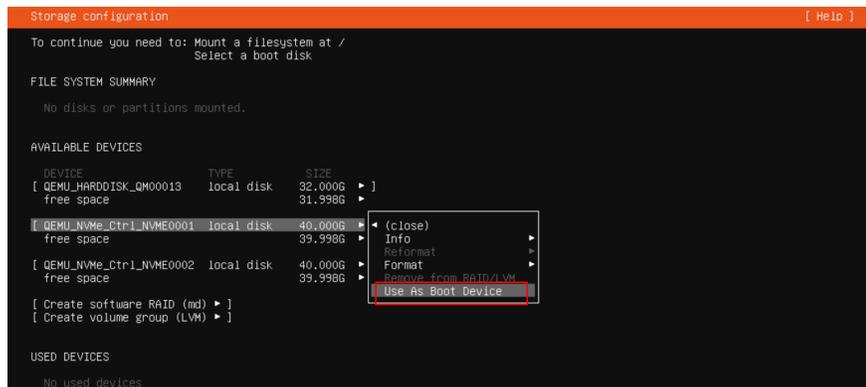

Step 3 From the Storage Configuration page, select the second disk and Use As Another Device.

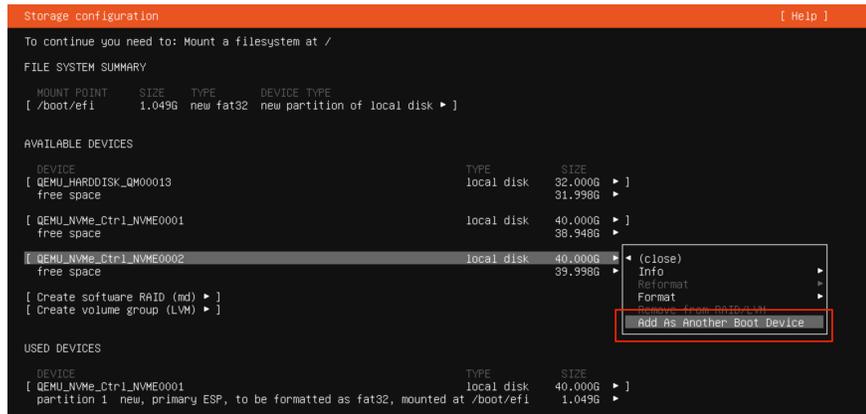


Step 4 Devices used for the MD bootable RAID will be listed as USED DEVICES in the interface.

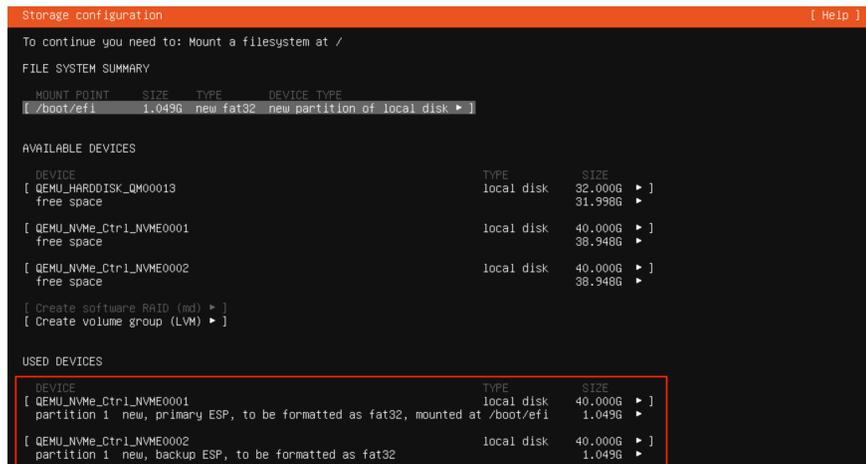

Step 5 From the Disk menu, select free space and choose Add GPT Partition. Leave both disks unformatted.


A Select first drive and select Add GPT Partition.

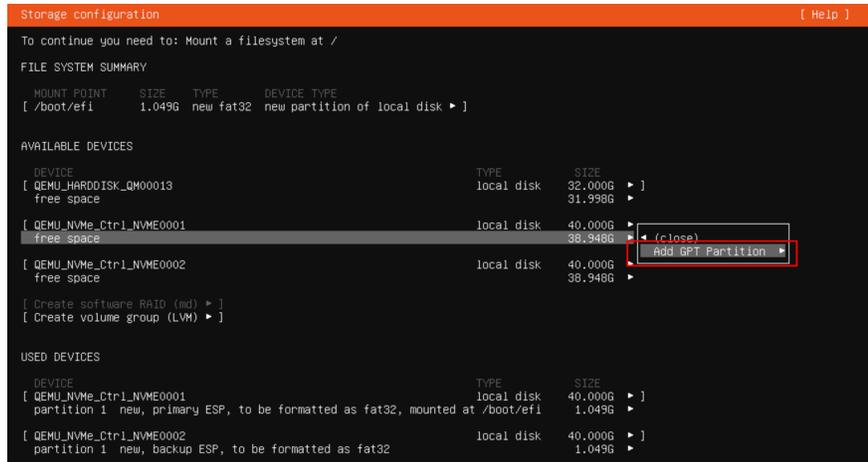

B Leave the drive unformatted.



C Select another drive for OS bootable RAID.

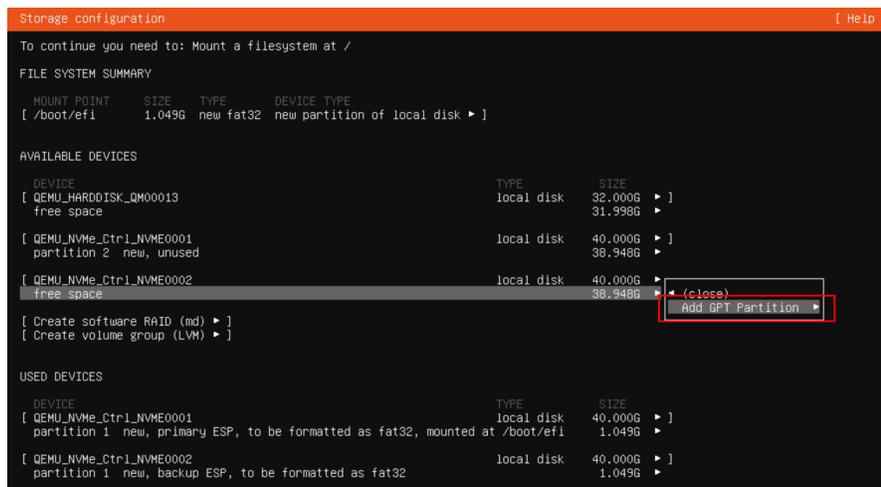

D Leave the drive also unformatted.




Note: You must use **[Leave unformatted]**. DO NOT mount the partition. Setting RAID1 and mounting partitions on multiple drives (MD) occurs later in this procedure.



Creating a Software RAID for Multiple Devices (MD)

To create the software RAID on multiple devices, from the Storage configuration page, select **Create software RAID (md)**.

Step 1 Select **Create Software RAID (md)** for the previously configured disks.

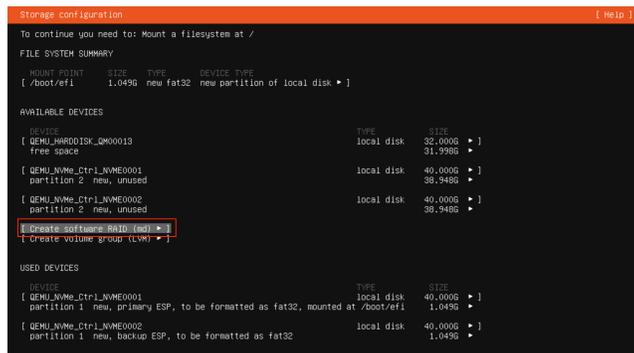

Step 2 Select the configured partitions on both disks, then create the Software RAID (md).

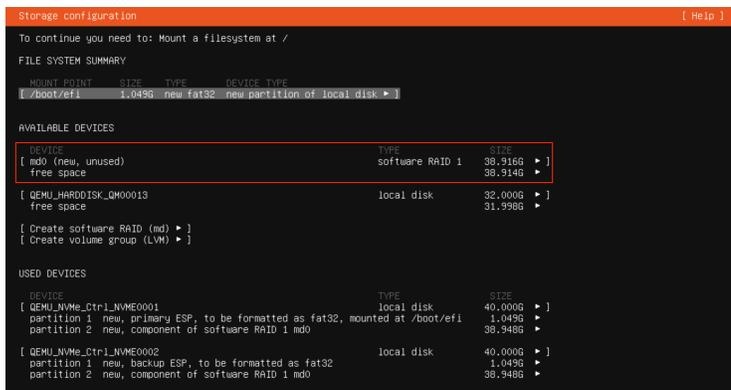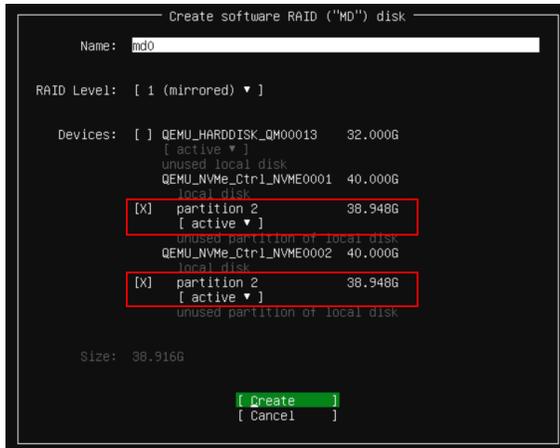


Configuring the Boot Partition for MD


The following procedure describes how to configure the /boot, swap, and root/ partitions on both disks

To set MD as the mounting point:


Step 1 Select the free space option in the md, then Choose Add GPT Partition.

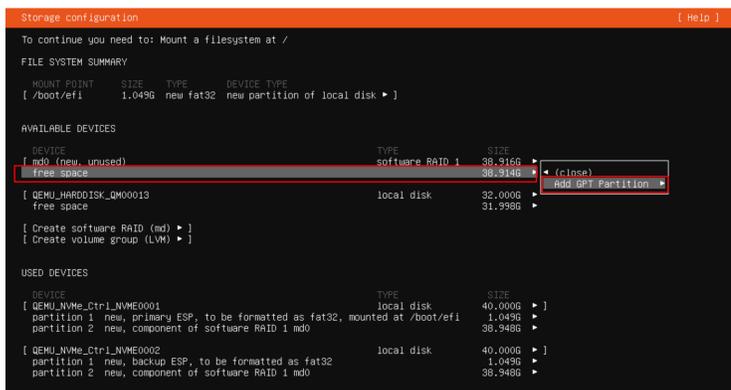


Step 2 Set the size of the EFI System Partition (ESP). Allocate sufficient capacity for each partition based on anticipated usage.

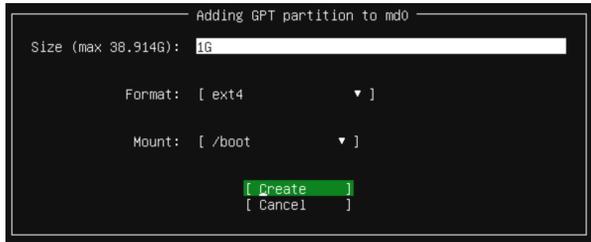

Step 3 After creating the partitions, the md configuration should display the following information.

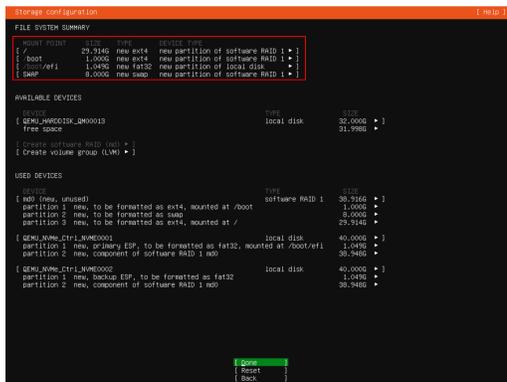


Step 4 From the Confirm destructive action popup, select **Continue**. The partition settings are now in effect.

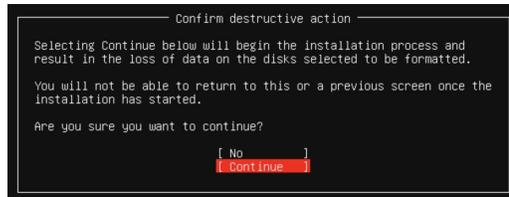


Procedure for SLES 15 SP2, and SP3

When installing SLES 15 SP2 or SP3, you must manually create RAID1 and configure the partitions. To manually create RAID1 and configure the partitions:


Step 1 From the SUSE Suggested Partitioning page, select **Expert Partitioner > Next**.

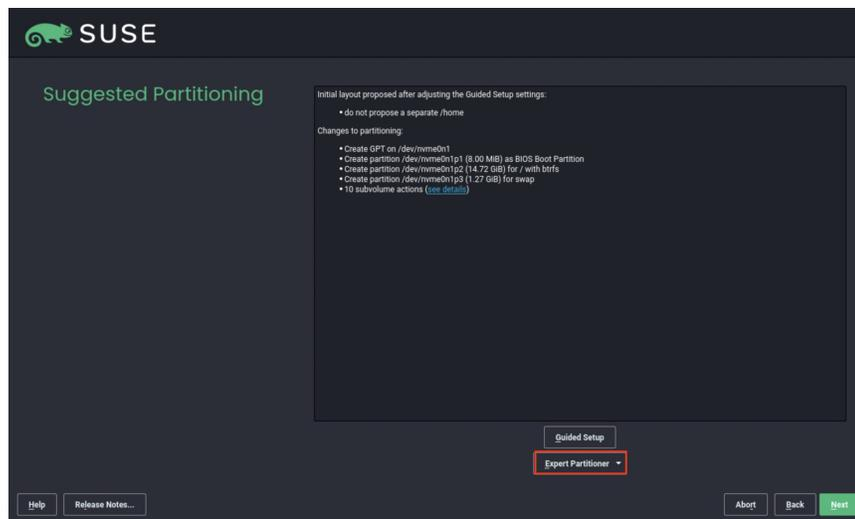


Step 2 From the SUSE Add menu, select Add > RAID.

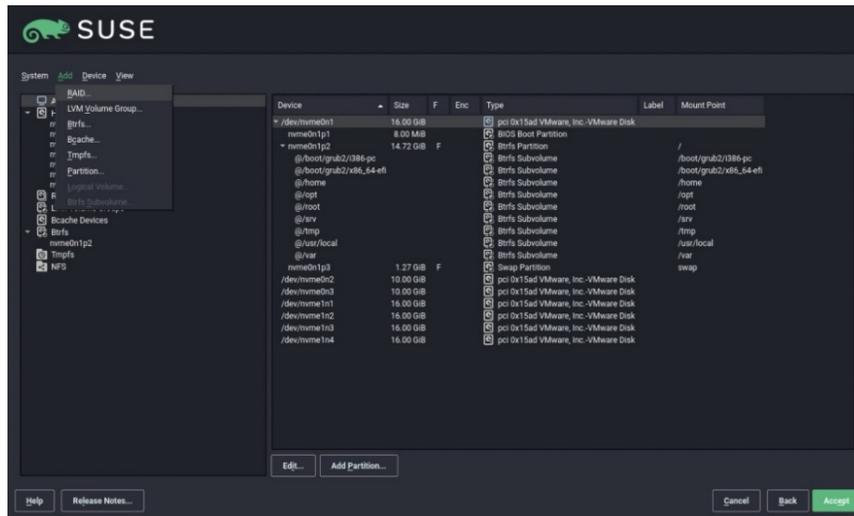


Step 3 From the SUSE Add RAID page, select RAID 1 (Mirroring) for the RAID Type.

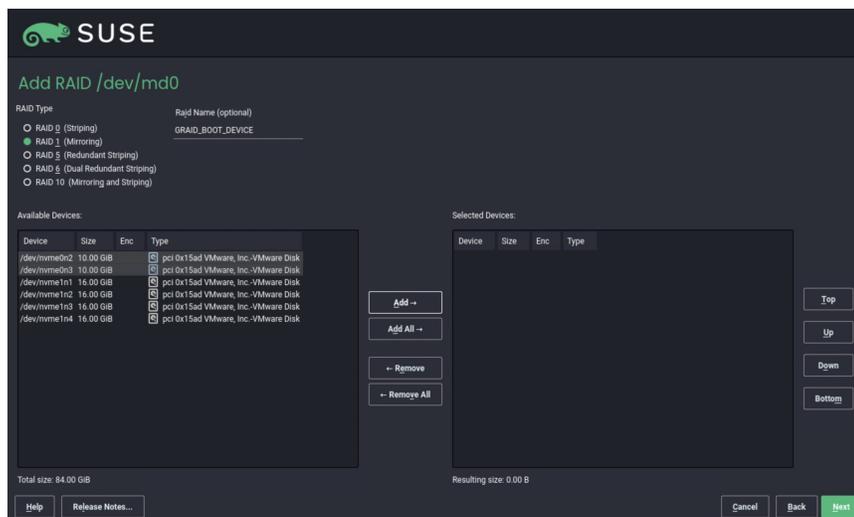

Step 4 From the Selected Devices list, select two NVMe disks and click Add.

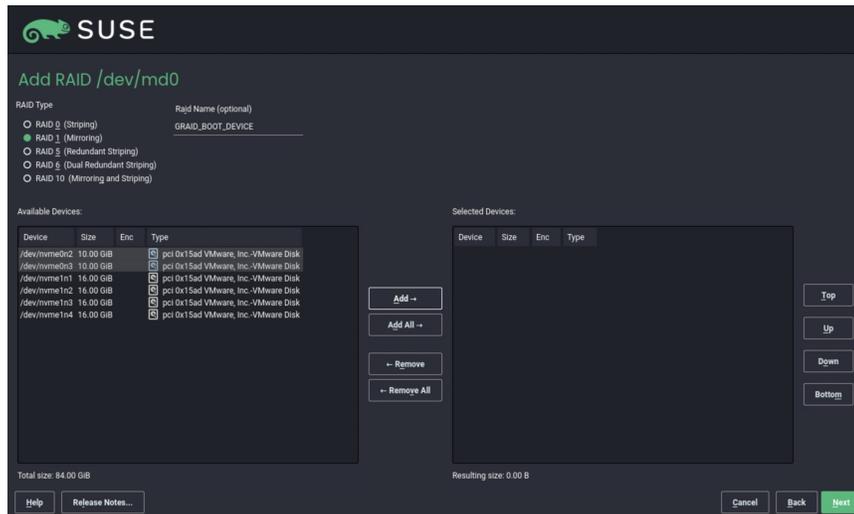

Step 5 Click Next to continue with the installation.

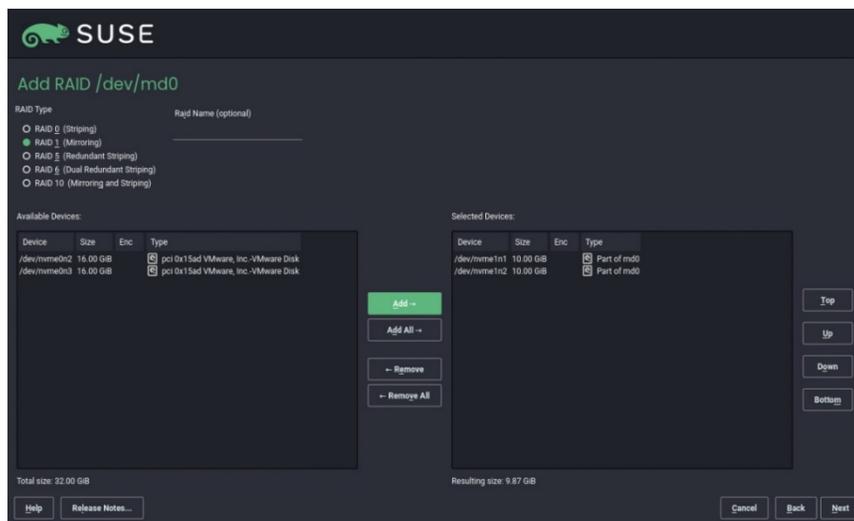

Manually Migrating the RAID Configuration Between Hosts

The following procedure describes how to migrate the RAID configuration manually between hosts.

Restoring a RAID Configuration from a Backup Configuration File

To restore a RAID configuration from a backup configuration file:

Step 1 Periodically back up the configuration file `/etc/graid.conf` from the original host. Use `cp` or `scp` to move the configuration file to another system.

Step 2 Set up the target host and ensure that the SupremeRAID™ service is stopped.

Note: If the target host already contains an installed and running SupremeRAID™ card, stop the service and copy the `graid.conf` file from the original system. On the original system, stop any running applications or unmount the mountpoint before starting the SupremeRAID™ service.

Step 3 Move all the SSDs from the original host to the new host.

Step 4 Install the SupremeRAID™ driver on the new server. Stop the SupremeRAID™ service before copying the configuration backup file to the new host using the same path (`/etc/graid.conf`). If you have already enabled the graphical management console, please ensure to disable it as well.

```
$ sudo systemctl stop graid
$ sudo systemctl stop graid-mgr.service
```

Step 5 Restore the configuration file.

```
$ sudo graidctl restore config --file <FilePath>
```

Step 6 If the original card also moved to the new host, start the SupremeRAID™ service directly.

```
$ sudo systemctl start graid
```

Step 7 (Optional) If the card changed, you must apply the new license.

```
$ sudo graidctl apply license [LICENSE_KEY]
```

Restoring a RAID Configuration from SSD Metadata

The SupremeRAID™ system provides robust support for restoring RAID configurations from SSD metadata. This feature allows you to recover a RAID configuration quickly and easily in case of a failure or other issues. Perform the following procedure to restore the RAID configuration and get the SupremeRAID™ system back online.

To restore a RAID configuration from an SSD's metadata:

Step 1 Set up the target host and make sure that the SupremeRAID™ service is stopped.

Note: If the target host already contains an installed and running SupremeRAID™ card, stop the service the SupremeRAID™ service before restoring the configuration. On the original system, stop any running applications or unmount the mountpoint before starting the SupremeRAID™ service.

Step 2 Move all the SSDs from the original host to the new host.

Step 3 Install the SupremeRAID™ driver on the new server and stop the SupremeRAID™ service before restoring the configuration file. If you have already enabled the graphical management console, please ensure to disable it as well.

```
$ sudo systemctl stop graid
$ sudo systemctl stop graid-mgr.service
```

Step 4 Run the restore command and restore the configuration file from SSD's metadata.

```
$ sudo graidctl restore config
```

```
$ sudo ./graidctl/cmd/graidctl/graidctl re config
/dev/nvme0n1: Config integrity check Passed!
Skip /dev/nvme1n1(nqn.           ): no config found
Skip /dev/nvme2n1(nqn.           ): no config found
Skip /dev/nvme3n1(nqn.           ): no config found
/dev/nvme4n1: Config integrity check Passed!
Skip /dev/nvme5n1(nqn.           ): no config found
Skip /dev/nvme6n1(nqn.           ): no config found
/dev/nvme7n1: Config integrity check Passed!
Skip /dev/sda(t10.ATA           QEMU HARDDISK      ROOTDISK      ): no config found
Skip /dev/sdb(t10.ATA           QEMU HARDDISK      SN_0001       ): no config found
Found the following configs:
[ INDEX ]: The latest config recommended for restoration
[ 0 ]: Device /dev/nvme0n1(nqn.           ), UUID
[ 1 ]: Device /dev/nvme4n1(nqn.           ), UUID
[ 2 ]: Device /dev/nvme7n1(nqn.           ), UUID
Please select one config to restore (0-2): 1
Timestamp: 2025-06-23 14:59:16 +0800 CST
Epoch: 6
Config UUID:
Physical Drive List:


| PD ID | DG ID | NQN/WWID | MODEL | CAPACITY |
|-------|-------|----------|-------|----------|
| 0     | N/A   | nqn.     | N/A   | N/A      |
| 1     | N/A   | nqn.     | N/A   | N/A      |
| 2     | N/A   | nqn.     | N/A   | N/A      |


Drive Group List:
No DG found
Warning: This is an unsafe operation!
Restore LEGACY config from PD to /etc/graid.conf may cause data inconsistency or data loss.
Proceed only if you fully understand the risks and have verified your backup.
To confirm, type (Case sensitive): 'Confirm Unsafe Operation'
```

Step 5 If the original card also moved to the new host, start the SupremeRAID™ service directly.

```
$ sudo systemctl start graid
```

Step 6 (Optional) If the card changed, you must apply the new license.

```
$ sudo graidctl apply license [LICENSE_KEY]
```


Obtaining SMART Information from Devices

Self-Monitoring, Analysis and Reporting Technology (SMART) data is a set of metrics and parameters that SSDs collect and monitor to assess their health and performance. Although the specific information included in the SMART data varies by manufacturer and drive model, it typically reports on the temperature, available spare capacity, power-on hours, error rates, and other details that are used to monitor the health of the SSD and predict its future performance.

By monitoring the SMART data for an SSD, you can identify a potential issue or degradation of the drive before it becomes a serious problem.

To check the SMART information for the gpd device using the NVMe smart-log or smartctl command, follow these steps:

Step 1 Open a terminal window and log in to the system with administrative privileges.

Step 2 Use the list physical drives command to identify the device name for the gpd device, such as /dev/gpdx.

```
$ sudo graidctl list physical_drive
```

Step 3 Use the **nvme** command to display the SMART data for the gpd device:

```
$ sudo nvme smart-log /dev/gpd[#]
```

- Alternatively, you can use the smartctl command to display the SMART data for the gpd device:

```
$ sudo smartctl -d nvme -a /dev/gpd[#]
```

A detailed report of the SMART data for the gpd device, including the temperature, available spare capacity, and other details, appears. Use this information to monitor the health and performance of the device and to diagnose any potential issues.

Note: The specific steps and commands used to display SMART data may vary, depending on your system and the version of the nvme or smartctl command in use. Be sure to use the correct device name for the gpd device in the command.

The following figure shows an output example using nvme smart-log.

```

root@graid:~# graidctl ls pd
/List physical drive successfully.

```

PD ID (8)	DG ID	DEVICE PATH	NQN/WWID	MODEL	CAPACITY	SLOT ID	NUMA NODE	WEAROUT	STATE
0	N/A	/dev/gpd0	nqn.2019-08.org.qemu:NVME0001	QEMU NVMe Ctrl	30 GiB	N/A	0	0%	UNCONFIGURED_GOOD
1	N/A	/dev/gpd1	nqn.2019-08.org.qemu:NVME0002	QEMU NVMe Ctrl	30 GiB	N/A	0	0%	UNCONFIGURED_GOOD
2	N/A	/dev/gpd2	nqn.2019-08.org.qemu:NVME0003	QEMU NVMe Ctrl	30 GiB	N/A	0	0%	UNCONFIGURED_GOOD
3	N/A	/dev/gpd3	nqn.2019-08.org.qemu:NVME0004	QEMU NVMe Ctrl	30 GiB	N/A	0	0%	UNCONFIGURED_GOOD
4	N/A	/dev/gpd5	nqn.2019-08.org.qemu:NVME0005	QEMU NVMe Ctrl	30 GiB	N/A	0	0%	UNCONFIGURED_GOOD
5	N/A	/dev/gpd4	nqn.2019-08.org.qemu:NVME0006	QEMU NVMe Ctrl	30 GiB	N/A	0	0%	UNCONFIGURED_GOOD
6	N/A	/dev/gpd7	nqn.2019-08.org.qemu:NVME0007	QEMU NVMe Ctrl	30 GiB	N/A	0	0%	UNCONFIGURED_GOOD
7	N/A	/dev/gpd6	nqn.2019-08.org.qemu:NVME0008	QEMU NVMe Ctrl	30 GiB	N/A	0	0%	UNCONFIGURED_GOOD

```

root@graid:~# sudo nvme smart-log /dev/gpd0
Smart Log for NVME device:gpd0 namespace-id:ffffff
critical_warning : 0
temperature : 50 C (323 Kelvin)
available_spare : 0%
available_spare_threshold : 0%
percentage_used : 0%
endurance_group critical warning summary: 0
data_units_read : 139,489
data_units_written : 74,819
host_read_commands : 2,492,356
host_write_commands : 1,881,814
controller_busy_time : 0
power_cycles : 0
power_on_hours : 126
unsafe_shutdowns : 0
media_errors : 0
num_err_log_entries : 0
Warning Temperature Time : 0
Critical Composite Temperature Time : 0
Thermal Management T1 Trans Count : 0
Thermal Management T2 Trans Count : 0
Thermal Management T1 Total Time : 0
Thermal Management T2 Total Time : 0

```

The following figure shows an output example using smartctl.

```

root@graid:~# graidctl ls pd
/List physical drive successfully.

```

PD ID (8)	DG ID	DEVICE PATH	NQN/WWID	MODEL	CAPACITY	SLOT ID	NUMA NODE	WEAROUT	STATE
0	N/A	/dev/gpd0	nqn.2019-08.org.qemu:NVME0001	QEMU NVMe Ctrl	30 GiB	N/A	0	0%	UNCONFIGURED_GOOD
1	N/A	/dev/gpd1	nqn.2019-08.org.qemu:NVME0002	QEMU NVMe Ctrl	30 GiB	N/A	0	0%	UNCONFIGURED_GOOD
2	N/A	/dev/gpd2	nqn.2019-08.org.qemu:NVME0003	QEMU NVMe Ctrl	30 GiB	N/A	0	0%	UNCONFIGURED_GOOD
3	N/A	/dev/gpd3	nqn.2019-08.org.qemu:NVME0004	QEMU NVMe Ctrl	30 GiB	N/A	0	0%	UNCONFIGURED_GOOD
4	N/A	/dev/gpd5	nqn.2019-08.org.qemu:NVME0005	QEMU NVMe Ctrl	30 GiB	N/A	0	0%	UNCONFIGURED_GOOD
5	N/A	/dev/gpd4	nqn.2019-08.org.qemu:NVME0006	QEMU NVMe Ctrl	30 GiB	N/A	0	0%	UNCONFIGURED_GOOD
6	N/A	/dev/gpd7	nqn.2019-08.org.qemu:NVME0007	QEMU NVMe Ctrl	30 GiB	N/A	0	0%	UNCONFIGURED_GOOD
7	N/A	/dev/gpd6	nqn.2019-08.org.qemu:NVME0008	QEMU NVMe Ctrl	30 GiB	N/A	0	0%	UNCONFIGURED_GOOD

```

root@graid:~# sudo smartctl -d nvme -a /dev/gpd0
smartctl 7.2 2020-12-30 r5155 [x86_64-linux-5.15.0-78-generic] (local build)
Copyright (C) 2002-20, Bruce Allen, Christian Franke, www.smartmontools.org

=== START OF INFORMATION SECTION ===
Model Number:          QEMU NVMe Ctrl
Serial Number:         NVME0001
Firmware Version:      7.2.2
PCI Vendor ID:         0x1b36
PCI Vendor Subsystem ID: 0x1af4
IEEE OUI Identifier:   0x525400
Controller ID:         0
NVMe Version:          1.4
Number of Namespaces: 256
Local Time is:         Tue Jun 25 09:28:58 2024 UTC
Firmware Updates (0x03): 1 Slot, Slot 1 R/0
Optional Admin Commands (0x010a): Format NS_Mngmt Drbl_Bf_Cfg
Optional NVM Commands (0x015d):  Comp DS_Mngmt Wr_Zero Sav/Sel_Feat Timestmp *Other*
Log Page Attributes (0x07): S/H_per_NS Cmd_Eff_Lg Ext_Get_Lg
Maximum Data Transfer Size: 128 Pages
Warning Comp. Temp. Threshold: 70 Celsius
Critical Comp. Temp. Threshold: 100 Celsius

Supported Power States
St Op      Max Active   Idle   RL RT WL WT  Ent_Lat  Ex_Lat
0 +       25.00W  -      -      0  0  0  0       16      4

=== START OF SMART DATA SECTION ===
SMART overall-health self-assessment test result: PASSED

SMART/Health Information (NVMe Log 0x02)
Critical Warning:          0x00
Temperature:              50 Celsius
Available Spare:           0%
Available Spare Threshold: 0%
Percentage Used:          0%
Data Units Read:          139,489 [71.4 GB]
Data Units Written:       74,819 [38.3 GB]
Host Read Commands:      2,492,356
Host Write Commands:     1,881,814
Controller Busy Time:    0
Power Cycles:              0
Power On Hours:           126
Unsafe Shutdowns:        0
Media and Data Integrity Errors: 0
Error Information Log Entries: 0
Warning Comp. Temperature Time: 0
Critical Comp. Temperature Time: 0

Error Information (NVMe Log 0x01, 1 of 1 entries)
No Errors Logged

```

Monitoring System Input/Output Statistics for Devices Using iostat

The sysstat package contains the tools most commonly used to monitor I/O statistics in Linux systems. The sysstat package includes the iostat tool, which monitors system I/O device loading by observing the time the devices are active relative to their average transfer rates. The **iostat** command generates reports that allow you to fine-tune the system configuration to better balance the I/O load between physical disks.

For example, to monitor specific devices and display statistics in megabytes per second (Mbps), issue the following command:

```
$ iostat -m md124 sda nvme0n1
```

The following figure shows an output example.



```
[graid@graid-demo ~]$ iostat -m md124 sda nvme3n1
Linux 4.18.0-348.7.1.el8_5.x86_64 (graid-demo) 01/06/2022 _x86_64_ (16 CPU)

avg-cpu:  %user   %nice %system %iowait  %steal   %idle
           0.01    0.00    0.15    0.00    0.00   99.84

Device            tps    MB_read/s  MB_wrtn/s  MB_dscd/s  MB_read  MB_wrtn  MB_dscd
md124              0.00         0.00         0.00         0.00         5         0         0
nvme3n1            0.00         0.00         0.00         0.00         1         0         0
sda                 6.35         0.74         0.05         0.00      80843      5208         0
```

sysstat Versions v12.3.3 and Later

For sysstat versions v12.3.3 and later, the iostat tool includes an alternative directory feature that allows you to specify the directory from which to read device statistics.

- Add a **+f** parameter to the tool and use the `/sys/devices/virtual/graid/graid` sysfs device path to read device statistics from both the standard kernel files and the files in the alternative directory.

The following figure shows an alternative directory description from the iostat manual page.

```

-f directory
+f directory
Specify an alternative directory for iostat to read devices statistics. Option -f tells iostat to use only the files located in the alternative directory, whereas option +f tells it to use both the standard kernel files and the files located in the alternative directory to read device statistics.

directory is a directory containing files with statistics for devices managed in userspace. It may contain:
- a "diskstats" file whose format is compliant with that located in /proc,
- statistics for individual devices contained in files whose format is compliant with that of files located in /sys.

In particular, the following files located in directory may be used by iostat:

directory/block/device/stat
directory/block/device/partition/stat

partition files must have an entry in directory/dev/block/ directory, e.g.:
directory/dev/block/major:minor --> ../block/device/partition

```

To check the `iostat` version, issue the following command:

```
$ iostat -V
```

The following figure shows an output example.



```


[graid@graid-demo ~]$ iostat -V
sysstat version 12.5.5
(C) Sebastien Godard (sysstat <at> orange.fr)

```

The `gpd#` statistics are not displayed in the `iostat` report without appending the `+f` parameter and defining the `sysfs` path.

```
$ iostat -m +f /sys/devices/virtual/sgp/sdp gpd0n1 md124 sda nvme0n1 gpd3
```

The following figure shows an output example.

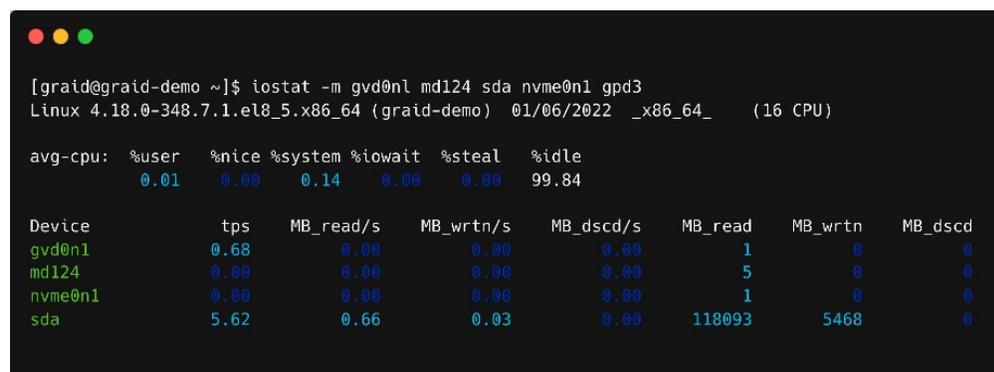

```

[graid@graid-demo ~]$ iostat -m +f /sys/devices/virtual/sgp/sdp gpd0n1 md124 sda nvme0n1 gpd3
Linux 4.18.0-348.7.1.el8_5.x86_64 (graid-demo) 01/06/2022 _x86_64_ (16 CPU)

avg-cpu:  %user   %nice %system %iowait  %steal   %idle
           0.01    0.00   0.14    0.00    0.00   99.84

Device            tps    MB_read/s    MB_wrtn/s    MB_dscd/s    MB_read    MB_wrtn    MB_dscd
gvd0n1             0.68         0.00         0.00         0.00         1           0           0
md124              0.00         0.00         0.00         0.00         5           0           0
nvme0n1            0.00         0.00         0.00         0.00         1           0           0
sda                5.62         0.66         0.03         0.00       118093       5468           0

```

The `gpd#` statistics are displayed when the `+f` parameter is appended and the `sysfs` path is defined.

```
$ iostat -m +f /sys/devices/virtual/sgp/sdp gpd0n1 md124 sda nvme0n1 gpd3
```

The following figure shows an output example.

```
[graid@graid-demo ~]$ iostat -m +f /sys/devices/virtual/raid/graid/graid gvd0n1 md124 sda nvme0n1 gpd3
Linux 4.18.0-348.7.1.el8_5.x86_64 (graid-demo) 01/06/2022 _x86_64_ (16 CPU)

avg-cpu:  %user   %nice %system %iowait  %steal   %idle
           0.01    0.00    0.15    0.00    0.00   99.84

Device            tps    MB_read/s    MB_wrtn/s    MB_dscd/s    MB_read    MB_wrtn    MB_dscd
gpd3                0.00         0.00         0.00         0.00         9          0          0
gvd0n1              0.00         0.00         0.00         0.00         2          0          0
md124               0.00         0.00         0.00         0.00         5          0          0
nvme0n1             0.00         0.00         0.00         0.00         1          0          0
sda                 6.22         0.72         0.05         0.00       80853       5208         0
```

sysstat Versions Prior to v12.3.3

For operating systems with sysstat versions prior to v12.3.3 (for example, CentOS), Graid Technology provides an alternate tool called giostat to display device statistics.

In the following example, the operating system version of iostat is prior to v12.3.3.

```
$ sudo yum list --installed |grep sysstat
```

The following figure shows an output example.

```
[graid@graid-demo ~]$ sudo yum list --installed |grep sysstat
sysstat.x86_64                               11.7.3-6.el8                                @appstream
```

The `giostat` and `iostat` tools are very similar and their usage is the same. Set the parameter preferences using `giostat`. The following figure shows an output example.

```
[graid@graid-demo ~]$ sudo graidctl list physical drive;sudo graidctl list drive group ;sudo graidctl list virtual drive
✔List physical drive successfully.
```

PD ID (5)	DG ID	DEVICE PATH	NON/WWID	MODEL	CAPACITY	SLOT ID	STATE
0	0	/dev/gpd0	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z0G0A001T1L8	KCM61VUL3T20	3.2 TB	12	ONLINE
1	0	/dev/gpd3	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z0I0A004T1L8	KCM61VUL3T20	3.2 TB	19	ONLINE
2	0	/dev/gpd2	nqn.2019-10.com.kioxia:KCM61VUL3T20:X0X0A01E1L8	KCM61VUL3T20	3.2 TB	18	ONLINE
3	0	/dev/gpd1	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A04HT1L8	KCM61VUL3T20	3.2 TB	8	ONLINE
4	N/A	/dev/gpd4	nqn.2019-10.com.kioxia:KCM61VUL3T20:Z080A038T1L8	KCM61VUL3T20	3.2 TB	0	UNCONFIGURED_GOOD

```
✔List drive group successfully.
```

DG ID	MODE	VD NUM	CAPACITY	FREE	USED	STATE
0	RAID6	4	6.4 TB	6.4 TB	25 GB	OPTIMAL

```
✔List virtual drive successfully.
```

VD ID (4)	DG ID	SIZE	DEVICE PATH	STATE	EXPORTED
0	0	10 GB	/dev/gvd0n1	RESYNC	No
1	0	5.0 GB	/dev/gvd1n1	RESYNC	No
2	0	5.0 GB	/dev/gvd2n1	RESYNC	No
3	0	5.0 GB	/dev/gvd3n1	RESYNC	No

```
[graid@graid-demo ~]$ giostat -m gvd0n1 gpd3 nvme10n1 sda
Linux 4.18.0-348.2.1.el8_5.x86_64 (graid-demo) 01/06/2022 _x86_64_ (128 CPU)
```

```
avg-cpu:  %user   %nice %system %iowait  %steal   %idle
           0.02    0.00    0.04    0.00    0.00   99.93
```

Device	tps	MB read/s	MB wrtn/s	MB dscd/s	MB read	MB wrtn	MB dscd
gpd3	1449.98	3.79	4.19	0.00	3355542	3707736	0
gvd0n1	0.05	0.01	0.00	0.00	9530	0	0
nvme10n1	0.00	0.00	0.00	0.00	1	0	0
sda	0.00	0.00	0.00	0.00	15	0	0

Setting Up the Auto-mount File Systems on Linux Using the SupremeRAID™ Driver

To set up the auto-mount file systems on Linux using the SupremeRAID™ driver:

Step 1 Create a virtual drive.

```
$ sudo graidctl create virtual_drive [DG_ID] [size] [flags]
```

Step 2 Format the virtual drive and create a mount point for it.

```
$ sudo mkdir /mnt/[name-of-the-drive]
$ sudo mkfs.[file-system-type] /dev/gdgXnY
$ sudo mount /dev/gdgXnY /mnt/[name-of-the-drive]/
```

Step 3 Obtain the name, and file system type.

```
$ ls -l /dev/[disk]/[by-id]/
```

Step 4 Edit the /etc/fstab file:

A Edit the /etc/fstab file.

```
$ sudo vim /etc/fstab
```

B Append one line of code to the end of the file using the following format.

RHEL base

```
$ /dev/[disk]/[by-id] [mount-point] [file-system-format]
x-systemd.wants=graid.service,x-systemd.automount,nofail [dump] [pass]
```

Debian base

```
$ /dev/[disk]/[by-id] [mount-point] [file-system-format]
x-systemd.requires=graid.service,nofail [dump] [pass]
```

C Show the output example (Debian).

```

[root@graid-demo ~]# ls -l /dev/disk/by-id/
total 0
lrwxrwxrwx. 1 root root 12 Sep  8 06:27 gdg-eui.00abcdef00136d5b65ald3d7ecb5b8ad -> ../../gdg0n1
lrwxrwxrwx. 1 root root 12 Sep  8 06:27 gdg-GRAID-SR_96BCDBC839F109EE_1 -> ../../gdg0n1
lrwxrwxrwx. 1 root root 10 Sep  6 05:09 lvm-pv-uuid-cjIz8z-5SmL-8NmF-z61A-1z1k-J5DT-HGFlnS -> ../../sda3
lrwxrwxrwx. 1 root root  9 Sep  7 23:12 md-name-graid-demo:0 -> ../../md0
lrwxrwxrwx. 1 root root  9 Sep  7 23:12 md-uuid-636e39c5.cbfa794e:91f4dd06:e8fbc6be -> ../../md0
lrwxrwxrwx. 1 root root 13 Sep  7 23:12 nvme-
nvme.1b36-4e564d4530303032-51454d55204e564d65204374726c-00000001 -> ../../nvme0n1
lrwxrwxrwx. 1 root root 13 Sep  7 23:12 nvme-
nvme.1b36-4e564d4530303034-51454d55204e564d65204374726c-00000001 -> ../../nvme1n1
lrwxrwxrwx. 1 root root 13 Sep  7 23:12 nvme-QEMU_NVMe_Ctrl_NVME0002 -> ../../nvme0n1
lrwxrwxrwx. 1 root root 13 Sep  7 23:12 nvme-QEMU_NVMe_Ctrl_NVME0004 -> ../../nvme1n1

[root@graid-demo ~]# sudo vim /etc/fstab
#
# /etc/fstab
# Created by anaconda on Thu May 18 23:02:31 2023
#
# Accessible filesystems, by reference, are maintained under '/dev/disk'
# See man pages fstab(5), findfs(8), mount(8) and/or blkid(8) for more info
#
/dev/mapper/rhel-root / xfs defaults 0 0
UUID=f6f00b7c-87d8-472a-90d1-41b73372b792 /boot xfs defaults 0 0
UUID=6C6D-B3E9 /boot/efi vfat umask=0077,shortname=winnt 0 0
/dev/mapper/rhel-swap swap defaults 0 0

/dev/disk/by-id/gdg-GRAID-SR_96BCDBC839F109EE_1 /mnt/graid_demo ext4 x-
systemd.requires=graid.service,nofail 0 0

#UUID=9c2ca3e2-6adc-44cc-926a-4125282cef15 /mnt/graid_demo1.5 xfs x-systemd.requires=graid.service,nofail
0 0
~

```

To disable the automount point or delete the virtual drive, edit the `/etc/fstab` file to delete/comment that entry, and then reboot the system.

Remove the device line and reboot the system.

```
$ sudo vim /etc/fstab
```

```
[root@graid-demo ~]# ls -l /dev/disk/by-id/
total 0
lrwxrwxrwx. 1 root root 12 Sep  8 06:27 gdg-eui.00abcdef00136d5b65a1d3d7ecb5b8ad -> ../../gdg0n1
lrwxrwxrwx. 1 root root 12 Sep  8 06:27 gdg-GRAID-SR_96BCDBC839F109EE_1 -> ../../gdg0n1
lrwxrwxrwx. 1 root root 10 Sep  6 05:09 lvm-pv-uuid-cjIZ8z-5SmL-8NmF-z6lA-1z1k-J5DT-HGFlNS -> ../../sda3
lrwxrwxrwx. 1 root root  9 Sep  7 23:12 md-name-graid-demo:0 -> ../../md0
lrwxrwxrwx. 1 root root  9 Sep  7 23:12 md-uuid-636e39c5:cbfa794e:91f4dd06:e8fbc6be -> ../../md0
lrwxrwxrwx. 1 root root 13 Sep  7 23:12 nvme-
nvme.1b36-4e564d4530303032-51454d55204e564d65204374726c-00000001 -> ../../nvme0n1
lrwxrwxrwx. 1 root root 13 Sep  7 23:12 nvme-
nvme.1b36-4e564d4530303034-51454d55204e564d65204374726c-00000001 -> ../../nvme1n1
lrwxrwxrwx. 1 root root 13 Sep  7 23:12 nvme-QEMU_NVMe_Ctrl_NVME0002 -> ../../nvme0n1
lrwxrwxrwx. 1 root root 13 Sep  7 23:12 nvme-QEMU_NVMe_Ctrl_NVME0004 -> ../../nvme1n1

[root@graid-demo ~]# sudo vim /etc/fstab
#
# /etc/fstab
# Created by anaconda on Thu May 18 23:02:31 2023
#
# Accessible filesystems, by reference, are maintained under '/dev/disk'
# See man pages fstab(5), findfs(8), mount(8) and/or blkid(8) for more info
#
/dev/mapper/rhel-root / xfs defaults 0 0
UUID=f6f00b7c-87d8-472a-90d1-41b73372b792 /boot xfs defaults 0 0
UUID=6C6D-B3E9 /boot/efi vfat umask=0077,shortname=winnt 0 0
/dev/mapper/rhel-swap swap swap defaults 0 0

#/dev/disk/by-id/gdg-GRAID-SR_96BCDBC839F109EE_1 /mnt/graid_demo ext4 x-
systemd.requires=graid.service,nofail 0 0

#UUID=9c2ca3e2-6adc-44cc-926a-4125282cef15 /mnt/graid_demo1.5 xfs x-systemd.requires=graid.service,nofail
0 0
~
```

ESXi Virtual Machine Support Using GPU Passthrough

You can create virtual machines with SupremeRAID™ support to maximize performance.


The following procedure describes how to set a single VM with SupremeRAID™. This setup is for use only within a single virtual machine and cannot be shared from the volume back to ESXi to a datastore for other virtual machines.

Hypervisor VMware support is ESXi 7.0U3.

Configuring Hosts for NVIDIA GPU Device Passthrough


Setting the ESXi Host in Maintenance Mode

From the Navigator menu, select **Host > Enter maintenance mode**.

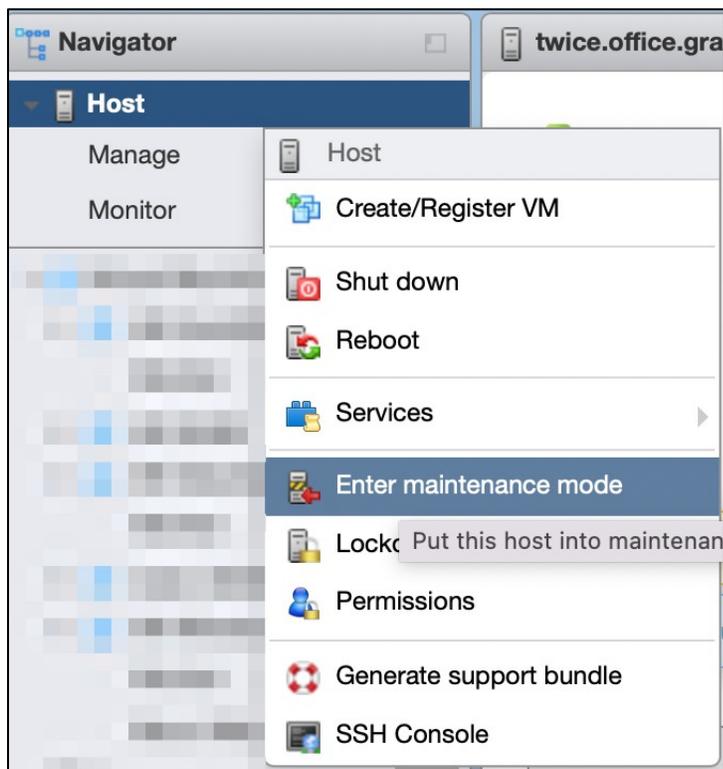

Managing PCI Device Passthrough

- Step 1** From the Navigator menu, select Manage > Hardware > PCI Devices. The Passthrough Configuration page appears, listing all available passthrough devices.
- Step 2** Select the NVIDIA T1000 (Quadro T1000 Mobile) and its Audio device.
- Step 3** Click Toggle passthrough.
- Step 4** Confirm that the Passthrough status is Active.

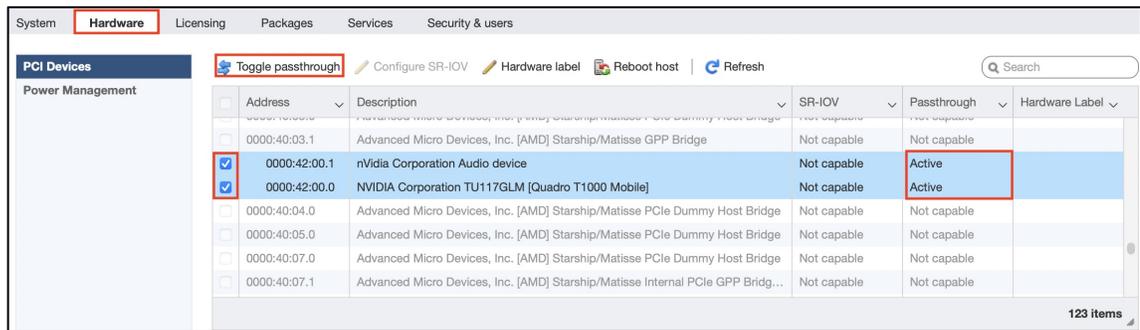

Note: If you move the SupremeRAID™ card to a different hardware slot or plan to do so, you MUST cancel its passthrough before shutting down the ESXi server. After the hardware change, you MUST set up the passthrough again; otherwise, the virtual machine will not recognize the PCIe device properly.

Configuring Virtual Machines

Attaching PCI Devices to the Virtual Machine

To attach PCI devices to the virtual machine:


- Step 1** From the Edit VM setting page, select Virtual Hardware > Add other device > PCI device.
- Step 2** Select Quadro T1000 and its Audio device as the two PCI devices.



Note: When the T1000 PCI device is assigned to the virtual machine, you must set the memory reservation to accommodate the fully configured memory size.

Step 3 Select Virtual Hardware > Memory.


Step 4 Check Reserve all guest memory (All locked).

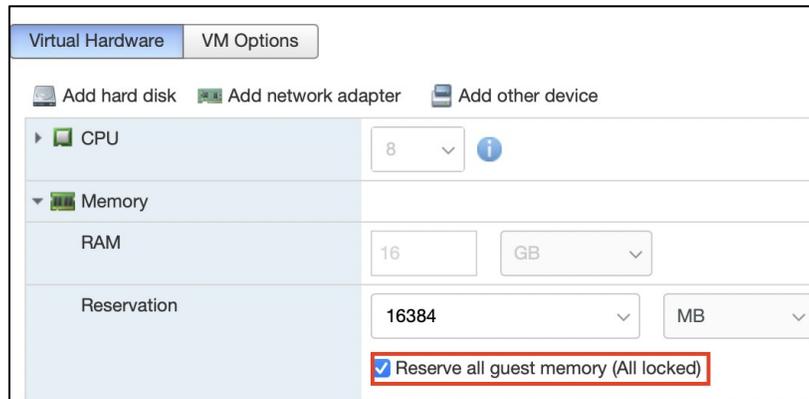

Enabling Point-to-Point (P2P) on the Virtual Machine

Enabling P2P on the virtual machine optimizes performance. To enable P2P on the virtual machine:

Step 1 From the Edit VM setting page, select VM Options > Advanced > Configuration Parameters > Edit Configuration....

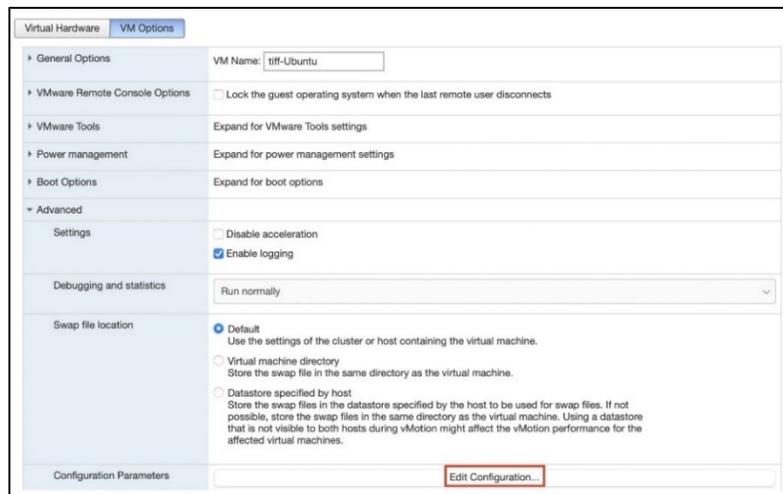

Step 2 Add the following two parameters:

```
hypervisor.cpuid.v0 = "FALSE"  
pciPassthru.allowP2P = "TRUE" pciPassthru.use64bitMMIO= "TRUE"
```

Step 3 From the Edit VM setting page, select VM Options > Boot Options > Firmware > EFI.

Step 4 Uncheck Whether or not to enable UEFI secure boot for this VM.

Virtual Hardware		VM Options
General Options	VM Name: <input type="text" value="GRAID"/>	
VMware Remote Console Options	<input type="checkbox"/> Lock the guest operating system when the last remote user disconnects	
VMware Tools	Expand for VMware Tools settings	
Power management	Expand for power management settings	
Boot Options	Choose which firmware should be used to boot the virtual machine:	
Firmware	<input type="text" value="EFI"/>	
Enable UEFI secure boot	<input type="checkbox"/> Whether or not to enable UEFI secure boot for this VM <small>Uncheck UEFI secure boot</small>	
Boot Delay	Whenever the virtual machine is powered on or reset, delay boot by <input type="text" value="0"/> milliseconds	
Force BIOS setup	<input type="checkbox"/> The next time the virtual machine boots, force entry into the BIOS setup screen.	
Failed Boot Recovery	<input type="checkbox"/> When the virtual machine fails to find a boot device, automatically retry boot after <input type="text" value="10"/> seconds	
Advanced	Expand for advanced settings	
Fiber Channel NPIV	Expand for fiber channel NPIV	

Using Self-Encrypting Drives (SEDs)

Self-Encrypting Drives (SEDs) provide hardware-based full-disk encryption, ensuring data security by automatically encrypting all data written to the drive and decrypting data read from it. SupremeRAID™ supports managing SEDs, including setting encryption keys, taking ownership of drives, and securely erasing data. Before configuring an SED drive, follow these guidelines:

Guidelines for Configuring an SED Drive

Before configuring an SED drive, follow these guidelines:

- **SED Key Configuration:** The SED key must be configured using the `graidctl` tool before creating physical drives or during the creation process if the drive is not yet locked.
- **Supported Devices:** Only NVMe devices are supported for SED configurations.
- **Locking Range:** Only the global locking range is supported.

Importing SED Keys

SupremeRAID™ allows you to import encryption keys (SED keys) to manage the SEDs. These keys are essential for unlocking drives during accessing data.

Importing a Single SED Key Using NQN/WWID

To import a single SED key for a specific drive identified by its NQN (NVMe Qualified Name) or WWID (World Wide Identifier), use the following command:

```
$ sudo graidctl edit config sed_key [NQN/WWID]
```

Importing a Batched SED Key Using NQN/WWID

To import multiple SED keys from a file, use the `--input-file` option:

```
$ sudo graidctl edit config sed_key --input-file [filename]
```

To import a single SED key using NQN/WWID, issue the following command:

```
$ sudo graidctl edit config sed_key [NQN/WWID]
```

File content format:

```
[NQN1/WWID1], [KEY1]
[NQN2/WWID2], [KEY2]
...
[NQNn/WWIDn], [KEYn]
```

Creating Physical Drives with SED Support

You can create a physical drive with SED support directly from the command line using `graidctl`. The following options allow you to either import an existing SED key or take ownership of the SED during creation.

Importing an SED Key During PD Creation

To create a physical drive with an SED and import an existing key, use the `--sed-import-key` option:

```
$ sudo graidctl create physical_drive /dev/nvme1 --sed-import-key
```

This command will prompt you for confirmation and the current SID (Security Identifier) password. To skip prompts, use additional options:

```
$ sudo graidctl create physical_drive /dev/nvme1 --sed-import-key --current-sid mypassword
```

Taking Ownership of an SED During PD Creation

To take ownership of a physical drive with SED support (if the drive is not yet locked), use the `--sed-take-ownership` option. The command will prompt you for confirmation, a new SED key, and credentials:

Note: This action will erase all user data on the drive.

```
$ sudo graidctl create physical_drive /dev/nvme1 --sed-take-ownership
```

To skip prompts, use the following options:

```
$ sudo graidctl create physical_drive /dev/nvme1 --sed-take-ownership --new-sed-key newpassword --no-current-sid --confirm-to-erase
$ sudo graidctl create physical_drive /dev/nvme1 --sed-take-ownership --new-sed-key newpassword --current-sid mypassword --confirm-to-erase
$ sudo graidctl create physical_drive /dev/nvme1 --sed-take-ownership --new-sed-key newpassword --psid XXXXXXXXXXXXXXXXXXXX --confirm-to-erase
```

Note: When taking ownership, the SID and admin1 key will both be set to the same key (known as the SED key), and only this SED key will be stored in the system.

Creating Physical Drives with SED Unlock Script

This enhancement improves how the SED unlock script handles scenarios where keys are retrieved from an external KMS (Key Management Server). It ensures that if the key is temporarily unavailable, the unlock process will not block service startup and can be retried later once the key becomes accessible.

SED Unlock Script Mechanism

Provide a user-written sed unlock script, allowing Graid to call this script to perform the sed-unlock operation when creating a physical drives.

- Config file : /etc/graid/graidserver.conf
- Parameter: sed_unlock_script

SED Unlock Timeout Mechanism

Although the timeout mechanism is not required for all use cases, the systemd service for Graid still enforces a 180-second timeout. To provide flexibility, a configurable timeout parameter has been added, which can be disabled if needed.

- Config file: /etc/graid/graidserver.conf
- Parameter: sed_unlock_script_timeout_sec
- Default: 60 seconds
- Disable: Set to 0
- Maximum: 120 seconds (any value above this will be capped automatically)

Note: This timeout is independent of the systemd Graid service timeout (180 seconds).

Physical Drive SED Unlock Failure

When the configured SED unlock script does not return a successful status, the following message will be displayed:

- PD state: Changes to OFFLINE, and sed_state is set to Locked.
- DG state on service start: If a PD is OFFLINE and sed_state=Locked, the DG transitions to OFFLINE.
- Other DG transitions: Follow existing logic. For example, if a user hot-removes a drive, the DG enters the DEGRADED state. When the drive is reinserted and the unlock process fails, the DG remains DEGRADED instead of transitioning to OFFLINE. Even after a service restart, the failed unlock on that PD will not prevent the DG from coming up and entering the DEGRADED state.

Script return codes:

- rc = 0: Unlock successful
- rc = 2: PD marked as MISSING
- rc = others: PD set to OFFLINE (Locked)

Retrying Unlock Manually

You can manually retry the SED unlock by bringing the PD back online:

```
$ sudo graidctl edit pd <pd_id> marker online
```

Secure Erasing Physical Drives (PDs)

SupremeRAID™ supports securely erasing all data on physical drives that support SEDs. This action leverages the SED's built-in secure erase functionality, which is faster and more secure than standard data deletion methods.

To securely erase physical drives, use the following command:

```
$ sudo graidctl delete physical_drive 0-2 --secure-erase
```

Flags for Secure Erase:

- `-s, --secure-erase` - Instantly and securely erase data on the physical drives. All specified PDs must support SED.

Displaying SED Key Information

To display the current SED key information for all managed SED drives, issue the following command:

```
$ sudo graidctl describe config sed_key
```

Deleting SED Keys

To delete a specific SED key, issue the following command:

```
$ sudo graidctl delete config sed_key [GUID]
```

To delete all SED keys, issue the following command:

```
$ sudo graidctl delete config sed_key all
```

Rotating SED Keys

SupremeRAID™ supports rotating SED keys to enhance security. You can rotate the SED key for individual or multiple drives as needed.

Rotating SED Key for a Specific Drive

To rotate the SED key for a specific physical drive, use the following command:

```
$ sudo graidctl edit pd 0 sed_key [ORIGINAL_KEY] [NEW_KEY]
```

Rotating SED Keys for Multiple Drives

To rotate SED keys for multiple drives at once, use the command:

```
$ sudo graidctl edit pd 0-22 sed_key [ORIGINAL_KEY] [NEW_KEY]
```

Mail Notification Service

SupremeRAID™ offers a mail notification service in Linux that enables users to receive email notifications for monitoring service status. This includes actions like creating or deleting physical drives (PD), drive groups (DG), or virtual drives (VD) and so on.

Setup the Mail Notification Service

To set up mail notification service, issue the following command:

```
$ sudo graid-mgr set notification <Command>
```

Related Commands:

Command	Description
on	Enable notification service
off	Disable notification service
smtp_host	Edit SMTP host
smtp_port	Edit SMTP port
smtp_user	Edit SMTP username
smtp_password	Edit SMTP password
sender_mail	Edit sender mail of notification service

Setup mail notification for admin user

To set up admin user email notification, issue the following command:

```
$ sudo graid-mgr set admin <Command>
```

Related Commands:

Command	Description
email	Set email of user admin
notification	Configuration of notification

To view the configuration of the mail notification

To see the configuration of mail notification, issue the following command:

```
$ sudo graid-mgr show notification
$ sudo graid-mgr show admin
```

Drive Copyback – Controlled Data Migration for Drive Replacement

Drive Copyback feature allows users to manually initiate data migration from one drive to another without affecting the overall Drive Group state. This operation is user-controlled and can be performed for various reasons, such as replacing an aging drive before it reaches its wear limit, preparing for hardware upgrades, or managing storage configurations.

Guidelines for Drive Copyback

To initiate data copy from the source PD (SrcPD) to the destination PD (DstPD), follow these guidelines:

- The drive group state for SrcPD must be **OPTIMAL**.
- The DstPD state must be **UNCONFIGURED_GOOD** and not a hotspare in the drive group. If the DstPD is a hotspare, the -f flag must be used, and the DstPD must be a global hotspare or a hotspare under the SrcPD drive group.
- DstPD and SrcPD must have identical capability (PD type, LBA size, DSM support, Write-uncor support).
- A drive group can only execute one Copyback task at a time. If multiple drive groups are running Copyback, only one drive group will perform the Copyback task.

Starting a Copyback

To start a Copyback, issue the following command:

```
$ sudo graidctl start copyback [SrcPD_ID] [DstPD_ID] [flag]
```


OR

```
$ sudo graidctl start cp [SrcPD_ID] [DstPD_ID] [flag]
```

Related command flags:

Flag	Description
-f, --fallback-to-spare	Use copyback physical drive as a hot spare of the drive group when physical drive failure

You can also log in to the [SupremeRAID™ Management Console](#), then navigate to the RAID management / Drive Group section on the sidebar menu. Select the drive group which you want to perform the Copyback, and click the “Physical Drives” tab. Choose the physical drive, then click the “Actions” button to initiate the Copyback.

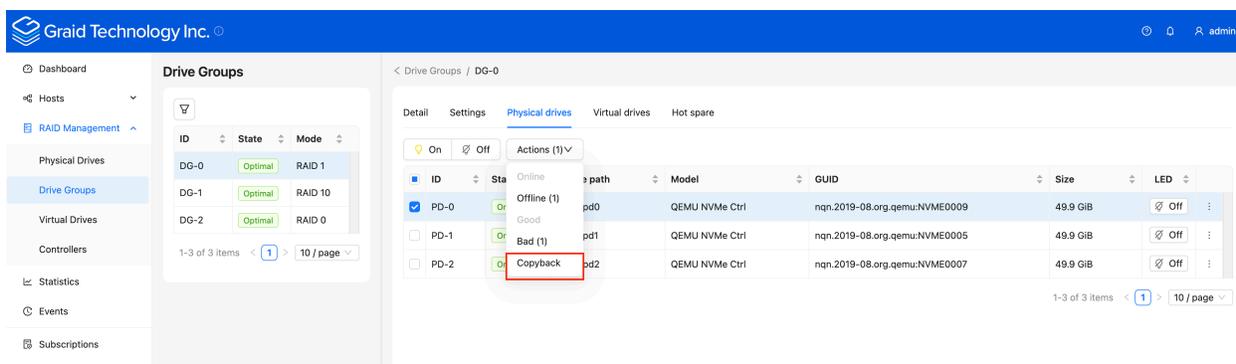

Stopping a Copyback

To stop a Copyback, issue the following command:

```
$ sudo graidctl stop copyback [SrcPD_ID|DstPD_ID]
```

OR

```
$ sudo graidctl stop cp [SrcPD_ID|DstPD_ID]
```

Editing a Copyback Speed

The system's default speed is set to high. To edit the speed of Copyback, issue the following command:

```
$ sudo graidctl edit dg [dg_ID] copyback_speed [low|normal|high|extreme]
```

OR

```
$ sudo graidctl e dg [dg_ID] copyback_speed [low|normal|high|extreme]
```

TROUBLESHOOTING

Sequential Read Performance is Not as Expected on a New Drive Group

Unlike SAS/SATA hard drives, many NVMe SSDs support the de-allocate dataset management command. Using this command, you can reset all data in the NVMe SSD immediately, eliminating the need to synchronize data between physical drives when creating a drive group.

For other SSDs, however, the performance is not as expected when reading unwritten sectors after issuing the de-allocate dataset management command. While this behavior also impacts the performance of the new drive group, it does not affect the applications because they do not read sectors that do not contain data.

To test SupremeRAID™ performance, write the entire virtual drive sequentially using a large block size.

Kernel Log Message "failed to set APST feature (-19)" Appears When Creating Physical Drives

Some NVMe SSD models might display a "failed to set APST feature (-19)" message in the kernel log when creating the physical drive.

When SupremeRAID™ creates the physical drive, the SSD is unbound from the operating system so the SupremeRAID™ can control the SSD. When the APST feature is enabled during the unbinding process, the NVMe driver tries and fails to set the APST state to SSD and the error message is issued. This message is expected and can be ignored. SupremeRAID™ is working normally.

Decoding LED Patterns on the Backplane

You might notice that the HDD/SSD activity indicator blink pattern is different on SupremeRAID™ than on traditional RAID cards.

SupremeRAID™ does not require a buffering or caching mechanism to improve read/write performance as do traditional RAID cards. This feature causes SupremeRAID™ indicators to blink differently than traditional RAID cards.


Received "The arch of the controller and SupremeRAID™ software mismatched" Message When Applying License

To activate the SupremeRAID™ server with your license key, it's essential to install the correct driver version that matches your specific SupremeRAID™ model. If the incorrect version is installed, the following error message appears when you try to activate the SupremeRAID™ server with a license key: Apply license failed: The arch of the controller and SupremeRAID™ software mismatched.

To ascertain which model you installed, use the command `graidctl version`. Issuing this command displays the model information at the end of the string.

```
001 -> SupremeRAID™ SR-1001
000 -> SupremeRAID™ SR-1000
010 -> SupremeRAID™ SR-1010
```

The following figure shows an example of the message, if you receive the error message, uninstall the incorrect driver, and then install the correct one.

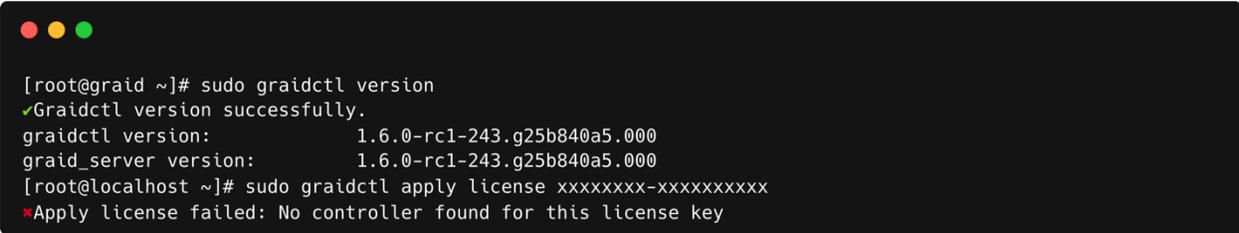

```
[root@graid ~]# sudo graidctl version
✓Graidctl version successfully.
graidctl version:          1.6.0-rc1-243.g25b840a5.000
graid_server version:     1.6.0-rc1-243.g25b840a5.000
[root@localhost ~]# sudo graidctl apply license xxxxxxxx-xxxxxxxxxx
✗Apply license failed: No controller found for this license key
```

Step 1 Stop SupremeRAID™ service. If you have already enabled the graphical management console, please ensure to disable it as well.

```
$ sudo systemctl stop graid
$ sudo systemctl stop graid-mgr.service
```

Step 2 Unload the SupremeRAID™ kernel module.

```
$ sudo rmmod graid_nvidia graid
```

Step 3 Uninstall the package using the command appropriate for your operating system:

- For Centos, Rocky Linux, AlmaLinux, RHEL, openSUSE, and SLES:

```
$ sudo rpm -e graid-sr
```

- For Ubuntu:

```
$ sudo dpkg -r graid-sr
```

Step 4 Confirm that the SupremeRAID™ module is unloaded. The output should be empty.

```
$ sudo lsmod | grep graid
```

Step 5 Confirm that the SupremeRAID™ package is uninstalled using the command appropriate for your operating system, the output should be empty.

- For Centos, Rocky Linux, AlmaLinux, RHEL, openSUSE, and SLES:

```
$ sudo rpm -qa | grep graid
```

- For Ubuntu:


```
$ sudo dpkg -l | grep graid
```

Step 6 Install the correct SupremeRAID™ driver:

A At the Welcome page, select Next and click Enter to view the end-user license agreement.




B In the end-user license agreement, use the spacebar to scroll through the content. When you complete your review, select Next and click Enter to proceed.

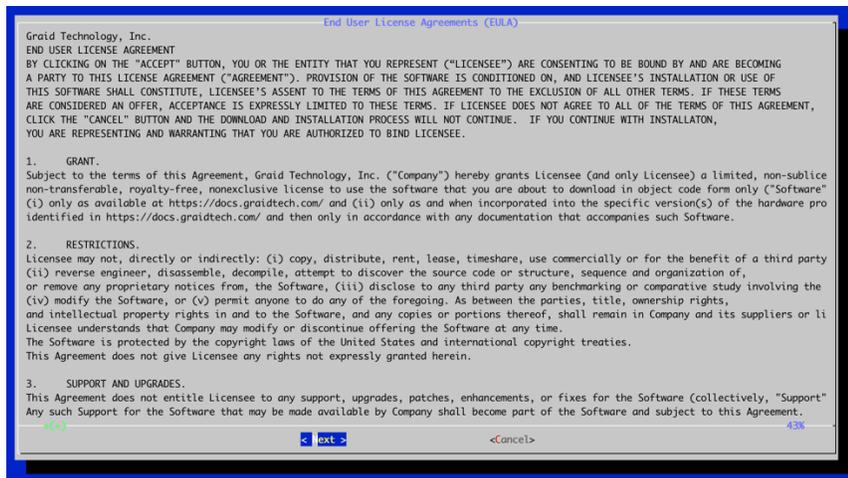

C Type **accept**, click tab, select Next, and click Enter to accept the license agreement.



- D Check the package version and click NEXT.

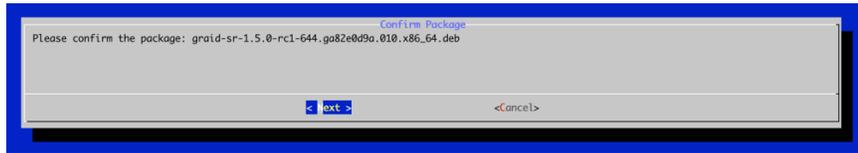

- E To activate the software, apply the SupremeRAID™ license key.

```
$ sudo graidctl apply license [LICENSE_KEY]
```

SupremeRAID™ Service Fail to Start

The SupremeRAID™ service may fail to run if there is insufficient root disk space available. Ensure that you have adequate free space in the root partition for the graid service to operate correctly. Lack of sufficient disk space can cause the graid_service to fail during the enabling process.

SAFETY INFORMATION

English Version

CE Directives Declaration: NVIDIA Corporation hereby declares that this device complies with all material requirements and other relevant provisions of the 2014/30/EU and 2011/65/EU. A copy of the Declaration of Conformity may be obtained directly from NVIDIA GmbH(Bavaria Towers - Blue Tower, Einsteinstrasse 172, D-81677 Munich, Germany)

NVIDIA products are designed to operate safely when installed and used according to the product instructions and general safety practices. The guidelines included in this document explain the potential risks associated with equipment operation and provide important safety practices designed to minimize these risks. By carefully following the information contained in this document, you can protect yourself from hazards and create a safer environment.

This product is designed and tested to meet IEC 60950-1 and IEC 62368-1 Safety Standards for Information Technology Equipment. This also covers the national implementations of IEC 70950-1/62368-1 based safety standards around the world e.g. UL 62368-1. These standards reduce the risk of injury from the following hazards:

- Electric shock: Hazardous voltage levels contained in parts of the product
- Fire: Overload, temperature, material flammability
- Energy: Circuits with high energy levels (240-volt amperes) or potential as burn hazards.
- Heat: Accessible parts of the product at high temperatures.
- Chemical: Chemical fumes and vapors
- Radiation: Noise, ionizing, laser, ultrasonic waves

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This product, as well as its related consumables and spares, complies with the reduction in hazardous substances provisions of the "India E-waste (Management and Handling) Rule 2016". It does not contain lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in

concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for where allowed pursuant to the exemptions set in Schedule 2 of the Rule.

Retain and follow all product safety and operating instructions.

Always refer to the documentation supplied with your equipment. Observe all warnings on the product and in the operating instructions found on the product's User Guide.



This is a recycling symbol indicating that the product/battery cannot be disposed of in the trash and must be recycled according to the regulations and/or ordinances of the local community.



Hot surface warning. Contact may cause burns. Allow to cool before servicing.

Chinese Version

NVIDIA 产品在设计时充分考虑到操作安全性，可根据产品说明和常规安全做法进行安全安装和使用。本档中包含的准则解释了设备操作所涉及的危险，并提供了最大限度降低这些危险的重要安全做法。请详细阅读本档中的信息并按要求操作，这样可保护您免遭受为显并创建一个更加安全的环境。

本产品按照信息技术设备安全标准 IEC 60950-1 和 IEC 62368-1 进行设计，并且经测试表明符合这些设备。此处所述标准也包括全球各国/地区实施的基于 IEC 60950-1/62368-1 的安全标准，例如 UL 62328-1。这些标准降低了因以下危险受伤的险：

- 电击：部分产品中包含的危险电压引起火灾；超载、温、可燃性材料
- 机械：锋利的边缘、活动部件、不稳定性
- 电源：电压电路（240 伏安）或潜在的烧伤险
- 温：产品的可触及部分存在温化学：化学烟雾和蒸汽
- 辐射：噪声、电离、激光、超声波

请牢记并遵守所有产品安全和操作说明。请务必参考您的设备随附的说明档。请注意产品上以及产品指南的操作说明中列

的所有警告。



这是普通的回收标志，表示产品/电池不能以丢弃的方式处置，必须按照本地社区的法规和/或条例回收。



警告！表面。接触可能导致灼伤。请再冷却后再使用。



产品中有害物质的名称及含量根据中国《电器电子产品有害物质限制使用管理办法》

内存	0	0	0	0	0	0
结构件以及风扇	x	0	0	0	0	0
线材/连接器	x	0	0	0	0	0
焊接金属	0	0	0	0	0	0
助焊剂，锡膏，标签及耗材	0	0	0	0	0	0
<p>本表格依据SJ/T 11364-2014的规定编制</p> <p>0：表示该有害物质在该部件所有的均质材料中的含量均在GB/T 26572 标准规定的限量要求以下。</p> <p>X：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572标准规定的限量要求。</p> <p>此表中所有名称中含“X”的部件均符合RoHS立法。</p> <p>注：环保使用期限的参考标识取决于产品正常工作的温度和湿度等条件</p>						

Chinese Version (TC)

在遵照产品说明与一般安全做法进行安装与使用产品的情况下，NVIDIA 产品可安全地操作。本件所列的准则说明与设备操作相关的潜在风险，同时也提供将这些风险降到最低的重要安全做法。谨慎遵守本件中的资讯，您就可以避免危险并创造更安全的環境。

此產品係根據 Safety Standards for Information Technology Equipment(資訊技術設備安全標準) IEC 60950-1 和 IEC 62368-1 進

設計與測試。同時也涵蓋全世界國家以 IEC 60950-1/62368-1 為根據的安全標準，例如 UL 62368-1。這些標準可降低下列危險造成的傷害的風險：

- 觸電危險：本產品部分零件的電壓等級具危險性
- 火災危險：超載、溫度、材料可燃性
- 機械危險：尖銳邊緣、移動零件、不穩定性
- 電燒危險：電路電壓(240 電壓) 或具有潛在起火燃燒熱能危險：產品表面可能達到極高溫度，注意燙傷危機
- 化學危險：化學異味氣體與蒸氣
- 輻射危險：噪音、游離輻射、雷射、超波

請保留並遵守所有產品安全與操作說明的相關規定。請務必參閱設備隨附的附件。請遵守產品上，和產品使用者只能中操作說明裡的警告規定。



此國際回收標誌表示此產品/電池不能棄置於垃圾桶中，必須根據當地社區的規範和/或法令回收。



表示警告。接觸時可能燙傷。使用前請先降溫。

限用物質含有情況標示聲明書						
設備名稱：繪圖卡						
單元	限用物質及其化學符號					
	鉛	汞	鎘	六價鉻	多溴聯苯	多溴二苯醚
PCB板	0	0	0	0	0	0
結構件以及風扇	-	0	0	0	0	0
連結器	-	0	0	0	0	0
被動電子零件	-	0	0	0	0	0
主動電子零件	-	0	0	0	0	0
內存	0	0	0	0	0	0
線材	0	0	0	0	0	0
焊接金屬	0	0	0	0	0	0
助焊劑、錫膏、標籤及耗材	0	0	0	0	0	0

備考1：0：係指該限用物質未超出百分比含量基準值

備考2：-：係指該限用物質為排除項目。

此表中所有名稱含“-”的部件均符合歐盟RoHS立法。

注：環保使用期限的參考標識取決於產品正常工作的溫度和濕度等條件

ATTACHMENTS

Events for SupremeRAID™

Category	Severity	Description
Physical Drive	Warning	Physical Drive <PD_ID> state has transitioned from <STATE_OLD> to unconfigured bad.
	Critical	Physical Drive <PD_ID> state has transitioned from <OLD_STATE> to failed.
	Warning	Physical Drive <PD_ID> state has transitioned from <OLD_STATE> to offline.
	Critical	Physical Drive <PD_ID> state has transitioned from <OLD_STATE> to missing.
	Info	Physical Drive <PD_ID> state has transitioned from <OLD_STATE> to online.
	Info	Physical Drive <PD_ID> state has transitioned from <OLD_STATE> to rebuild.
	Info	Physical Drive <PD_ID> state has transitioned from <OLD_STATE> to unconfigured good.
	Info	Physical Drive <PD_ID> has been successfully created.
	Info	Physical Drive <PD_ID> has been deleted.
	Info	Physical Drive <PD_ID> has been hot-plugged.
	Warning	Physical Drive <PD_ID> has been hot-removed.
	Warning	The temperature of Physical Drive <PD_ID> is currently <CURRENT_TEMP> degrees, which exceeds the Warning threshold of <THRESHOLD_TEMP> degrees. Critical Warning error code: ERROR_CODE.
	Critical	The temperature of Physical Drive <PD_ID> is currently <CURRENT_TEMP> degrees, which exceeds the Critical threshold of <THRESHOLD_TEMP> degrees. Critical Warning error code: ERROR_CODE.
	Critical	The available spare capacity <AVAIL_SPARE> of Physical Drive <PD_ID> has fallen below the threshold <SPARE_THRESHOLD>. Critical Warning error code: <ERROR_CODE>.
Critical	The NVM subsystem reliability of Physical Drive <PD_ID> has been degraded due to significant media related errors or any internal error that degrades NVM subsystem reliability. Critical Warning error code: <ERROR_CODE>.	

	Critical	All of the media of Physical Drive <PD_ID> has been placed in read only mode. Critical Warning error code: <ERROR_CODE>.
	Critical	The volatile memory backup device of Physical Drive <PD_ID> has failed. Critical Warning error code: <ERROR_CODE>.
	Critical	The Persistent Memory Region of Physical Drive <PD_ID> has become read-only or unreliable. Critical Warning error code: <ERROR_CODE>.
	Warning	Physical Drive <PD_ID> is currently experiencing a wearout level of WEAROUT, surpassing the Warning threshold of <THRESHOLD_WEAROUT>.
	Critical	Physical Drive <PD_ID> is currently experiencing a wearout level of WEAROUT, surpassing the Critical threshold of <THRESHOLD_WEAROUT>.
Drive Group	Fatal	Drive Group <DG_ID> state has transitioned from <OLD_STATE> to failed.
	Critical	Drive Group <DG_ID> state has transitioned from <OLD_STATE> to offline.
	Critical	Drive Group <DG_ID> state has transitioned from <OLD_STATE> to degraded.
	Warning	Drive Group <DG_ID> state has transitioned from <OLD_STATE> to rescue.
	Warning	Drive Group <DG_ID> state has transitioned from <OLD_STATE> to partially degraded.
	Info	Drive Group <DG_ID> state has transitioned from <OLD_STATE> to optimal.
	Info	Drive Group <DG_ID> state has transitioned from <OLD_STATE> to recovery.
	Info	Drive Group <DG_ID> state has transitioned from <OLD_STATE> to init.
	Info	Drive Group <DG_ID> state has transitioned from <OLD_STATE> to resync.
	Info	Drive Group <DG_ID> has been successfully created.
	Info	Drive Group <DG_ID> has been deleted.
	Info	Consistency Check for Drive Group <DG_ID> has been manually aborted.
	Info	Consistency Check for Drive Group <DG_ID> has been aborted due to the deletion of the Drive Group.
	Info	Consistency Check for Drive Group <DG_ID> was aborted due to the Drive Group migrating from Controller <CX_OLD> to <CX_NEW>.
Info	Consistency Check for Drive Group <DG_ID> has been aborted due to the Drive Group's state transitioning to <DG_STATE>.	

	Info	Manual Consistency Check for Drive Group <DG_ID> has been completed.
	Info	Scheduled Consistency Check for Drive Group <DG_ID> has completed.
	Info	Manual Consistency Check for Drive Group <DG_ID> has started.
	Info	Scheduled Consistency Check for Drive Group <DG_ID> has started.
	Info	Inconsistency in Drive Group <DG_ID> has been fixed at: Drive Group block range: <DG_INTERS>.
	Critical	Inconsistency detected in Drive Group <DG_ID> at: Drive Group block range: <DG_INTERS>.
	Critical	Consistency Check for Drive Group <DG_ID> has been aborted due to the 'stop_on_error' policy.
	Critical	Consistency Check for Drive Group <DG_ID> has been aborted due to numerous inconsistencies found and fixed.
	Info	Journal Replay for Drive Group <DG_ID> has started.
	Info	Journal Replay for Drive Group <DG_ID> has been completed. Entry replayed <REPLAYNR>.
	Critical	Journal Replay for Drive Group <DG_ID> has been waiting Physical Drive <PD_ID> to be active.
	Critical	Journal Replay for Drive Group <DG_ID> has been aborted due to inconsistency detected on journal.
	Info	Inconsistency for Virtual Drive <VD_ID> within Drive Group <DG_ID> has been fixed at: Virtual Drive block range: <VD_OFFSETS>.
	Critical	Inconsistency found in Virtual Drive VD_ID of Drive Group <DG_ID> at: Virtual Drive block range: <VD_OFFSETS>.
Virtual Drive	Info	Virtual Drive VD_ID for Drive Group <DG_ID> has been created successfully.
	Info	Virtual Drive VD_ID for Drive Group <DG_ID> has been deleted.
	Info	Stripe cache for Virtual Drive <VD_ID> on Drive Group <DG_ID> has been deleted.
	Info	Stripe cache for Virtual Drive <VD_ID> on Drive Group <DG_ID> has been created successfully.
Controller	Warning	The temperature of Controller <CX_ID> is currently <CURRENT_TEMP> degrees, which exceeds the GPU threshold of <THRESHOLD_TEMP> degrees.

Warning	The temperature of Controller <CX_ID> is currently <CURRENT_TEMP> degrees, which exceeds the GPU memory threshold of <THRESHOLD_TEMP> degrees.
Warning	The temperature of Controller <CX_ID> is currently <CURRENT_TEMP> degrees, it will cause controller slowdown.
Critical	The temperature of Controller <CX_ID> is currently <CURRENT_TEMP> degrees, it will cause controller shutdown.
